



APPLICATOR PARTS LIST				TYPE		SIDEFEED		AMPLIVAR THRU SPLICE		CRIMPING DATA			TERMINALS	
NO.	DESCRIPTION	REQ.	PART NO.	NO.	DESCRIPTION	REQ.	PART NO.	WIRE SIZE	CRIMP HEIGHT	CRIMP WIRE	SIZE	TYPE	FEED	TERMINALS
1	▲ WIRE CRIMPER	1	452127-5	42	PLATE, FEED	1	452117-2							62194
2	▲ INS. CRIMPER	-	-	43	-	-	-							-
3	▲ ANVIL	1	551379-6	44	SLIDE, SHEAR	1	452112-1							-
4	ANVIL SPACER	-	-	45	SPRING, COMP.	1	24017-3							-
5	▲ SHEAR BLADE	1	460663-2	46	PLATE, RETAINER	1	463215-2							-
6	▲ REAR SHEAR PLATE	1	452129-1	47	-	-	-							-
7	SHEAR BLADE SPACER	-	-	48	-	-	-							-
8	▲ FRONT SHEAR PLATE	-	-	49	-	-	-							-
9	REAR ANVIL SPACER PL	-	-	50	PLATE, GUIDE RAIL	1	452118-1							-
10	FRONT ANVIL SPACER PL	-	-	51	RAIL, GUIDE	1	452119-2							-
11	▲ TOOL SPACER	1	684744-1	52	SPRING, COMP.	3	1-22278-2							-
12	CRIMP SPACER	-	-	53	COVER, GUIDE RAIL	1	452120-1							-
13	FRONT STRIP GUIDE	-	-	54	SPACER, STRIP GUIDE	1	452122-1							-
14	REAR STRIP GUIDE	1	452121-1	55	PLATE, SPACER MOUNTING	1	452123-1							-
15	RAM	-	-	56	-	-	-							-
16	TOOL HOLDER	-	-	57	WASHER	2	371178							-
17	ADJ. CRIMP MOUNT	-	-	58	WASHER	1	551403-1							-
18	ADJ. BLOCK	-	-	59	-	-	-							-
19	APPLICATOR MOUNT ASSY.	-	-	60	-	-	-							-
20	BASE PLATE	1	452110-1	61	-	-	-							-
21	BASE BLOCK	1	452111-1	62	-	-	-							-
22	STRIP GUIDE PLATE	-	-	63	-	-	-							-
23	ANVIL HOLDER	-	-	64	-	-	-							-
24	AUX. ANVIL HOLDER	-	-	65	TENSION ADJ. PLATE	1	374999							-
25	▲ STRIPPER & WIRE STOP	1	689137-2	MISCELLANEOUS										-
26	STRIPPER MOUNT	-	-	66	AIR FEED ASSEMBLY	1	690021-1							-
27	RETAINER PLATE	-	-	67	LUBRICATOR ASSEMBLY	1	465184-2							-
28	STRIPPER MOUNT BRACKET	-	-	68	TERMINAL LUBRICANT	REF	852931-2							-
29	STRIPPER BUSHING	-	-	69	SPACER, AIR FEED	1	460590-1							-
30	STOCK DRAG	1	387650	70	-	-	-							-
31	STOCK DRAG HANDLE	-	-	71	SCREW, DRIVE #2 X .19	2	21017-2							-
32	STOCK DRAG STUD	-	-	72	PLATE, IDENTIFICATION	1	464249-1							-
33	STOCK DRAG SPRING	1	373469											-
34	STOCK DRAG ADJ. SCREW	-	-											-
35	FEED FINGER HOLDER	1	386942											-
36	FEED FINGER	1	473739-1											-
37	▲ FEED FINGER TIP	1	551392-1											-
LOC A	38	FEED FINGER SPACER	-	-										-
	39	BASE CASTING	1	565147-2		N	REDRAWN W/CHANGES							-
DIST	40	GUARD ASSEMBLY	1	460374-2		-	ECN A-276190							-
4	41	-	-	-	P	F	LTR	REVISION RECORD	APP	DATE				-

TO APPLY TERMINAL

WIRE SIZE CRIMP HEIGHT

CRIMP SIZE TYPE FEED

WIRE .070 F

INSUL. - - .330

SLEEVED - -

INSULATION RANGE WIRE RANGE

- 300-1600 CMA

EXPLODED VIEW

A-6035-3, -4

REMARKS:

▲ RECOMMENDED SPARE PARTS

▲ USE ALIGNMENT GAGE

3. MUST USE CUSTOMER WIRE FOR SET-UP

THIS APPLICATOR IS TO BE USED ON

AMP-O-LECTRIC 565435-4

SET-UP GAGE 680229

SERIAL NO. DATE SHIPPED

CUSTOMER NAME AND ADDRESS

DR. 11-80 C. HOYER

CHK'D

APP'D

LOG NO 566157-2 SHEET 1 OF 2 REV N

APPLICATOR PARTS LIST					TYPE HARDWARE		AMP Incorporated Harrisburg, PA 17105-3808				
NO.	DESCRIPTION	SIZE	LGTH.	REQ	PART NO.	NO.	DESCRIPTION	SIZE	LGTH.	REQ	PART NO.
101	SCREW, SHC - SHEAR PLATE	#4-40	.25	2	1-21000-3	-	-	-	-	-	-
102	SCREW, SHC - GUIDE RAIL	#4-40	.25	2	1-21000-3	144	PIN, ROLL -GUIDE RAIL	Ø .062	.25	2	21028-2
103	SCREW, SHC - STRIP SPACER	#4-40	.25	2	1-21000-3	-	-	-	-	-	-
104	SCREW, SHC - SHEAR BLADE	#6-32	.38	2	1-21000-9	-	-	-	-	-	-
105	SCREW, SHC - STRIPPER	#6-32	.38	2	1-21000-9	-	-	-	-	-	-
106	SCREW, SHC - SPACER MOUNT	#8-32	.38	2	2-21000-6	-	-	-	-	-	-
107	SCREW, SHC - GUIDE RAIL	#8-32	.38	2	2-21000-6	-	-	-	-	-	-
108	SCREW, SHC - GUARD	#8-32	.38	2	2-21000-6	-	-	-	-	-	-
109	SCREW, SHC - RET. PLATE	#8-32	.62	4	2-21000-8	-	-	-	-	-	-
110	SCREW, SHC -TENSION ADJ PL	#8-32	.25	1	2-21000-5	-	-	-	-	-	-
111	SCREW, SHC -STRIP GUIDE	#10-32	.38	2	3-21000-4	-	-	-	-	-	-
112	SCREW, BHSC -ANVIL	#10-32	.38	2	2-21002-6	-	-	-	-	-	-
113	SCREW, SHC -FEED PLATE	#10-32	.50	2	3-21000-5	-	-	-	-	-	-
114	SCREW, SHC -FEED FINGER	#10-32	.50	1	3-21000-5	-	-	-	-	-	-
115	SCREW, SHC -DRAG	#10-32	2.00	1	4-21000-3	-	-	-	-	-	-
116	SCREW, SHC -MTG BLOCK	1/4-20	.50	3	21001-2	-	-	-	-	-	-
117	SCREW, SHC -CRIMPER	1/4-20	.62	2	21001-4	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
119	SCREW, SHC -BASE PLATE	5/16-18	1.25	1	2-21001-1	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
121	SCREW, BHSC -WIRE GUIDE	#4-40	.25	2	1-21002-3	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
125	SCREW, S.S. -FEED FINGER	#5-40	.12	1	8-21006-7	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
129	SCREW, HEX HD -BASE PLATE	3/8-16	1.00	2	3-21015-1	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
134	NUT, HEX HD -DRAG	#10-32	-	1	21068-7	-	-	-	-	-	-
135	NUT, SELF LOCKING -DRAG	#10-32	-	1	21126-3	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
-	-	-	-	-	-	-	-	-	-	-	-
138	WASHER, FLAT -TENS. ADJ PL	#8	-	1	21055-6	-	-	-	-	-	-
LOC 139	WASHER, FLAT -GUARD	#8	-	2	21055-6	-	-	-	-	-	-
A 140	WASHER, FLAT -DRAG	#10	-	1	21055-7	-	-	-	-	-	-
0157	-	-	-	-	-	-	-	-	-	-	-
4	-	-	-	-	-	-	-	-	-	-	-

NOTES:

6

A	LOG NO	566157-2	SHEET	REV
	2 OF 2		N	