



SGX 5150 QUICK START GUIDE

IoT Device Gateway

WHAT'S IN THE BOX



SGX 5150

 


2 External Antennas



USB Cable Type A to C

Product Views

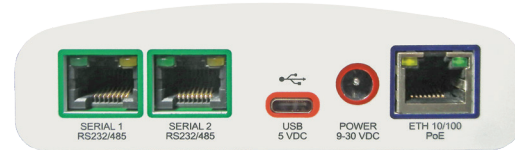

*Model shown may not reflect actual product purchased.

Thank You for Choosing Lantronix®



SGX 5150 QUICK START GUIDE

IoT Device Gateway

Wireless QuickConnect

1. Attach the two antennas and insert the USB cable to power up the gateway.
2. From your Wi-Fi device connect to SSID SGX5150_*, where * is the gateway 12-digit serial number.
3. From your browser, connect to 192.168.0.1. The factory default username is “admin” and the factory default password is the last 8 characters of the Device ID (for devices manufactured after January 1, 2020) or “PASS” (for all older devices).
4. Select **Wireless QuickConnect**, choose the appropriate network name for the gateway to connect with, and follow the prompts for your wireless network required security parameters.
5. Click **Apply** to save and complete the wireless network setup.

For security purposes, please change the admin password during initial setup.

IMPORTANT NOTE FOR SGX'S WITH LAN CONNECTIONS AND POE POWERING OPTION

Models SGX 35xx and SGX51xx are only intended for installation in Environment A as defined in IEEE 802.3af. All interconnected equipment must be contained within the same building, including the interconnected equipment associated with LAN connections.

Registration

To register your gateway scan the QR code, or please visit www.lantronix.com/product-registration.

Technical Support

For the latest documentation, software, tutorials and all technical support, please visit <http://www.lantronix.com/support>.

