

Data sheet | Item number: 210-836

Push-button marker; for frames, to be snapped in or glued in place; 27 x 17.5 mm; silver-colored

www.wago.com/210-836



Data

Technical data

Suitable	for Siemens push-button frame
Marking method	Thermal transfer
Marking	plain
Delivery form	Roll
Delivery form configuration	350 markers/reel; 1 line
Printing device	Smart Printer (Thermal Transfer Printer)

Physical data

Height	27 mm
Width	17.5 mm
Depth	0.65 mm

Subject to changes. Please also observe the further product documentation!

WAGO GmbH & Co. KG
Hansastr. 27
32423 Minden
Phone: +49571 887-0 | Fax: +49571 887-169
Email: info.de@wago.com | Web: www.wago.com

Do you have any questions about our products?
We are always happy to take your call at +49 (571) 887-44222.

Marking surface	27 x 17.5 mm
-----------------	--------------

Mechanical Data

Mounting type	Snap-in or adhesive mounting
Smear resistance	in conjunction with 258-5005 Ink Ribbon

Material Data

Color	silver-colored
Material	Polyester
UV resistance	EN 60068-2-5:2010 Procedure B
Adhesive information	Acrylic; permanent; foamed
Halogen-free	Yes
Weight	110 g

Environmental requirements

Ambient temperature (storage)	≥+22 °C
Relative humidity	40 ... 50 %

Commercial data

ETIM 8.0	EC001288
ETIM 7.0	EC001288
PU (SPU)	1 pcs
Packaging type	bag
Country of origin	DK
GTIN	4055143965422
Customs tariff number	39191080888

Environmental Product Compliance

RoHS Compliance Status	Compliant, No Exemption
------------------------	-------------------------

Required accessories

Cover

Cover	
-------	--



Item no.: 210-837

Cover; for frames, snap-in type, 27 x 17.5 mm; halogen-free; transparent

www.wago.com/210-837

Subject to changes. Please also observe the further product documentation!

Downloads

Documentation

Operating Instructions

210-852 Information on handling print material	1	pdf	Download
	2020 Aug 28	1.0 MB	

Environmental Product Compliance

Compliance Search

Environmental Product Compliance 210-836	URL	Download
Push-button marker; for frames, to be snapped in or glued in place; 27 x 17.5 mm; silver-colored		

Installation Notes

 
Stick on frame



Remove the push-button label from the carrier film.




Stick the push-button label onto the push-button frame.

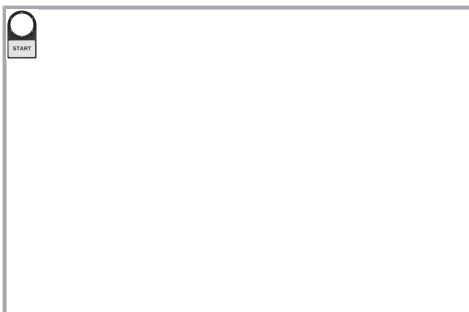

WAGO's push-button label is attached to the push-button frame. A cover cannot be applied.

Subject to changes. Please also observe the further product documentation!

 Snap into frame

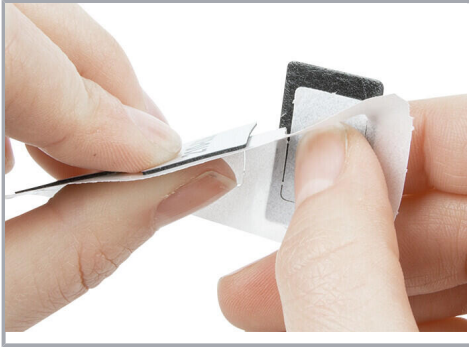


Remove the push-button label from the carrier film. Press and hold the pre-punched carrier film on the back, on to the push-button frame.



Only the area of the push-button label outside the remaining carrier film is adhesive.



 Optional: A cover may also be installed on a push-button frame equipped with latches.

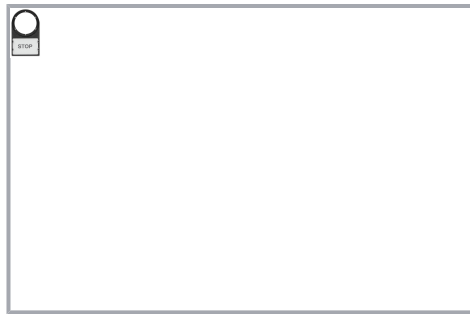

Push-button label and cover are snapped on to the push-button frame.

Subject to changes. Please also observe the further product documentation!