

# TPS563900 Buck Converter Evaluation Module User's Guide



## ABSTRACT

This user's guide contains information for the TPS563900EVM-574 evaluation module (PWR574) as well as for the TPS563900 dc/dc converter. Also included are the performance specifications, the schematic, and the bill of materials for the TPS563900EVM-574.

## Table of Contents

<b>1 Introduction</b> .....	<b>3</b>
<b>2 Test Setup and Results</b> .....	<b>5</b>
<b>3 Board Layout</b> .....	<b>20</b>
<b>4 Schematic and Bill of Materials</b> .....	<b>22</b>
<b>5 Revision History</b> .....	<b>24</b>

## List of Figures

Figure 1-1. TPS563900 GUI_ver_0_0_0_2 Screen.....	4
Figure 2-1. TPS563900EVM-574 $V_{OUT1}$ CCM Efficiency.....	6
Figure 2-2. TPS563900EVM-574 $V_{OUT2}$ CCM Efficiency.....	7
Figure 2-3. TPS563900EVM-574 $V_{OUT1}$ CCM Low Current Efficiency.....	8
Figure 2-4. TPS563900EVM-574 $V_{OUT2}$ CCM Low Current Efficiency.....	8
Figure 2-5. TPS563900EVM-574 $V_{OUT1}$ SKIP Mode Efficiency.....	9
Figure 2-6. TPS563900EVM-574 $V_{OUT2}$ SKIP Mode Efficiency.....	9
Figure 2-7. TPS563900EVM-574 $V_{OUT1}$ SKIP Mode Low Current Efficiency.....	10
Figure 2-8. TPS563900EVM-574 $V_{OUT2}$ SKIP Mode Low Current Efficiency.....	10
Figure 2-9. TPS563900EVM-574 $V_{OUT1}$ CCM Load Regulation.....	11
Figure 2-10. TPS563900EVM-574 $V_{OUT2}$ CCM Load Regulation.....	11
Figure 2-11. TPS563900EVM-574 $V_{OUT1}$ SKIP Mode Load Regulation.....	12
Figure 2-12. TPS563900EVM-574 $V_{OUT2}$ SKIP Mode Load Regulation.....	12
Figure 2-13. TPS563900EVM-574 $V_{OUT1}$ CCM Line Regulation.....	13
Figure 2-14. TPS563900EVM-574 $V_{OUT2}$ CCM Line Regulation.....	13
Figure 2-15. TPS563900EVM-574 $V_{OUT1}$ SKIP Mode Line Regulation.....	14
Figure 2-16. TPS563900EVM-574 $V_{OUT2}$ SKIP Mode Line Regulation.....	14
Figure 2-17. TPS563900EVM-574 $V_{OUT1}$ Transient Response.....	15
Figure 2-18. TPS563900EVM-574 $V_{OUT2}$ Transient Response.....	15
Figure 2-19. TPS563900EVM-574 Loop Response, $V_{OUT1}$ Set by Resistor Divider.....	16
Figure 2-20. TPS563900EVM-574 Loop Response, $V_{OUT2}$ Set by Resistor Divider.....	16
Figure 2-21. TPS563900EVM-574 Output Ripple for Light Loads in SKIP Mode.....	17
Figure 2-22. TPS563900EVM-574 Output Ripple for No Load in CCM.....	17
Figure 2-23. TPS563900EVM-574 Output Ripple for Full Load CCM.....	18
Figure 2-24. TPS563900EVM-574 Start Up.....	19
Figure 2-25. TPS563900EVM-574 Shut Down.....	19
Figure 3-1. TPS563900EVM-574 Top-Side Assembly.....	20
Figure 3-2. TPS563900EVM-574 Top-Side Layout.....	20
Figure 3-3. TPS563900EVM-574 Internal Layer-1 Layout.....	20
Figure 3-4. TPS563900EVM-574 Internal Layer-2 Layout.....	20
Figure 3-5. TPS563900EVM-574 Bottom-Side Layout.....	21
Figure 4-1. TPS563900EVM-574 Schematic.....	22

## List of Tables

Table 1-1. Input Voltage and Output Current Summary.....	3
Table 1-2. TPS563900EVM-574 Performance Specification Summary.....	3
Table 2-1. EVM Connectors and Test Points.....	5
Table 4-1. TPS563900EVM-574 Bill of Materials.....	23

## Trademarks

All trademarks are the property of their respective owners.

## 1 Introduction

### 1.1 Background

The TPS563900 is a dual output current mode control dc/dc converter with output rated for up to 3.5 A. The input voltage range is 4.5 V to 18 V. Rated input voltage and output current range for the evaluation module are given in [Table 1-1](#). The TPS563900 features I<sup>2</sup>C VID control. The output voltage for each channel can be set within the range of 0.68 V to 1.95 V. This evaluation module is designed to demonstrate the small printed-circuit-board (PCB) areas that may be achieved when designing with the TPS563900 regulator. The switching frequency is externally set at a nominal 500 kHz. The high-side and low-side MOSFETs are incorporated inside the TPS563900 package along with the gate drive circuitry. The low drain-to-source on-resistance of the MOSFET allows the TPS563900 to achieve high efficiencies and helps keep the junction temperature low at high output currents. The compensation components are external to the integrated circuit (IC), and an external divider allows for an adjustable output voltage. Additionally, the TPS563900 provides adjustable slow start and undervoltage lockout inputs. The absolute maximum input voltage is 20 V for the TPS563900EVM-574.

**Table 1-1. Input Voltage and Output Current Summary**

EVM	Input Voltage Range	Output Current Range
TPS563900EVM-574	V <sub>IN</sub> = 4.5 V to 18 V	V <sub>OUT1</sub> = V <sub>OUT2</sub> = 0 A to 3.5 A

### 1.2 Performance Specification Summary

A summary of the TPS563900EVM-574 performance specifications is provided in [Table 1-2](#). Specifications are given for an input voltage of V<sub>IN</sub> = 12 V and an output voltage of 1.0 V for V<sub>OUT1</sub> and 1.1 V for V<sub>OUT2</sub>, unless otherwise specified. The TPS563900EVM-574 is designed and tested for V<sub>IN</sub> = 4.5 V to 18 V with the VIN and PVIN pins connect together. The ambient temperature is 25°C for all measurements, unless otherwise noted.

**Table 1-2. TPS563900EVM-574 Performance Specification Summary**

Specification	Test Conditions	MIN	TYP	MAX	Unit
V <sub>IN</sub> voltage range (PVIN = VIN)		4.5	12	18	V
V <sub>IN</sub> start voltage (internal UVLO)			2.12		V
V <sub>IN</sub> stop voltage (internal UVLO)			1.74		V
Output voltage set point, V <sub>OUT1</sub>			1.0		V
Output current range, V <sub>OUT1</sub>	V <sub>IN</sub> = 4.5 V to 18 V	0		3.5	A
Output voltage set point, V <sub>OUT2</sub>			1.1		
Output current range, V <sub>OUT2</sub>	V <sub>IN</sub> = 4.5 V to 18 V	0		3.5	
Line regulation, V <sub>OUT1</sub> and V <sub>OUT2</sub>	I <sub>O</sub> = 1.75 A, V <sub>IN</sub> = 4.5 V to 18 V		±0.02		%
Load regulation, V <sub>OUT1</sub> and V <sub>OUT2</sub>	V <sub>IN</sub> = 5 V, I <sub>O</sub> = 0 A to 3.5 A		±0.35		%
Load transient response, V <sub>OUT1</sub> and V <sub>OUT2</sub>	I <sub>O</sub> = 0.5 A to 2.5 A	Voltage change		-40	mV
		Recovery time		100	µs
	I <sub>O</sub> = 2.5 A to 0.5 A	Voltage change		40	mV
		Recovery time		100	µs
Output ripple voltage, V <sub>OUT1</sub> and V <sub>OUT2</sub>	I <sub>O</sub> = 3.5 A		10		mVPP
Output rise time, V <sub>OUT1</sub> and V <sub>OUT2</sub>			1		ms
Operating frequency			500		kHz

### 1.3 Modifications

These evaluation modules are designed to provide access to the features of the TPS563900. Some modifications can be made to this module.

#### 1.3.1 Output Voltage Setpoint

The output voltage of the EVM is set either externally using a voltage divider or internally using the integrated I<sup>2</sup>C interface. The external adjustment of the output voltage for V<sub>OUT1</sub> is set by the resistor divider network of R10 and R11. The external adjustment of the output voltage for V<sub>OUT2</sub> is set by the resistor divider network of R16 and R17. R10 and R16 are fixed at 40.2 kΩ. To change the output voltage of V<sub>OUT1</sub> or V<sub>OUT2</sub>, it is necessary to change the value of resistor R11 or R17. Changing the value of R11 or R17 can change the output voltage


in the range of 0.68 V to 1.95 V. The value of R11 or R17 for a specific output voltage can be calculated using [Equation 1](#) or [Equation 2](#).

$$R11 = \frac{R10 \times 0.6V}{V_{OUT} - 0.6V} \quad (1)$$

or

$$R17 = \frac{R16 \times 0.6V}{V_{OUT} - 0.6V} \quad (2)$$

The output voltage can also be set using the optional VID control using the I<sup>2</sup>C interface. The EVM is designed so that the J2 connector is compatible with the HPA172 USB Interface Adapter. Using that control and TPS563900 GUI\_ver\_0\_0\_0\_2 software allows the output voltage to be programmed to any of 128 preset voltages from 0.68 V to 1.95 V. JP2-2 and JP2-3 should be covered to select the default address. JP3 should be open to allow the I<sup>2</sup>C pull up to be supplied from the USB adapter, available from [www.ti.com/tool/usb-to-gpio](http://www.ti.com/tool/usb-to-gpio). The USB adapter is also available from the [TI eStore](#). See the TPS563900 datasheet ([SLVSCC7](#)) for a complete description of the available codes. With the software running and the cable attached, run the GUI interface software ([SLVC558](#)). [Figure 1-1](#) shows the GUI interface.

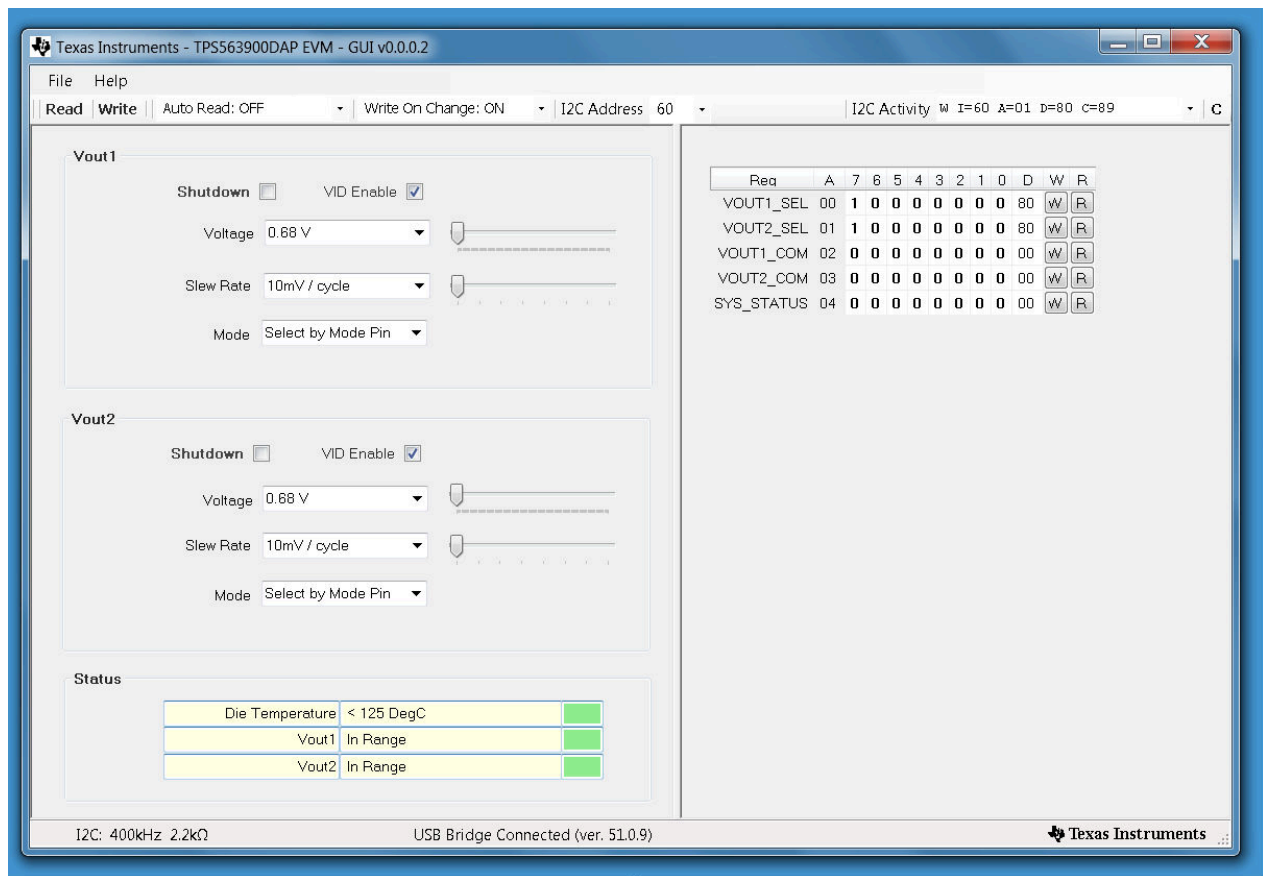

**Figure 1-1. TPS563900 GUI\_ver\_0\_0\_0\_2 Screen**

To change the output voltages, ensure that the VID Enable check boxes are checked. The voltages can be interactively changed using the slide controls when "Write On Change: ON" is active. See the TPS563900 datasheet for further details.

### 1.3.2 Slow-Start Time

The slow-start time can be adjusted by changing the value of C7 or C8 for V<sub>OUT1</sub> or V<sub>OUT2</sub>. Use [Equation 3](#) or [Equation 4](#) to calculate the required value of C7 or C8 for desired slow-start times.

$$C7(\text{nF}) = \frac{T_{ss}(\text{ms}) \times 6 \mu\text{A}}{0.6 \text{ V}} \quad (3)$$

or

$$C8(\text{nF}) = \frac{T_{ss}(\text{ms}) \times 6 \mu\text{A}}{0.6 \text{ V}} \quad (4)$$

The EVM is set for a slow-start time of 1 ms using  $C7 = C8 = 10 \text{ nF}$ .

### 1.3.3 Adjustable UVLO

The undervoltage lockout (UVLO) can be adjusted externally using R3 and R4 or R5 and R6 for  $V_{OUT1}$  or  $V_{OUT2}$ . Use Equation 5 and Equation 6 to calculate required resistor values for different start voltages.

$$R3 = \frac{V_{START} \left( \frac{V_{ENFALLING}}{V_{ENRISING}} \right) - V_{STOP}}{I_p \left( 1 - \frac{V_{ENFALLING}}{V_{ENRISING}} \right) + I_h} \quad (5)$$

or

$$R5 = \frac{V_{START} \left( \frac{V_{ENFALLING}}{V_{ENRISING}} \right) - V_{STOP}}{I_p \left( 1 - \frac{V_{ENFALLING}}{V_{ENRISING}} \right) + I_h} \quad (6)$$

Use Equation 7 or Equation 8 to calculate required resistor values for different stop voltages.

$$R4 = \frac{R3 \times V_{ENFALLING}}{V_{STOP} - V_{ENFALLING} + R3(I_p + I_h)} \quad (7)$$

or

$$R6 = \frac{R5 \times V_{ENFALLING}}{V_{STOP} - V_{ENFALLING} + R5(I_p + I_h)} \quad (8)$$

## 2 Test Setup and Results

This section describes how to properly connect, set up, and use the TPS563900EVM-574 evaluation module. The section also includes test results typical for the evaluation module and covers efficiency, output voltage regulation, load transients, loop response, output ripple, input ripple, and start-up.

### 2.1 Input/Output Connections

The TPS563900EVM-574 is provided with input/output connectors and test points as shown in Table 2-1. A power supply capable of supplying 5 A must be connected to J1 through a pair of 20-AWG wires. The loads must be connected to J3 and J4 through a pair of 20-AWG wires. The maximum load current capability is 3.5 A for each output. Wire lengths must be minimized to reduce losses in the wires. Test-point TP1 provides a place to monitor the  $V_{IN}$  input voltages with TP2 providing a convenient ground reference. TP11 is used to monitor  $V_{OUT1}$  with TP12 as the ground reference. TP15 is used to monitor  $V_{OUT2}$  with TP15 as the ground reference.

**Table 2-1. EVM Connectors and Test Points**


Reference Designator	Function
J1	VIN input voltage connector. (See Table 1-1 for $V_{IN}$ range.)
J2	I <sup>2</sup> C interface connector.
J3	$V_{OUT1}$ , 1.0 V at 3.5 A maximum
J4	$V_{OUT2}$ , 1.1 V at 3.5 A maximum
JP1	MODE select. Cover JP1-2 and JP1-3 to select forced CCM mode. Leave open to select PSM pulse skipping mode for increased light-load efficiency
JP2	ADDR select. Normally cover JP2-2 and JP2-3.
JP3	Jumper to select internal LDO as I <sup>2</sup> C pull up voltage. Normally open to allow pull up voltage from the USB interface adapter.
JP4	2-pin header for $V_{OUT1}$ enable. Connect EN to ground to disable, open to enable.
JP5	2-pin header for $V_{OUT2}$ enable. Connect EN to ground to disable, open to enable.
TP1	VIN test point at VIN connector.
TP2	GND test point at VIN connector.
TP3	LDO output test point.
TP4	External I <sup>2</sup> C pull up voltage test point.
TP5	$V_{OUT1}$ enable test point.
TP6	$V_{OUT2}$ enable test point.
TP7	$V_{OUT1}$ slow start test point.
TP8	$V_{OUT2}$ slow start test point.
TP9	$V_{OUT1}$ LX1 switching node test point.


**Table 2-1. EVM Connectors and Test Points (continued)**

Reference Designator	Function
TP10	Test point in $V_{OUT1}$ voltage divider network. Used for loop response measurements when output voltage is set using external resistor divider network.
TP11	Output voltage test point at $V_{OUT1}$ connector.
TP12	GND test point at $V_{OUT1}$ connector.
TP13	$V_{OUT2}$ LX2 switching node test point.
TP14	Test point in $V_{OUT2}$ voltage divider network. Used for loop response measurements when output voltage is set using external resistor divider network.
TP15	Output voltage test point at $V_{OUT2}$ connector.
TP16	GND test point at $V_{OUT2}$ connector.
TP17	Analog GND test point.
TP18	I <sup>2</sup> C SDA test point.
TP19	I <sup>2</sup> C SCL test point.

## 2.2 Efficiency

Figure 2-1 and Figure 2-2 show the efficiency for the TPS563900EVM-574 in CCM at an ambient temperature of 25°C.

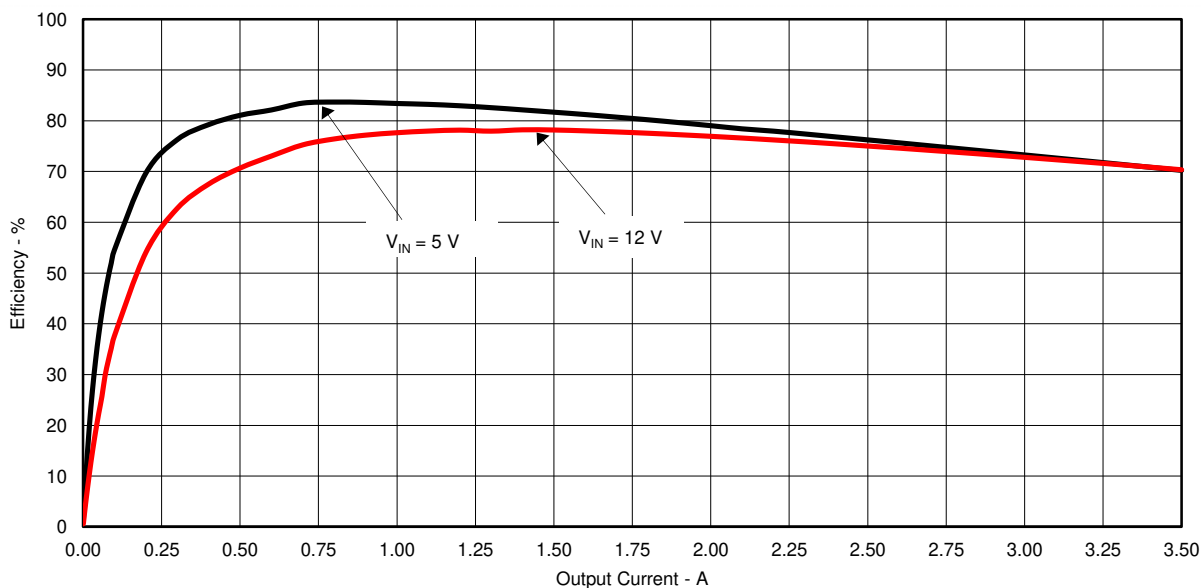
**Figure 2-1. TPS563900EVM-574  $V_{OUT1}$  CCM Efficiency**

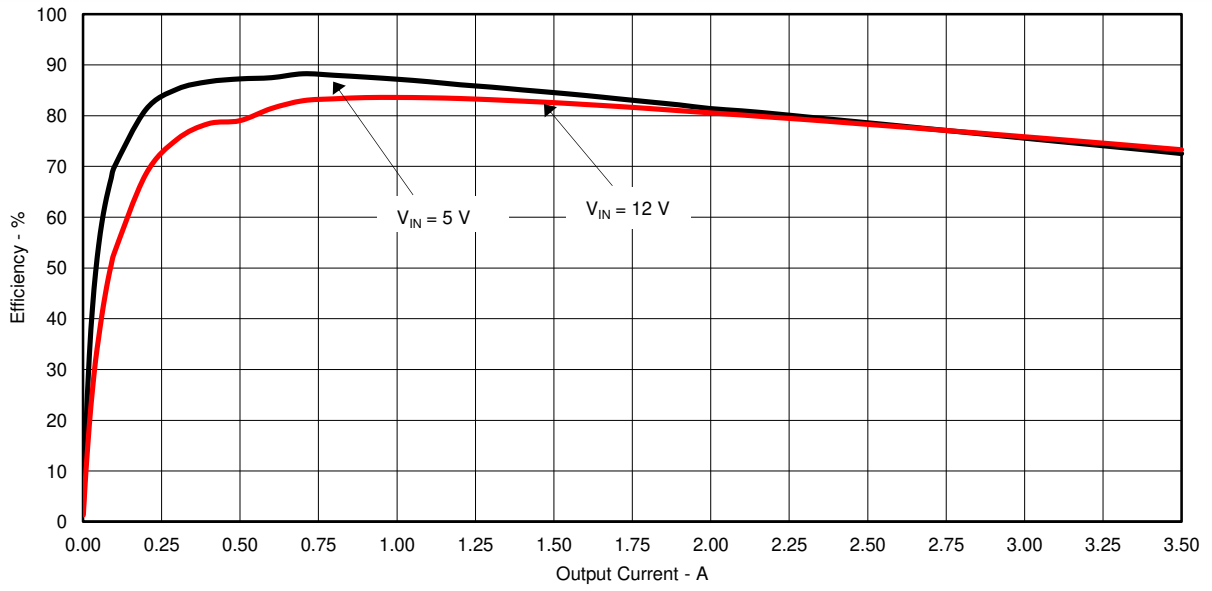

**Figure 2-2. TPS563900EVM-574  $V_{OUT2}$  CCM Efficiency**

Figure 2-3 and Figure 2-4 show the efficiency for the TPS563900EVM-574 in CCM using a semi-log scale to more easily show efficiency at lower output currents. The ambient temperature is 25°C.

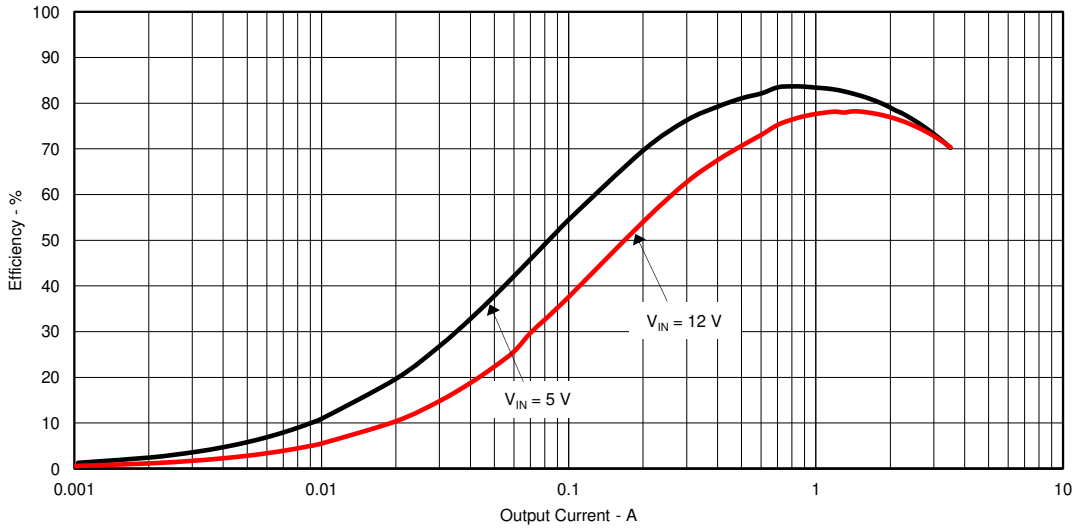


Figure 2-3. TPS563900EVM-574  $V_{OUT1}$  CCM Low Current Efficiency

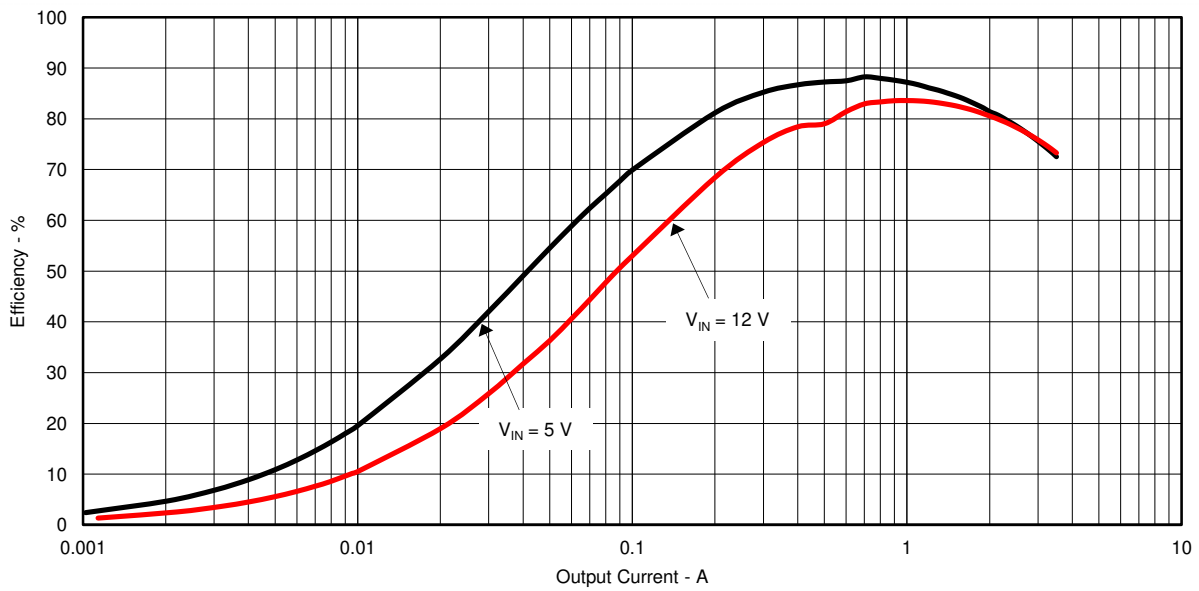


Figure 2-4. TPS563900EVM-574  $V_{OUT2}$  CCM Low Current Efficiency



Figure 2-5 and Figure 2-6 show the efficiency for the TPS563900EVM-574 in SKIP mode at an ambient temperature of 25°C.

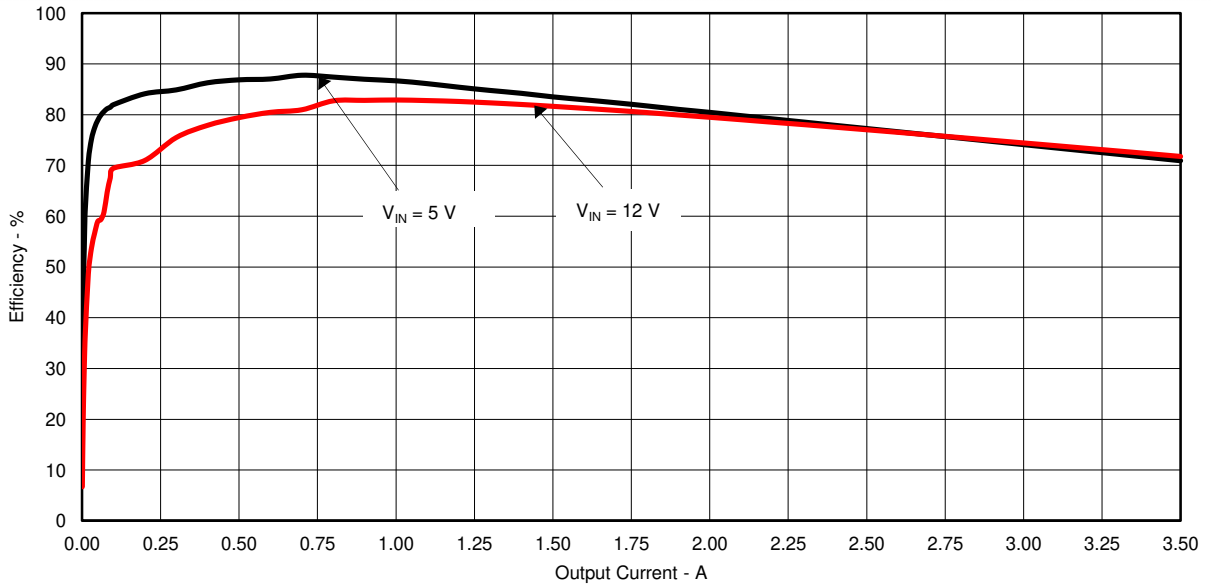


Figure 2-5. TPS563900EVM-574 V<sub>OUT1</sub> SKIP Mode Efficiency



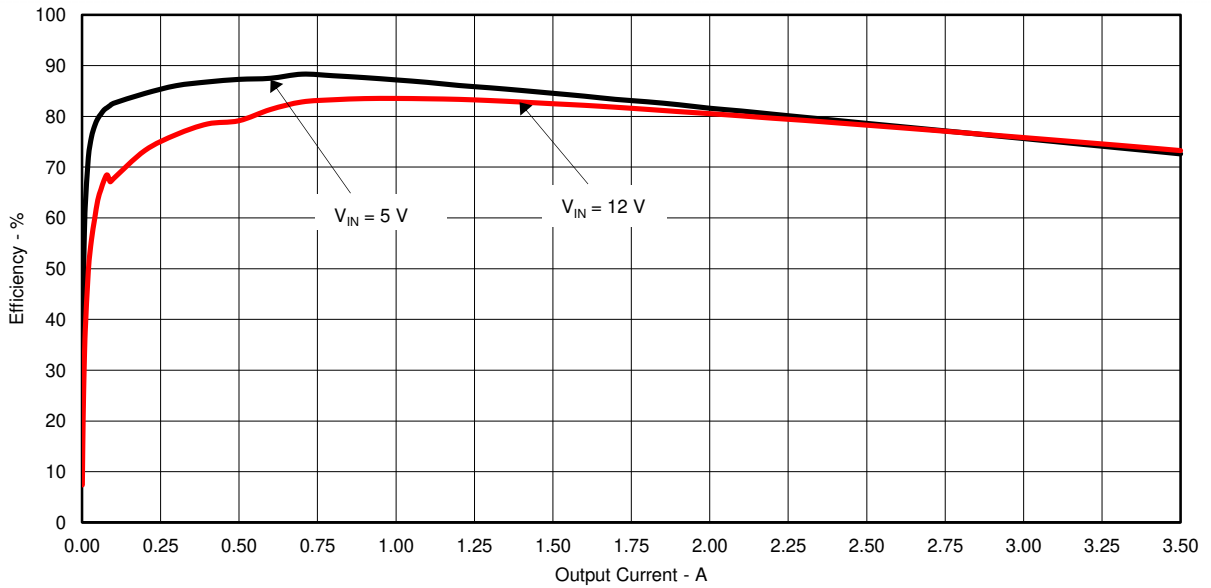


Figure 2-6. TPS563900EVM-574 V<sub>OUT2</sub> SKIP Mode Efficiency

Figure 2-7 and Figure 2-8 show the efficiency for the TPS563900EVM-574 in SKIP mode using a semi-log scale to more easily show efficiency at lower output currents. The ambient temperature is 25°C.

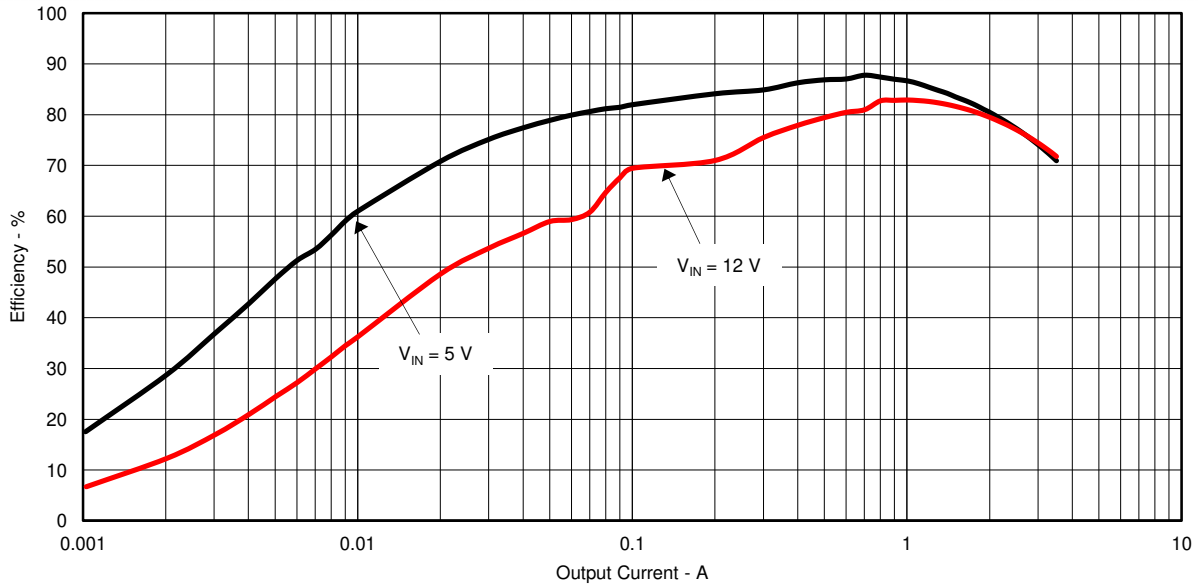

**Figure 2-7. TPS563900EVM-574  $V_{OUT1}$  SKIP Mode Low Current Efficiency**

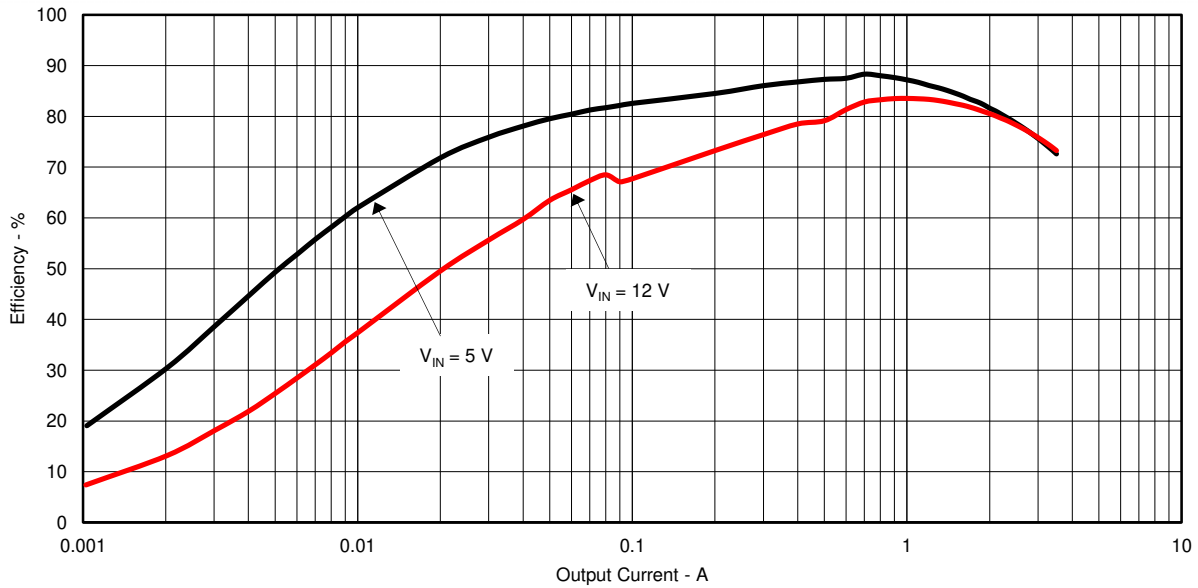


**Figure 2-8. TPS563900EVM-574  $V_{OUT2}$  SKIP Mode Low Current Efficiency**


The efficiency may be lower at higher ambient temperatures, due to temperature variation in the drain-to-source resistance of the internal MOSFET.

### 2.3 Output Voltage Load Regulation

Figure 2-9 and Figure 2-10 show the load regulation for the TPS563900EVM-574 in CCM.

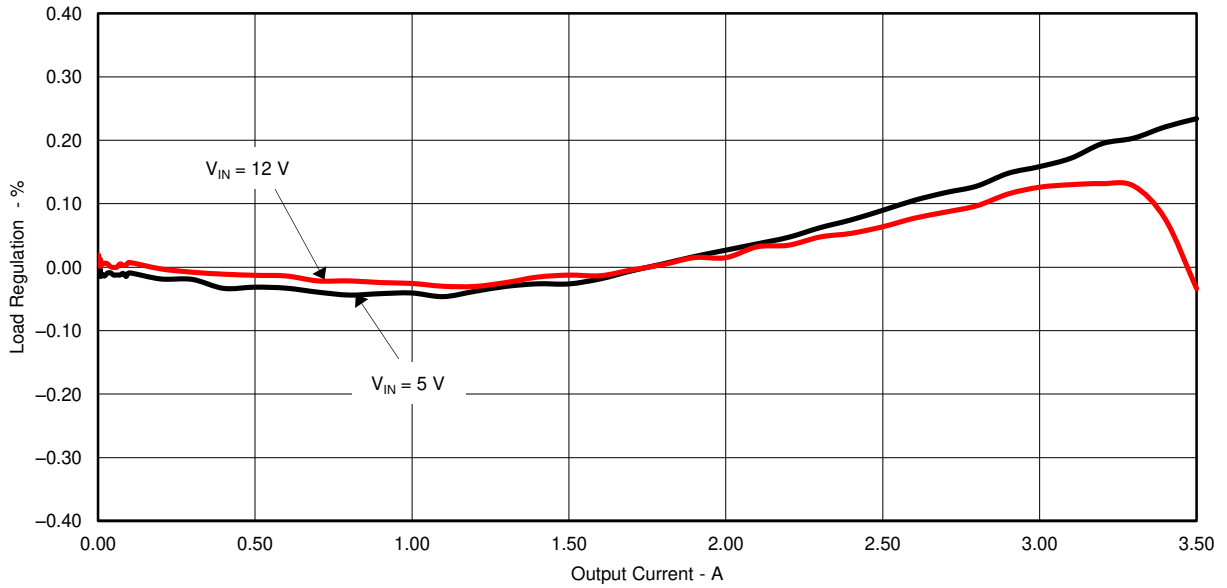

**Figure 2-9. TPS563900EVM-574  $V_{OUT1}$  CCM Load Regulation**

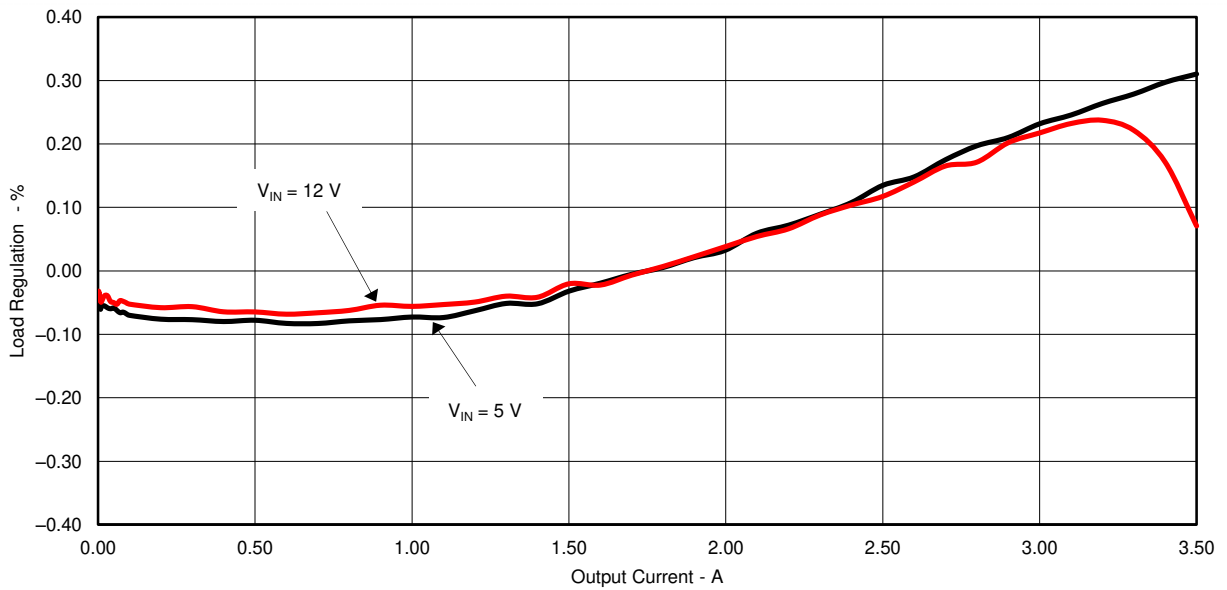

**Figure 2-10. TPS563900EVM-574  $V_{OUT2}$  CCM Load Regulation**

Figure 2-11 and Figure 2-12 show the load regulation for the TPS563900EVM-574 in SKIP mode.

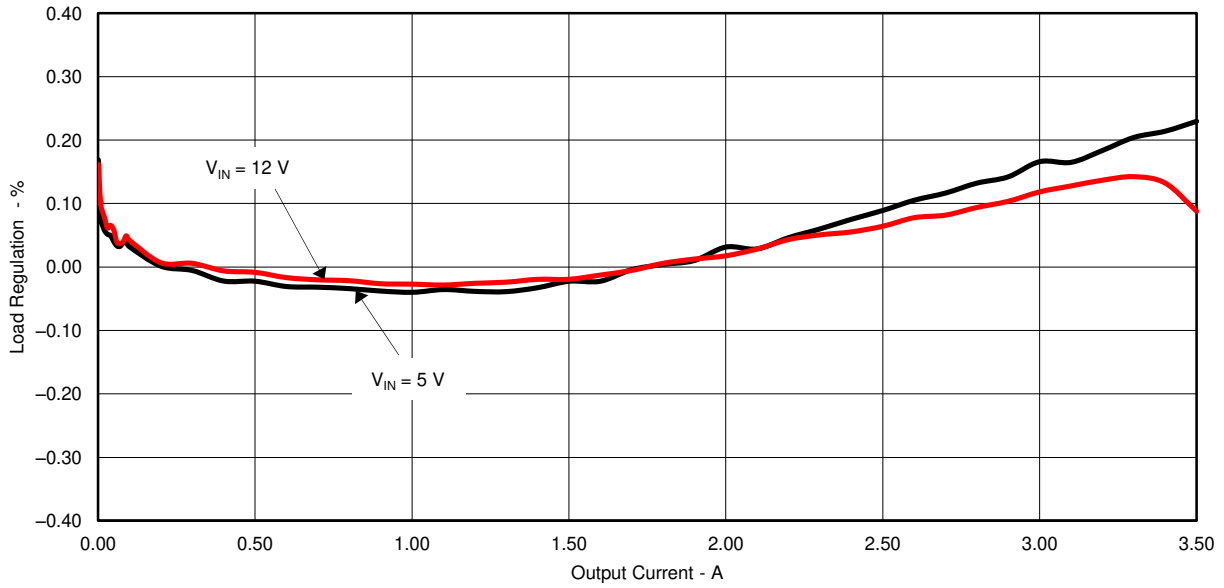


Figure 2-11. TPS563900EVM-574  $V_{OUT1}$  SKIP Mode Load Regulation


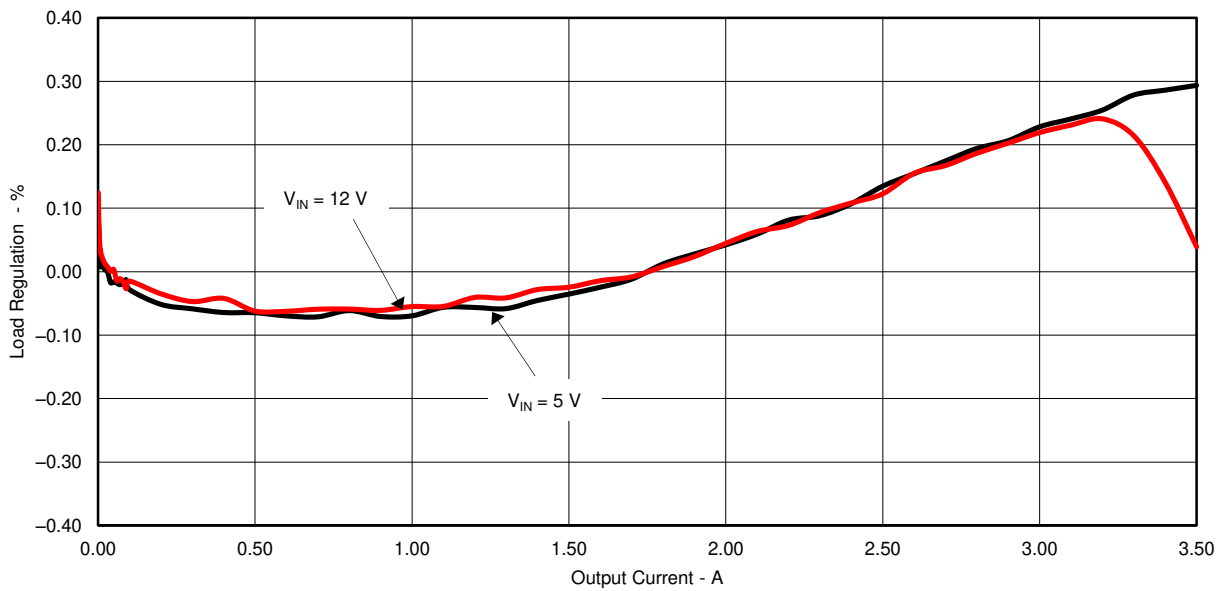


Figure 2-12. TPS563900EVM-574  $V_{OUT2}$  SKIP Mode Load Regulation


Measurements are given for an ambient temperature of 25°C.

## 2.4 Output Voltage Line Regulation

Figure 2-13 and Figure 2-14 show the line regulation for the TPS563900EVM-574 in CCM.

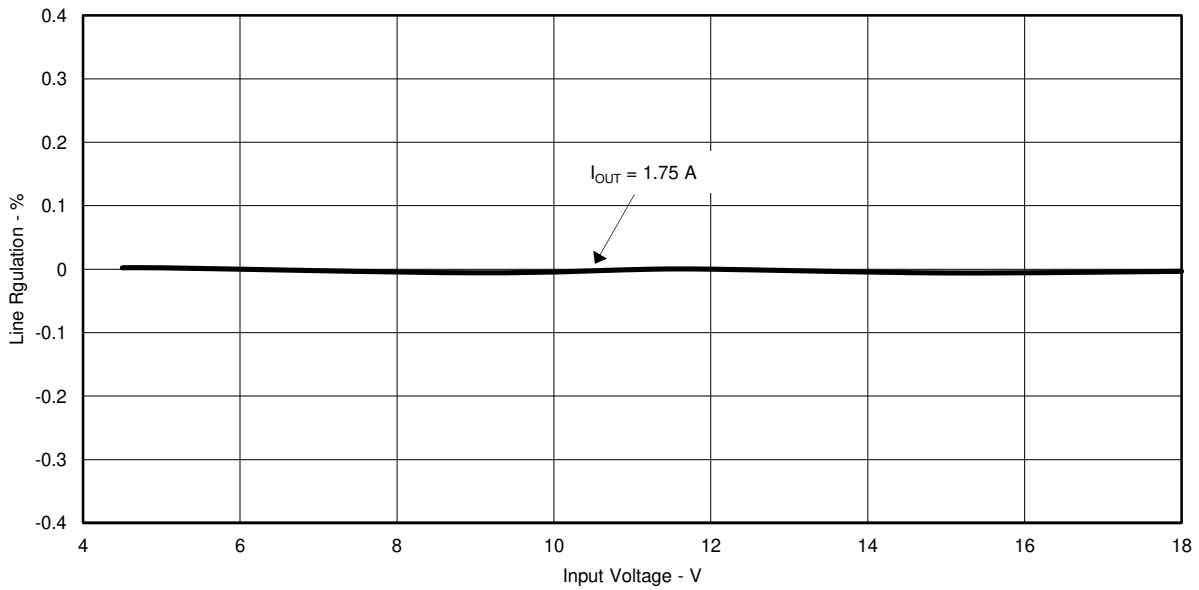


**Figure 2-13. TPS563900EVM-574  $V_{OUT1}$  CCM Line Regulation**

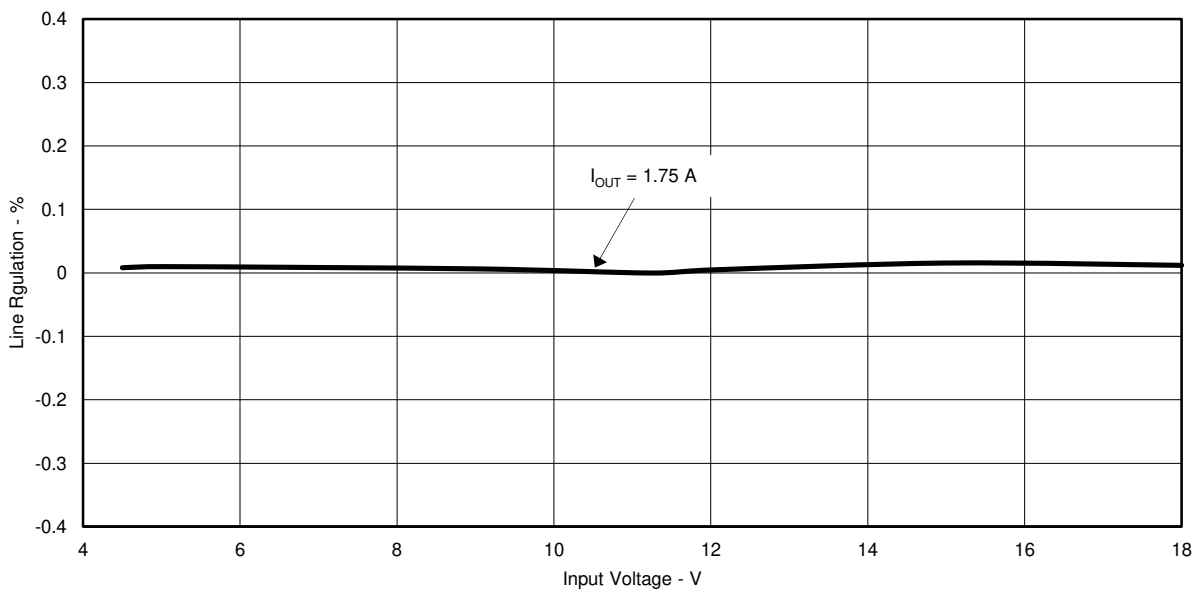


**Figure 2-14. TPS563900EVM-574  $V_{OUT2}$  CCM Line Regulation**

Figure 2-15 and Figure 2-16 show the line regulation for the TPS563900EVM-574 in SKIP mode.

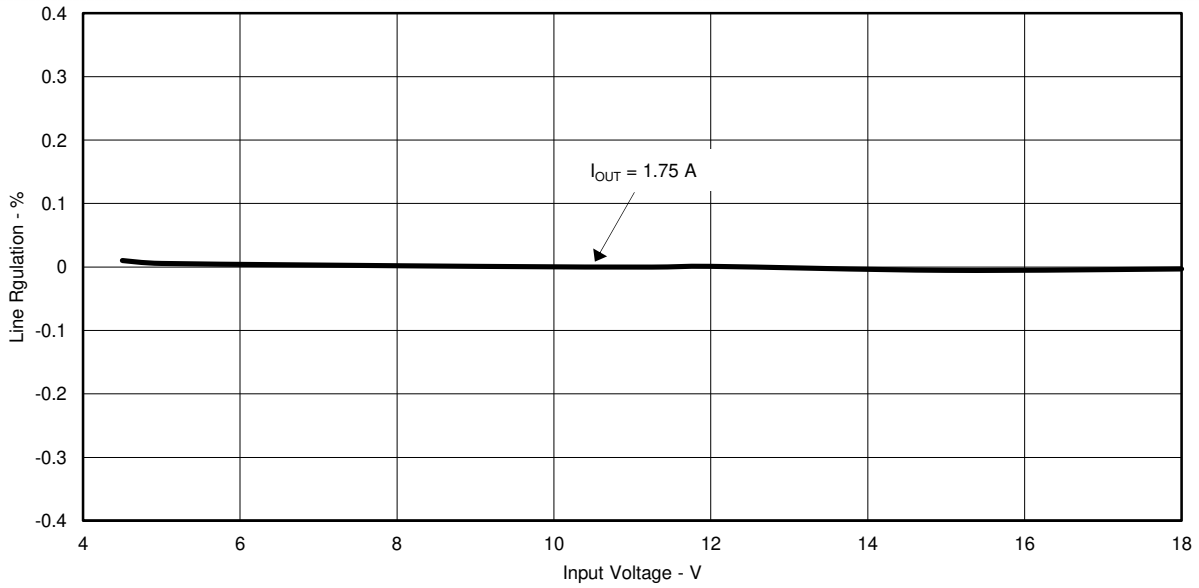


**Figure 2-15. TPS563900EVM-574 V<sub>OUT1</sub> SKIP Mode Line Regulation**

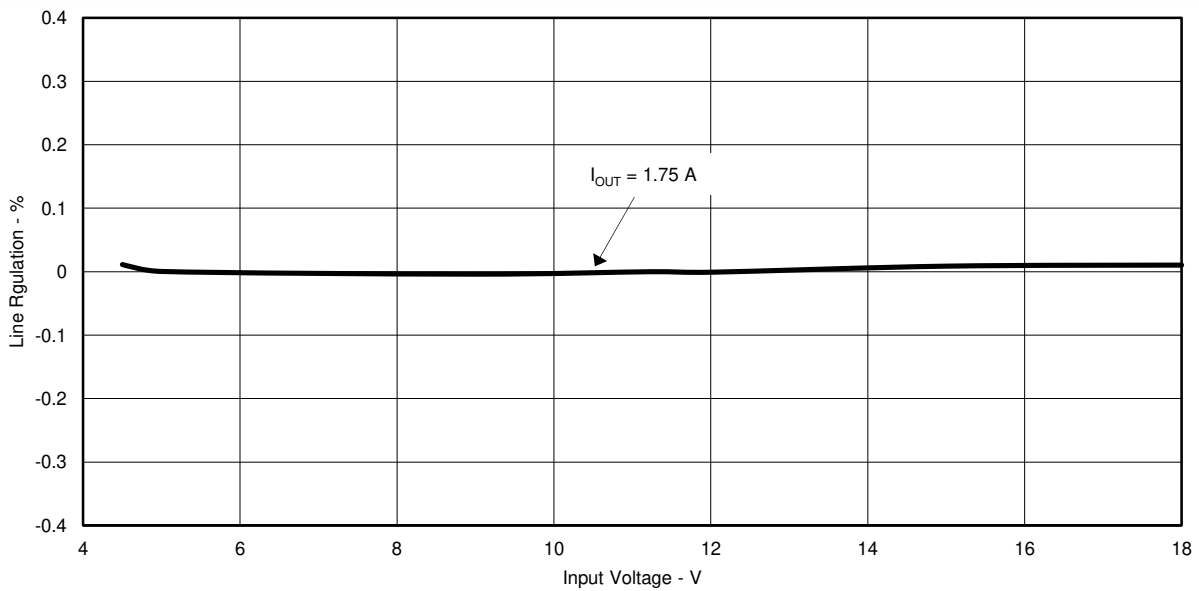


**Figure 2-16. TPS563900EVM-574 V<sub>OUT2</sub> SKIP Mode Line Regulation**

## 2.5 Load Transients

Figure 2-17 and Figure 2-18 show the TPS563900EVM-574 response to load transients. Total peak-to-peak voltage variation is as shown, including ripple and noise on the output.

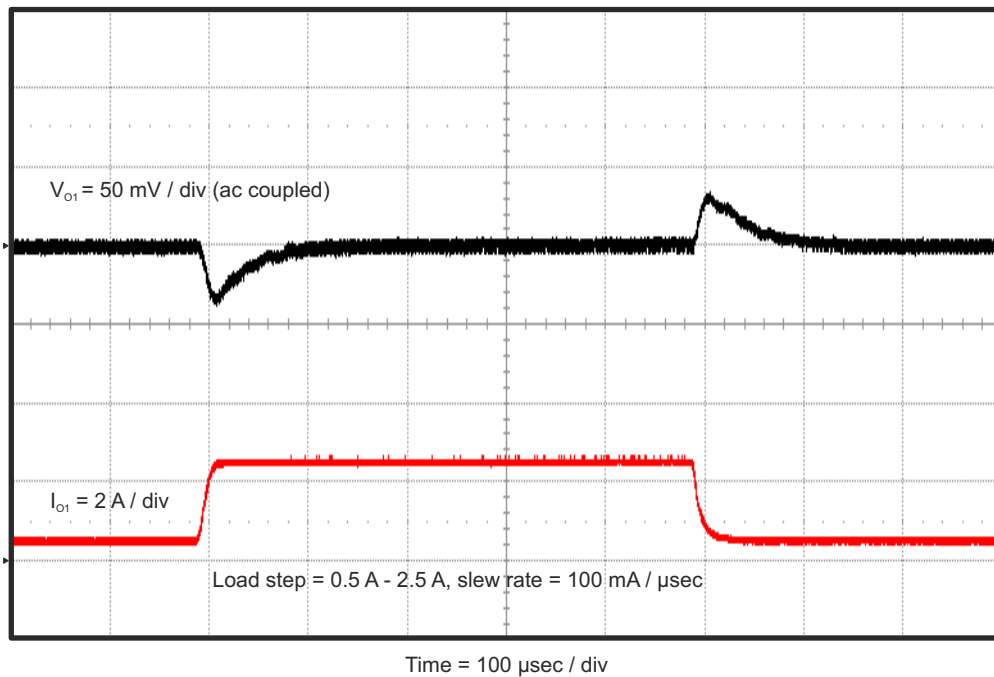


**Figure 2-17. TPS563900EVM-574  $V_{OUT1}$  Transient Response**

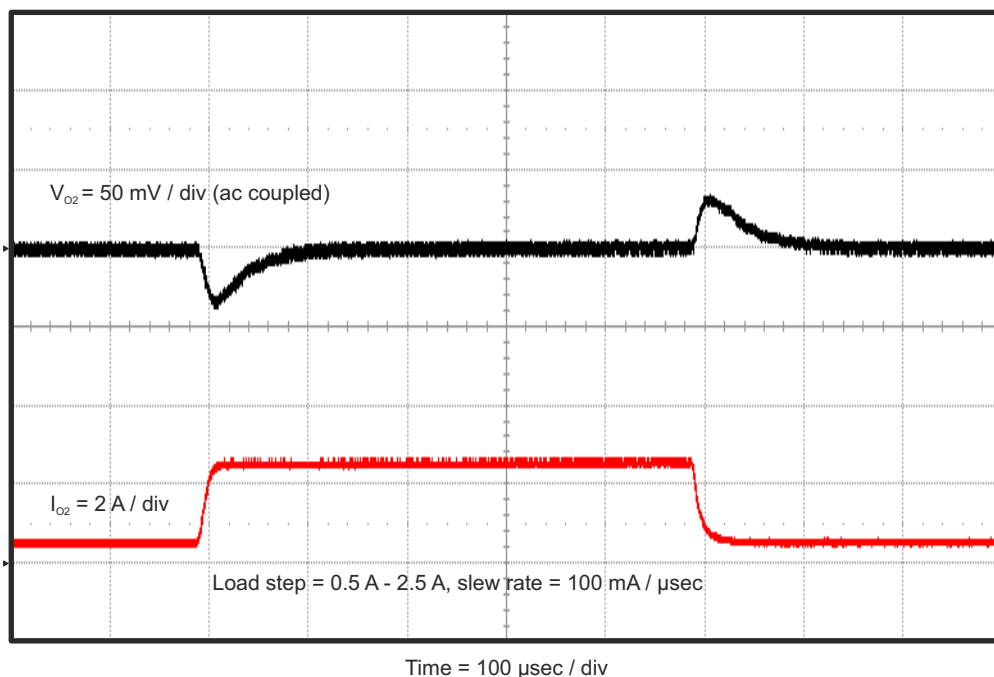


**Figure 2-18. TPS563900EVM-574  $V_{OUT2}$  Transient Response**

## 2.6 Loop Characteristics

Figure 2-19 and Figure 2-20 show the TPS563900EVM-574 loop-response characteristics when the output voltage is set by the external resistor divider network. Gain and phase plots are shown for  $V_{IN}$  voltage of 12 V. Load current for the measurement is 1.75 A.

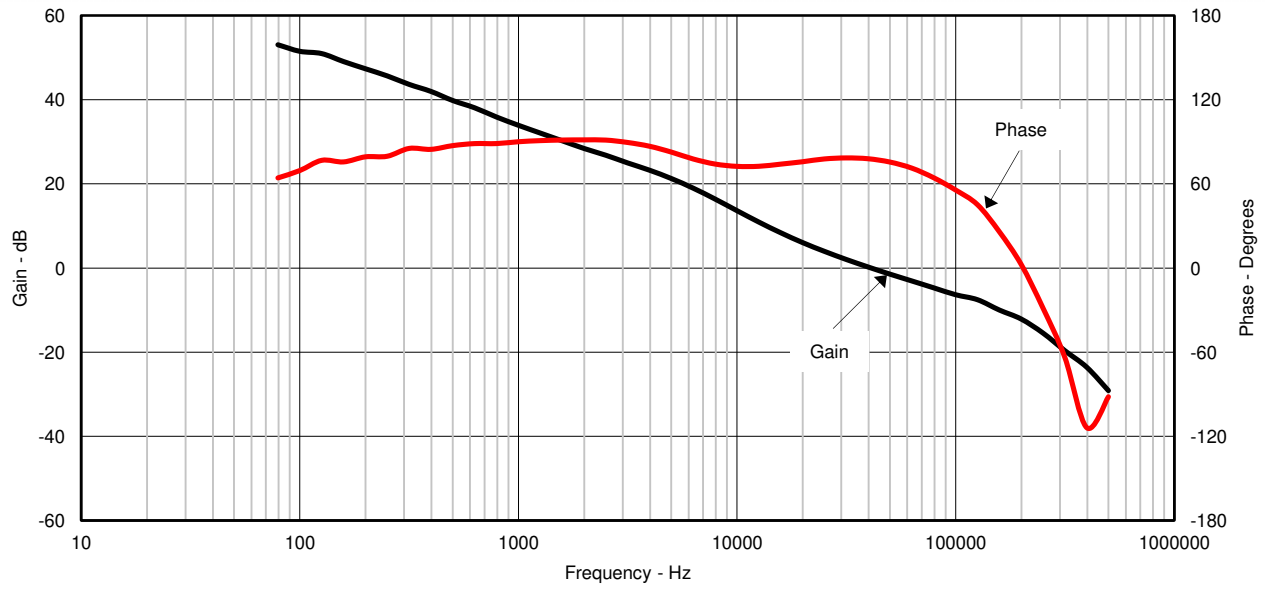

**Figure 2-19. TPS563900EVM-574 Loop Response,  $V_{OUT1}$  Set by Resistor Divider**

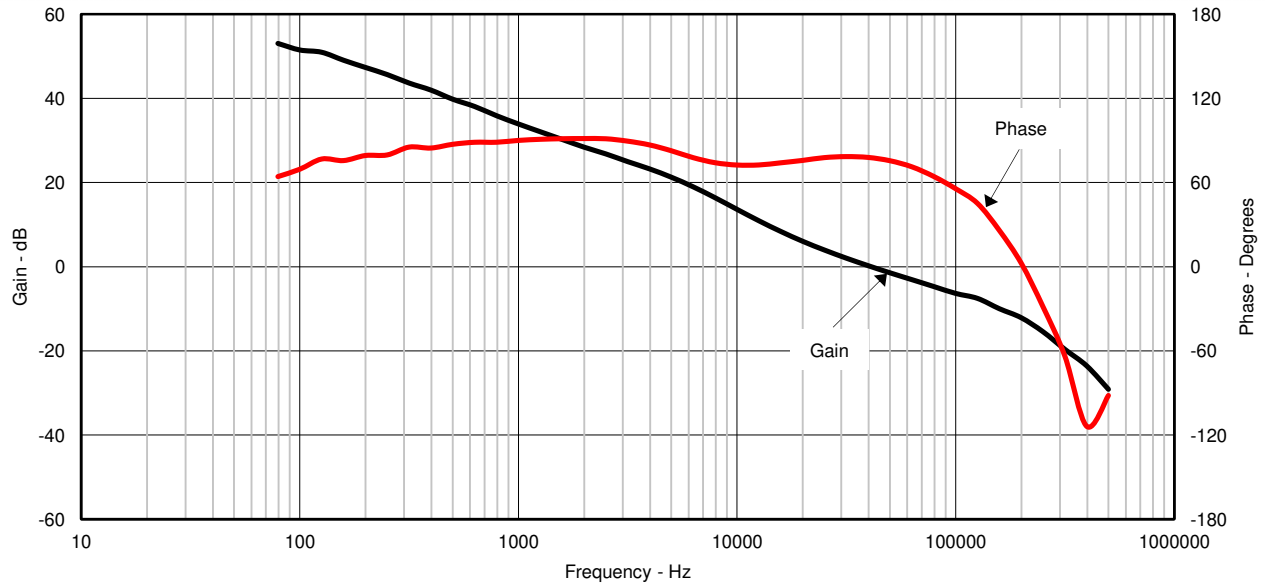


**Figure 2-20. TPS563900EVM-574 Loop Response,  $V_{OUT2}$  Set by Resistor Divider**




## 2.7 Output Voltage Ripple


Figure 2-21, Figure 2-22, and Figure 2-23 show the TPS563900EVM-574 output voltage ripple. The output currents are as shown in the figures.  $V_{IN} = 12\text{ V}$ . The ripple voltage is measured directly across the output capacitors.

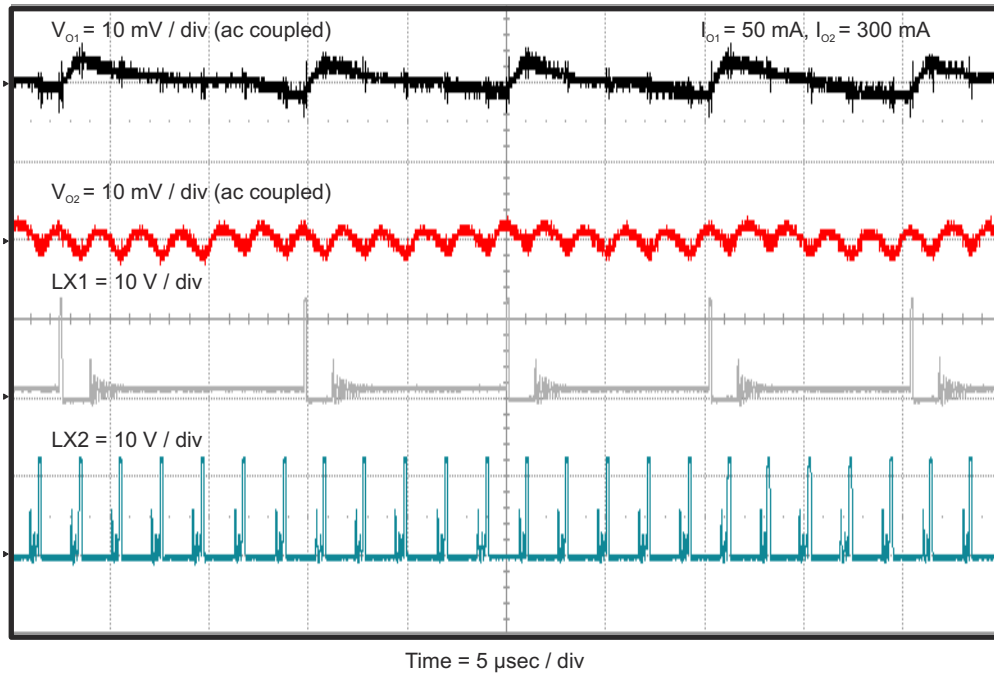

**Figure 2-21. TPS563900EVM-574 Output Ripple for Light Loads in SKIP Mode**

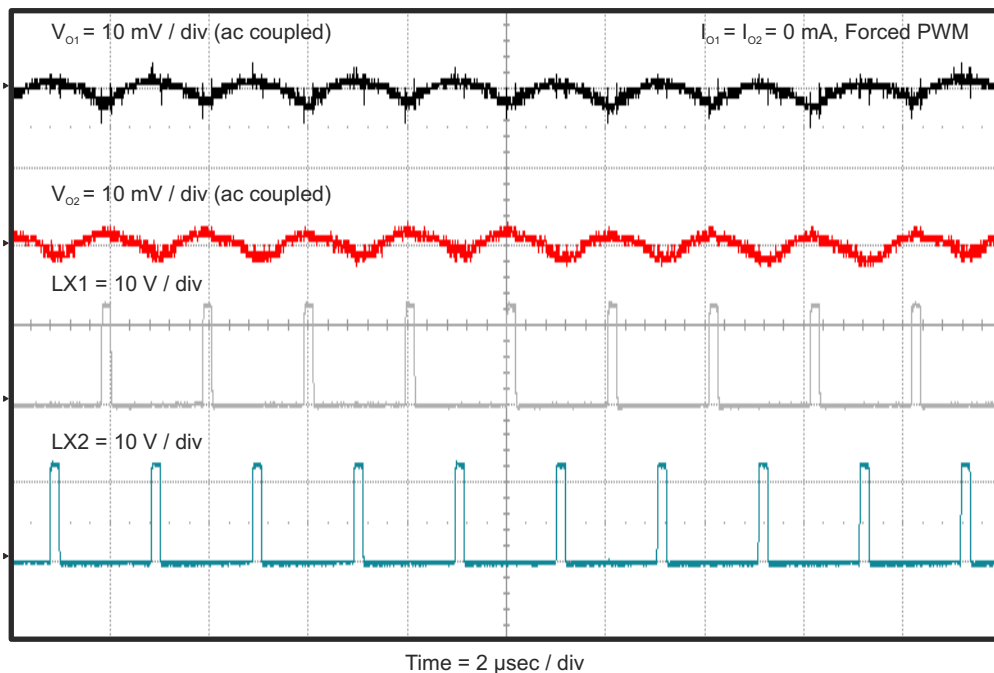

**Figure 2-22. TPS563900EVM-574 Output Ripple for No Load in CCM**

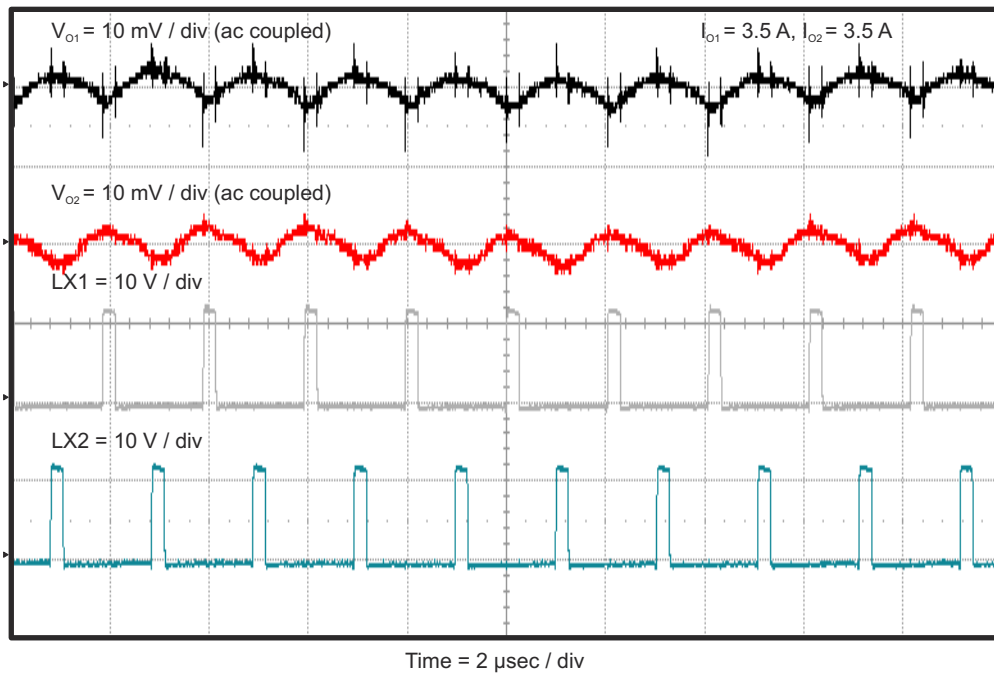

**Figure 2-23. TPS563900EVM-574 Output Ripple for Full Load CCM**

## 2.8 Powering Up

Figure 2-24 shows the start-up waveforms for the TPS563900EVM-574 relative to EN1. EN2 is not shown, but the timing is the same relative to  $V_{IN}$  and EN1. The input voltage for these plots is 12 V and the load is 1  $\Omega$ .

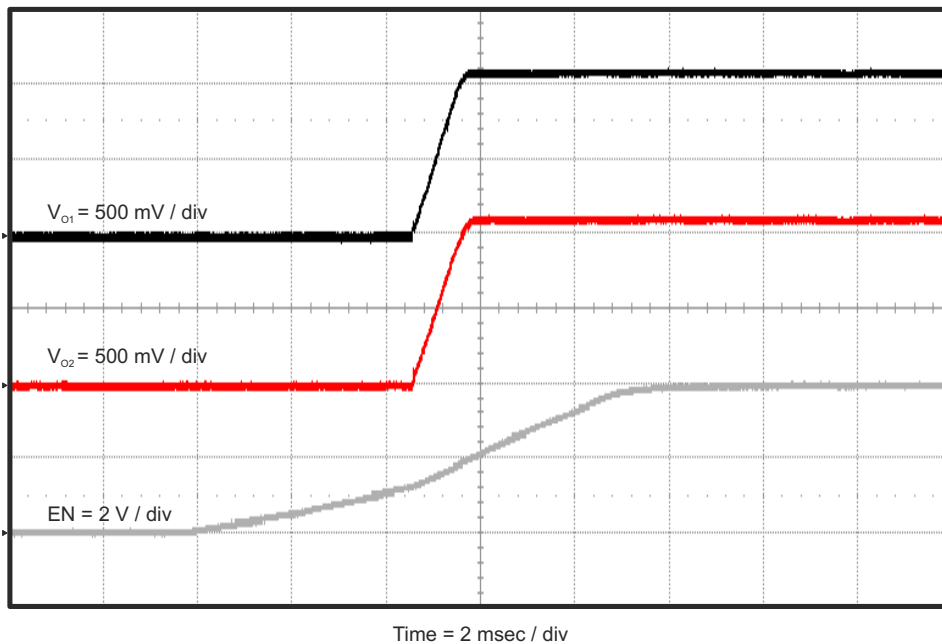


Figure 2-24. TPS563900EVM-574 Start Up

## 2.9 Shutting Down

Figure 2-25 shows the shut down waveforms for the TPS563900EVM-574 relative to EN1. EN2 is not shown, but the timing is the same relative to  $V_{IN}$  and EN1. The input voltage for these plots is 12 V and the load is 1  $\Omega$ .

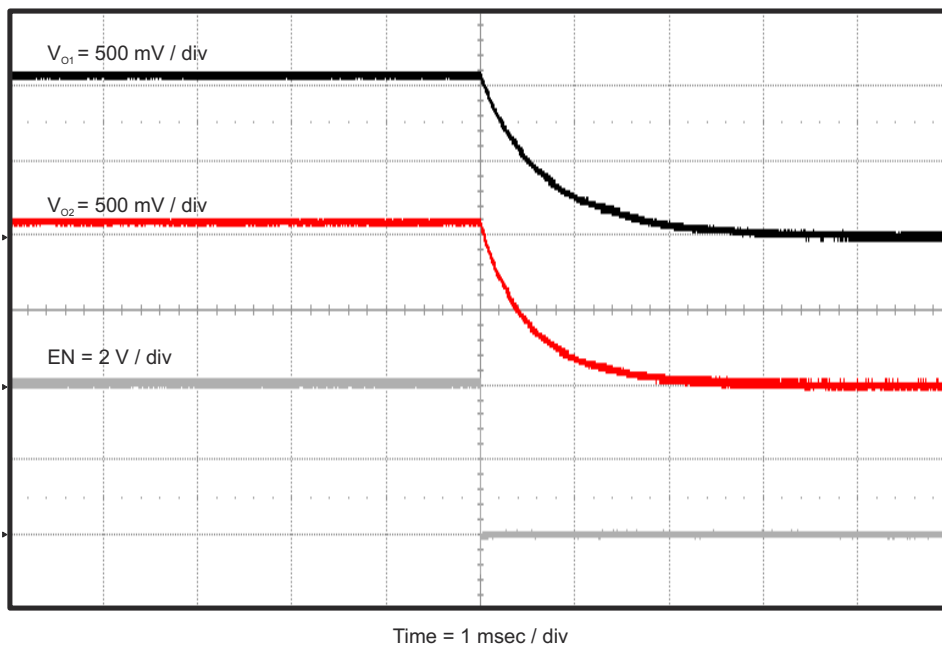


Figure 2-25. TPS563900EVM-574 Shut Down

## 3 Board Layout


This section provides a description of the TPS563900EVM-574 board layout and layer illustrations.

### 3.1 Layout


The board layout for the TPS563900EVM-574 is shown in [Figure 3-1](#) through [Figure 3-5](#). The top-side layer of the EVM is laid out in a manner typical of a user application. The top, bottom, and internal layers are 2-oz. copper.

The top layer contains the main power traces for  $V_{IN}$ ,  $V_{OUT1}$ ,  $V_{OUT2}$  and switching nodes. Also on the top layer are connections for the remaining pins of the TPS563900 and a large area filled with ground. The internal layer-1 is dedicated to a power ground plane. The internal layer-2 contains additional  $V_{IN}$ ,  $V_{OUT1}$  and  $V_{OUT2}$  copper fill areas as well as signal routing traces. The bottom layer contains a power ground plane only. The top-side ground traces are connected to the bottom and internal ground planes with multiple vias placed around the board.


The input decoupling capacitors (C1 and C2) and V7V LDO output capacitor C3 and bootstrap capacitors (C9 and C19) are all located as close to the IC as possible. Additionally, the voltage set point resistor divider components are kept close to the IC. The voltage divider network ties to the output voltages at the point of regulation, the copper  $V_{OUT1}$  and  $V_{OUT2}$  traces on the internal layer-2 near the J3 and J4 output connectors respectively. For the TPS563900, an additional input bulk capacitor may be required, depending on the EVM connection to the input supply.

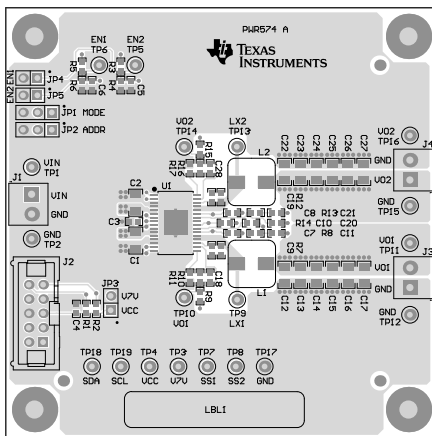


**Figure 3-1. TPS563900EVM-574 Top-Side Assembly**

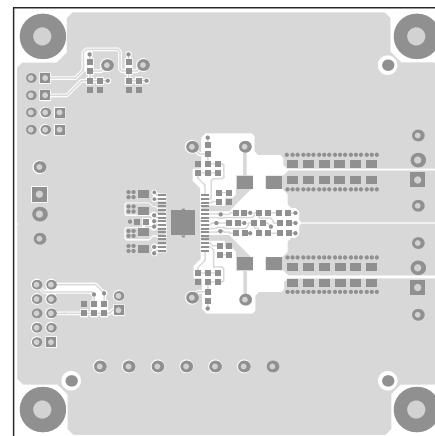


**Figure 3-2. TPS563900EVM-574 Top-Side Layout**

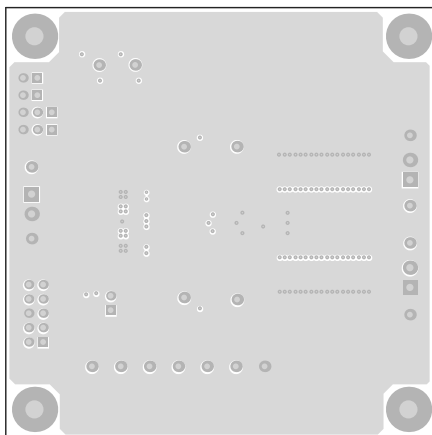

**Figure 3-3. TPS563900EVM-574 Internal Layer-1 Layout**

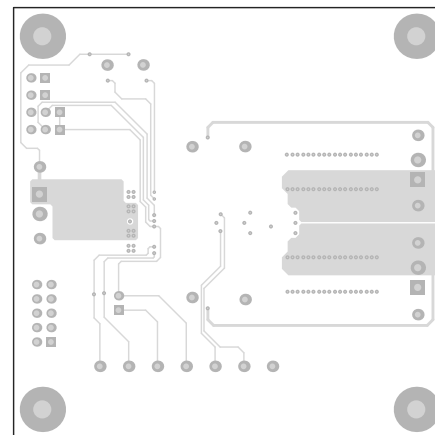

**Figure 3-4. TPS563900EVM-574 Internal Layer-2 Layout**

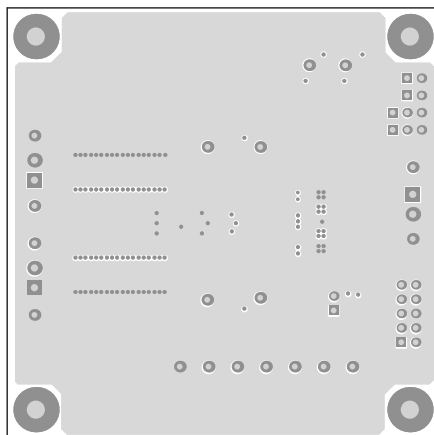

**Figure 3-5. TPS563900EVM-574 Bottom-Side Layout**

## 4 Schematic and Bill of Materials

This section presents the TPS563900EVM-574 schematic and bill of materials.

### 4.1 Schematic

Figure 4-1 is the schematic for the TPS563900EVM-574.

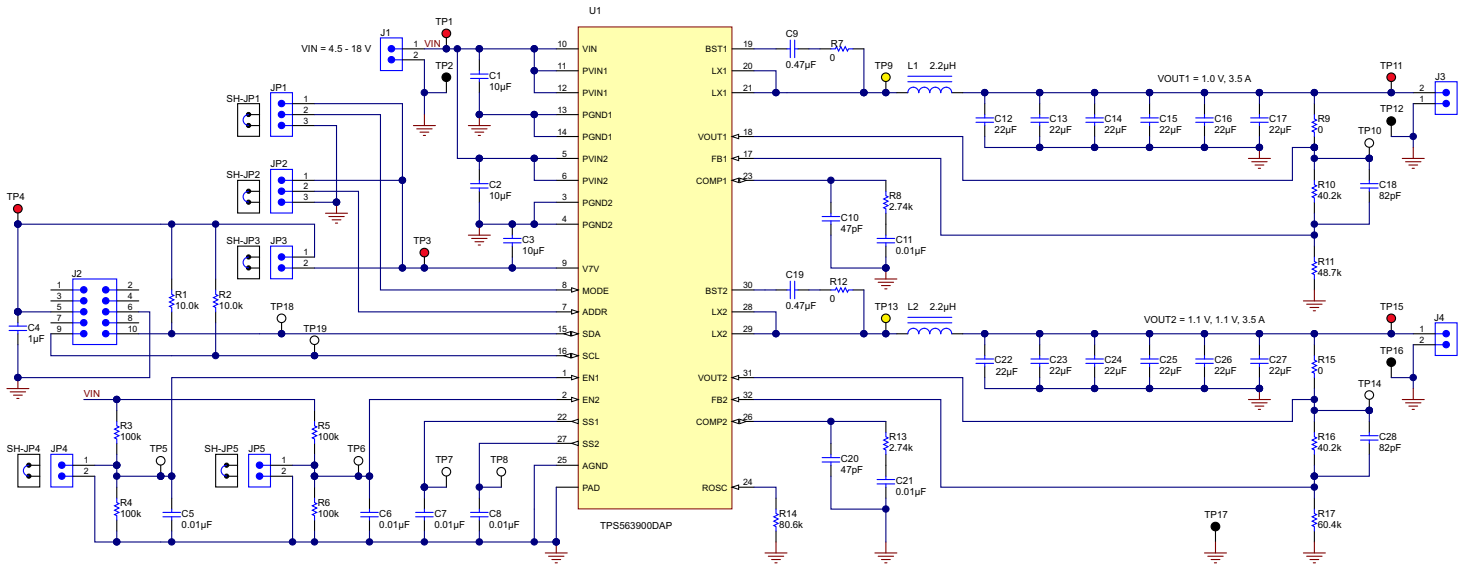


Figure 4-1. TPS563900EVM-574 Schematic

## 4.2 Bill of Materials

Table 4-1 presents the bill of materials for the TPS563900EVM-574.

**Table 4-1. TPS563900EVM-574 Bill of Materials**

Designator	Qty	Value	Description	Package Reference	Part Number	Manufacturer
C1, C2	2	10uF	CAP, CERM, 10uF, 25V, +/-10%, X5R, 1206	1206	GRM31CR61E106KA12L	MuRata
C3	1	10uF	CAP, CERM, 10uF, 10V, +/-10%, COG/NP0, 0603	0603	C1608X5R1A106M	TDK
C4	1	1uF	CAP, CERM, 1uF, 25V, +/-10%, X5R, 0603	0603	GRM188R61E105KA12D	MuRata
C5, C6, C7, C8, C11, C21	6	0.01uF	CAP, CERM, 0.01uF, 50V, +/-10%, X7R, 0603	0603	GRM188R71H103KA01D	MuRata
C9, C19	2	0.47uF	CAP, CERM, 0.47uF, 25V, +/-10%, X5R, 0603	0603	GRM188R61E474KA12D	MuRata
C10, C20	2	47pF	CAP, CERM, 47pF, 50V, +/-5%, COG/NP0, 0603	0603	GRM1885C1H470JA01D	MuRata
C12, C13, C14, C15, C16, C17, C22, C23, C24, C25, C26, C27	12	22uF	CAP, CERM, 22uF, 10V, +/-10%, X5R, 1206	1206	GRM31CR61A226KE19L	MuRata
C18, C28	2	82pF	CAP, CERM, 82pF, 50V, +/-5%, COG/NP0, 0603	0603	GRM1885C1H820JA01D	MuRata
H1, H2, H3, H4	4		Machine Screw, Round, 4-40 x 1/4, Nylon, Philips panhead	Screw	NY PMS 440 0025 PH	B&F Fastener Supply
H5, H6, H7, H8	4		Standoff, Hex, 0.5"L 4-40 Nylon	Standoff	1902C	Keystone
J1, J3, J4	3		Terminal Block, 6A, 3.5mm Pitch, 2-Pos, TH	7.0x8.2x6.5mm	ED555/2DS	On-Shore Technology
J2	1		Header (shrouded), 100mil, 5x2, High-Temperature, Gold, TH	5x2 Shrouded header	N2510-6002-RB	3M
JP1, JP2	2		Header, TH, 100mil, 3x1, Gold plated, 230 mil above insulator	3x1 Header	TSW-103-07-G-S	Samtec
JP3, JP4, JP5	3		Header, TH, 100mil, 2x1, Gold plated, 230 mil above insulator	2x1 Header	TSW-102-07-G-S	Samtec
L1, L2	2	2.2uH	Inductor, Shielded Drum Core, Superflux, 2.2uH, 9A, 0.0115 ohm, SMD	WE-HC4	744311220	Wurth Elektronik eiSos
LBL1	1		Thermal Transfer Printable Labels, 1.250" W x 0.250" H - 10,000 per roll	PCB Label 1.25"H x 0.250"W	THT-13-457-10	Brady
R1, R2	2	10.0k	RES, 10.0k ohm, 1%, 0.1W, 0603	0603	CRCW060310K0FKEA	Vishay-Dale
R3, R4, R5, R6	4	100k	RES, 100k ohm, 1%, 0.1W, 0603	0603	CRCW0603100KFKEA	Vishay-Dale
R7, R9, R12, R15	4	0	RES, 0 ohm, 5%, 0.1W, 0603	0603	CRCW06030000Z0EA	Vishay-Dale
R8, R13	2	2.74k	RES, 2.74k ohm, 1%, 0.1W, 0603	0603	CRCW06032K74FKEA	Vishay-Dale
R10, R16	2	40.2k	RES, 40.2k ohm, 1%, 0.1W, 0603	0603	CRCW060340K2FKEA	Vishay-Dale
R11	1	48.7k	RES, 48.7k ohm, 1%, 0.1W, 0603	0603	CRCW060348K7FKEA	Vishay-Dale
R14	1	80.6k	RES, 80.6k ohm, 1%, 0.1W, 0603	0603	CRCW060380K6FKEA	Vishay-Dale
R17	1	60.4k	RES, 60.4k ohm, 1%, 0.1W, 0603	0603	CRCW060360K4FKEA	Vishay-Dale
SH-JP1, SH-JP2, SH-JP3, SH-JP4, SH-JP5	5	1x2	Shunt, 2mm, Gold plated, Black	2mm Shunt, Closed Top	2SN-BK-G	Samtec
TP1, TP3, TP4, TP11, TP15	5	Red	Test Point, Miniature, Red, TH	Red Miniature Testpoint	5000	Keystone
TP2, TP12, TP16, TP17	4	Black	Test Point, Miniature, Black, TH	Black Miniature Testpoint	5001	Keystone
TP5, TP6, TP7, TP8, TP10, TP14, TP18, TP19	8	White	Test Point, Miniature, White, TH	White Miniature Testpoint	5002	Keystone
TP9, TP13	2	Yellow	Test Point, Miniature, Yellow, TH	Yellow Miniature Testpoint	5004	Keystone
U1	1		4.5V to 18V Input, 3A/3A Dual Synchronous Step-Down SWIFT Converter With I2C Controlled VID, DAP0032A	DAP0032A	TPS563900DAP	Texas Instruments
FID1, FID2, FID3	0		Fiducial mark. There is nothing to buy or mount.	Fiducial	N/A	N/A

## 4.3 Reference

1. *TPS563900 4.5-V to 18-V Input, 3.5-A/3.5-A Dual Synchronous Step-Down Converter With I<sup>2</sup>C Controlled VID* data sheet ([SLVSCC7](#))

## 5 Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

<b>Changes from Revision * (March 2014) to Revision A (July 2021)</b>	<b>Page</b>
• Updated the numbering format for tables, figures, and cross-references throughout the document. ....	3
• Updated the user's guide title.....	3

---



## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#) or other applicable terms available either on [ti.com](http://ti.com) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2022, Texas Instruments Incorporated