


Cinterion[®] EMS31-X

AT Command Set

Version: 03.006
DocId: EMS31-X_ATC_V03.006

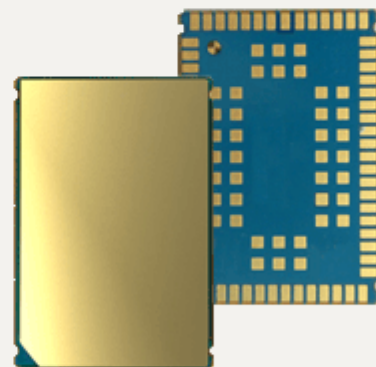

Document Name: **Cinterion® EMS31-X AT Command Set**

Version: **03.006**

Date: **September 6, 2018**

DocId: **EMS31-X_ATC_V03.006**

Status **Confidential / Preliminary**

GENERAL NOTE

THE USE OF THE PRODUCT INCLUDING THE SOFTWARE AND DOCUMENTATION (THE "PRODUCT") IS SUBJECT TO THE RELEASE NOTE PROVIDED TOGETHER WITH PRODUCT. IN ANY EVENT THE PROVISIONS OF THE RELEASE NOTE SHALL PREVAIL. THIS DOCUMENT CONTAINS INFORMATION ON GEMALTO M2M PRODUCTS. THE SPECIFICATIONS IN THIS DOCUMENT ARE SUBJECT TO CHANGE AT DISCRETION OF GEMALTO M2M. GEMALTO M2M GMBH GRANTS A NON-EXCLUSIVE RIGHT TO USE THE PRODUCT. THE RECIPIENT SHALL NOT TRANSFER, COPY, MODIFY, TRANSLATE, REVERSE ENGINEER, CREATE DERIVATIVE WORKS; DISASSEMBLE OR DECOMPILE THE PRODUCT OR OTHERWISE USE THE PRODUCT EXCEPT AS SPECIFICALLY AUTHORIZED. THE PRODUCT AND THIS DOCUMENT ARE PROVIDED ON AN "AS IS" BASIS ONLY AND MAY CONTAIN DEFICIENCIES OR INADEQUACIES. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, GEMALTO M2M GMBH DISCLAIMS ALL WARRANTIES AND LIABILITIES. THE RECIPIENT UNDERTAKES FOR AN UNLIMITED PERIOD OF TIME TO OBSERVE SECRECY REGARDING ANY INFORMATION AND DATA PROVIDED TO HIM IN THE CONTEXT OF THE DELIVERY OF THE PRODUCT. THIS GENERAL NOTE SHALL BE GOVERNED AND CONSTRUED ACCORDING TO GERMAN LAW.

Copyright

Transmittal, reproduction, dissemination and/or editing of this document as well as utilization of its contents and communication thereof to others without express authorization are prohibited. Offenders will be held liable for payment of damages. All rights created by patent grant or registration of a utility model or design patent are reserved.

Copyright © 2018, Gemalto M2M GmbH, Gemalto Company

Trademark Notice

Gemalto, the Gemalto logo, are trademarks and service marks of Gemalto and are registered in certain countries.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. All other registered trademarks or trademarks mentioned in this document are property of their respective owners.

Contents

1.	Introduction.....	10
1.1	Scope of the document	10
1.2	Related documents	11
1.3	Document Conventions	13
1.3.1	Quick Reference Table	13
1.3.2	Superscript notation for parameters and values	14
1.4	AT Command Syntax	15
1.4.1	Using Parameters	15
1.4.2	Concatenating AT Commands.....	15
1.5	Communication between Customer Application and EMS31-X	17
1.6	Supported character sets	18
1.6.1	GSM alphabet tables and UCS2 character values	20
1.6.2	UCS2 and GSM character coding and conversion	22
1.6.2.1	Output of SIM data (UE to TE).....	22
1.6.2.2	Input of SIM data (TE to UE)	23
1.7	Unsolicited Result Code Presentation.....	24
1.7.1	Common URCs.....	24
1.8	Errors and Messages	25
2.	Configuration Commands.....	26
2.1	AT&F Reset AT Command Settings to Factory Default Values	26
2.2	AT&V Display current configuration	27
2.2.1	AT&V responses.....	28
2.3	AT&W Store AT Command Settings to User Defined Profile	29
2.4	ATQ Result Code Presentation Mode	30
2.5	ATV Result code format mode	31
2.5.1	Verbose and numeric result codes	31
2.6	ATZ Restore AT Command Settings from User Defined Profile	32
2.7	AT+CFUN Functionality Level.....	33
2.8	AT^SMSO Switch Off EMS31-X.....	35
2.9	AT+CMEE Error Message Format	36
2.9.1	CME/CMS Error Code Overview	37
2.10	AT+CSCS Character Set	41
2.11	AT^SCFG Extended Configuration Settings	42
2.12	AT^SPOW Set UART Mode and SLEEP Mode on UART	55
3.	Status Control Commands	57
3.1	AT+CEER Extended Error Report.....	57
3.1.1	Release Causes for EMM Failures	58
3.1.2	Release Causes for ESM Failures.....	58
3.2	AT^SIND Extended Indicator Control.....	59
3.3	AT+CPAS Activity Status	69
3.4	AT+WS46 Select wireless network	70
4.	Serial Interface Control Commands.....	71
4.1	AT\Q Flow Control.....	71
4.2	AT&C Set Data Carrier Detect (DCD) Line Mode	72

4.3	AT&D Set Data Terminal Ready (DTR) Line Mode	73
4.4	AT&S Set Data Set Ready (DSR) Line Mode	74
4.5	ATE AT Command Echo	75
4.6	AT+ICF Character Framing	76
4.7	AT+IPR Bit Rate	78
4.8	AT+CMUX Multiplex mode	80
5.	Identification Commands	82
5.1	ATI Display product identification information	82
5.2	AT+CGMI Request manufacturer identification	84
5.3	AT+CGMM Request model identification	85
5.4	AT+CGMR Request revision identification of software status	86
5.5	AT+CGSN Request International Mobile Equipment Identity (IMEI)	87
5.6	AT+GSN Request International Mobile Equipment Identity (IMEI)	89
5.7	AT+CIMI Request International Mobile Subscriber Identity (IMSI)	91
5.8	AT^SINFO Information Output	92
6.	Security Commands	94
6.1	AT+CPIN PIN Authentication	94
6.2	AT+CLCK Facility lock	96
6.3	AT+CPWD Change Password	99
7.	Call related Commands	101
7.1	ATH Disconnect existing connection	101
7.2	ATO Switch from command mode to data mode / PPP online mode	102
7.3	+++ Switch from data mode or PPP online mode to command mode	103
8.	Network Service Commands	104
8.1	AT+COPN Read operator names	104
8.2	AT+COPS Operator Selection	105
8.3	AT+CESQ Extended Signal Quality	108
8.4	AT+CPOL Preferred Operator List	110
8.5	AT+CPLS Select Preferred Operator List	112
8.6	AT+CTZR Time Zone Reporting	113
8.7	AT+CTZU Automatic Time Zone Update	115
8.8	AT+CPSMS Enable or Disable Power Saving Mode	116
8.9	AT^SMONI Monitoring Serving Cell	118
8.9.1	AT^SMONI Responses	118
8.9.2	Service states	119
8.10	AT^SMONP Monitoring Neighbour Cells	121
8.10.1	AT^SMONP Responses	121
8.10.2	AT^SMONP Enhanced Responses	122
8.11	AT^SNMON Network Monitoring	124
8.12	AT+CEDRXS eDRX Setting	127
8.13	AT+CEDRXRDP Read dynamic eDRX parameters	130
8.14	AT^SNLWM2M ODIS/DHIR/Portfolio Management	131
9.	Internet Service Commands	133
9.1	AT^SICA Internet Connection Activate or Deactivate	137
9.2	AT^SICS Internet Connection Settings	138
9.3	AT^SIPS Internet Profile Storage	140

9.4	AT^SISS	Internet Service Setup Profile	141
9.5	AT^SISI	Internet Service Information	149
9.6	AT^SISO	Internet Service Open	151
9.7	AT^SISC	Internet Service Close	154
9.8	AT^SISR	Internet Service Read Data	155
	9.8.1	Example: Socket Host Reads Small Amounts of UDP Data Packets (URC Mode).....	157
9.9	AT^SISW	Internet Service Write Data.....	158
	9.9.1	Usage of parameter <eodFlag>	160
9.10	AT^SIST	Enter Transparent Mode	161
9.11	AT^SISH	Disconnect Remote Client	163
9.12	AT^SISX	Internet Service Execution.....	164
9.13	AT^SISE	Internet Service Error Report.....	167
9.14	Internet Service URC "^SIS"	168
	9.14.1	Information Elements Related to the Service Application.....	169
	9.14.2	Information Elements Related to FTP Service.....	172
	9.14.3	Information Elements Related to HTTP Service	172
	9.14.4	Information Elements Related to SMTP Service	173
9.15	Examples of how to Configure and Use Internet Service Profiles.....		174
	9.15.1	Selecting URC Mode or Polling Mode	174
	9.15.2	Configuring an Internet Connection Profile.....	174
	9.15.3	Configuring Non-Transparent Listener	174
	9.15.4	Configuring TCP Client for Calling a TCP Listener.....	175
	9.15.5	Transparent TCP Listener: Accepting / Rejecting Incoming Remote Client	175
	9.15.6	Transparent TCP Listener: Autoanswering Incoming Remote Client	177
	9.15.7	Socket Client Sends Data via TCP Connection (Polling Mode).....	178
	9.15.8	Socket Client Sends Data via TCP Connection with URCS.....	178
	9.15.9	UDP Scenario	179
	9.15.10	Creating Transparent TCP Socket Client	181
	9.15.11	Opening and Closing Transparent TCP Service.....	181
	9.15.12	Transparent TCP Client Receives Data While in AT Command Mode.....	182
	9.15.13	Remote Server Disconnects While Transparent TCP Service is in Transparent Access Mode.....	183
	9.15.14	Server Disconnects While Transparent TCP Service is in AT Command Mode and Data is Pending.....	183
	9.15.15	FTP Upload Single File (URC Mode).....	185
	9.15.16	HTTP Download Using TLS.....	186
	9.15.17	HTTP Post	186
	9.15.18	Ping.....	187
	9.15.19	Resolving DNS Host Name to IP Address.....	188
10.	Packet Domain Related Commands		189
	10.1	AT+CGACT PDP context activate or deactivate	189
	10.2	AT+CGATT PS attach or detach.....	191
	10.3	AT+CGDCONT Define PDP Context	192
		10.3.1 Attaching to LTE Networks	194
	10.4	AT+CGDSCONT Define Secondary PDP Context.....	196
	10.5	AT+CGCMOD PDP Context Modify.....	198
	10.6	AT+CEREG EPS Network Registration Status	199
	10.7	AT+CGEREP Packet Domain Event Reporting	201
	10.8	AT+CGPADDR Show PDP Address	204

10.9	AT+CGPIAF	Select Printing IP address format.....	206
10.10	AT+CGEQOSRDP	EPS Quality of Service Read Dynamic Parameters.....	208
10.11	AT+CGCONTRDP	PDP context read dynamic parameters.....	210
10.12	AT+CGSCONTRDP	Secondary PDP Context Read Dynamic Parameters	212
10.13	AT+CGTFT	Traffic Flow Template	213
10.14	AT+CGTFTRDP	Traffic Flow Template Read Dynamic Parameters	216
10.15	AT+CGAUTH	Define PDP Context Authentication Parameters	219
10.16	AT+CGDATA	Enter data state	221
10.16.1		Automatic deactivation of PDP context during dial-up PPP.....	222
10.17	AT+CGSMS	Select Service for MO Short messages	223
10.18	ATD*99#	Request Packet Domain Service	224
11.	Short Message Service (SMS) Commands.....		225
11.1	SMS Parameters.....		225
11.2	AT+CMGC	Send SMS Command.....	229
11.3	AT+CMGD	Delete short message.....	230
11.4	AT+CMGF	Select SMS message format	231
11.5	AT+CMGL	List SMS messages from preferred store.....	232
11.6	AT+CMGR	Read SMS messages	234
11.7	AT+CMGS	Send SMS.....	236
11.8	AT+CMGW	Write Short Messages to Memory	237
11.9	AT+CMSS	Send short messages from storage	239
11.10	AT+CNMA	New Message Acknowledgement to UE/TE	240
11.11	AT+CNMI	SMS Event Reporting Configuration	242
11.12	AT+CPMS	Preferred SMS message storage.....	245
11.13	AT+CSCA	SMS Service Center Address.....	247
11.14	AT+CSDH	Show SMS text mode parameters.....	248
11.15	AT+CSMP	Set SMS Text Mode Parameters	249
11.16	AT+CSMS	Select Message Service.....	251
11.17	AT^SMGL	List Short Messages from preferred store without setting status to REC READ	253
11.18	AT^SMGR	Read short message without setting status to REC READ.....	254
11.19	AT+CSAS	Save SMS Settings.....	255
11.20	AT+CRES	Restore SMS Settings	256
12.	(U)SIM related Commands.....		257
12.1	AT+CCID	(U)SIM Card Identification Number.....	257
12.2	AT+CRSM	Restricted SIM Access.....	259
12.3	AT+CSIM	Generic (U)SIM Access	261
12.4	AT+CCHO	Open logical channel	262
12.5	AT+CCHC	Close logical channel	263
12.6	AT+CGLA	Generic logical channel access	264
13.	(U)SIM Application Toolkit (SAT) Commands.....		265
13.1	AT^SSTA	Remote-SAT Interface Activation	267
13.2	AT+STKPRO	SAT Proactive Command URCs.....	269
13.3	AT+STKTR	SAT Terminal Response Commands	276
13.4	AT+STKENV	SAT Envelope Command.....	281
13.5	AT+STKCC	SAT Call Control Notification.....	283
13.6	AT+STKCNF	SAT Proactive Session Status	285
13.7	Examples of how to Configure and Use the SAT		287

14. Phonebook Commands.....	289
14.1 AT+CNUM Read own numbers.....	289
15. Miscellaneous Commands.....	290
15.1 A/ Repeat Previous Command Line.....	290
15.2 ATS3 Command Line Termination.....	291
15.3 ATS4 Response Formatting.....	292
15.4 ATS5 Command Line Editing.....	293
15.5 AT^SBNR Binary Read.....	294
15.6 AT^SBNW Binary Write.....	296
15.7 AT^SFDL Firmware Download.....	298
15.8 AT^SFDOA Firmware Download.....	299
15.8.1 SFDOA Error Codes.....	301
15.8.2 Example: Upgrading Firmware from an External Host.....	301
16. Hardware related Commands.....	302
16.1 AT+CCLK Real Time Clock.....	302
16.2 AT^SBV Battery/Supply Voltage.....	304
16.3 AT^SCTM Critical Operating Temperature Monitoring.....	305
16.4 AT^SLED LED Feature.....	307
17. Appendix.....	309
17.1 Available AT Commands and Dependency on SIM PIN.....	309
17.2 Availability of AT Commands Depending on Operating Mode of ME.....	313
17.3 AT Command Settings storable with AT&W.....	317
17.4 Factory Default Settings Restorable with AT&F.....	318
17.5 Summary of Unsolicited Result Codes (URC).....	319
17.6 Alphabetical List of AT Commands.....	322

List of Tables

Table 1.1:	Symbols used to mark the type of parameters	14
Table 1.2:	Symbols used to indicate storage options or correlations with other commands	14
Table 1.3:	Symbols used to mark different types of default values of parameters	14
Table 1.4:	Types of AT commands and responses	15
Table 1.5:	Exemplary escape sequences generated by EMS31-X for its non-UCS2 output	19
Table 2.1:	General "CME ERROR" Codes (3GPP TS 27.007)	37
Table 2.2:	EPS related "CME ERROR" Codes (3GPP TS 27.007)	38
Table 2.3:	SMS related "CMS ERROR" Codes (3GPP TS 27.005)	38
Table 9.1:	Applicability of <code>AT^SICS <conParmTag></code> values	138
Table 9.2:	Applicability of <code>AT^SISS <srvParmTag></code> values	141
Table 15.1:	General "SFDOA Error" Codes	301
Table 16.1:	EMS31-X Status and Mode Indication via LED	307
Table 17.1:	Available AT Commands and Dependency on SIM PIN.....	309
Table 17.2:	Availability of AT Commands Depending on Operating Mode of ME	313
Table 17.3:	Settings Stored to User Profile on ASC0	317
Table 17.4:	Factory Default Settings Restorable with AT&F	318
Table 17.5:	Summary of Unsolicited Result Codes (URC)	319
Table 17.6:	Alphabetical List of AT Commands.....	322

List of Figures

Figure 1.1:	Main character table of GSM 7 bit default alphabet.....	20
Figure 1.2:	Extension character table of GSM 7 bit default alphabet.....	21
Figure 13.1:	Remote-SAT Context Diagram	266

1. Introduction

1. Introduction

1.1 Scope of the document

This document presents the AT Command Set for
EMS31-X LTE Engine, Release 03.006.

Before using the EMS31-X or upgrading to a new firmware version please read the latest product information provided in "[EMS31-X Release Notes, Version 03.006](#)".

More information is available at <http://m2m.gemalto.com/>.

DISCLAIMER:

AT commands or parameters not documented in this document are subject to change and reserved for future use. Gemalto M2M GmbH reserves the right to modify or even eliminate these options in later releases.

EMS31-X features packet switched (PS) data capability, but does not support circuit switched (CS) data transmission. However, for reasons of compatibility with other products, and for compliance with 3GPP TS specifications, some AT commands imply parameters or values related to CS data capability.

1.2 Related documents

1.2 Related documents

- [1] EMS31-X Release Notes, Version 03.006
- [2] EMS31-X Hardware Interface Description, Version 03.006
- [3] Multiplexer User's Guide
- [4] [3GPP TS 27.010](#) (descendant of 3GPP TS 07.10): Terminal Equipment to User Equipment (TE-UE) multiplexer protocol
- [5] Multiplex Driver Developer's Guide
- [6] Multiplex Driver Installation Guide
- [7] Application Note 16: Updating EMS31-X Firmware
- [8] Application Note 62: Transport Layer Security for Client TCP/IP Services
- [9] [3GPP TR 21.905](#) (descendant of 3GPP TR 01.04): Vocabulary for 3GPP Specifications
- [10] International Organization for Standardization (ISO): [ISO/IEC10646](#): Universal Multiple-Octet Coded Character Set (UCS) - Part 1: Architecture and Basic Multilingual Plane.
This international standard is [closely related](#) to the [Unicode Standard](#) published by the [Unicode Consortium](#)
- [11] The [Unicode Consortium](#): [Mapping of ETSI GSM 03.38 7-bit default alphabet characters into Unicode \[TXT!\]](#)
- [12] [ITU-T V.24](#) List of definitions for interchange circuits between data terminal equipment (DTE) and data circuit-terminating equipment (DCE)
- [13] [ITU-T V.250](#) Serial asynchronous automatic dialling and control
- [14] [3GPP TS 11.11](#): Specification of the Subscriber Identity Module - Mobile Equipment (SIM - ME) interface
- [15] [3GPP TS 31.101](#): UICC-terminal interface; Physical and logical characteristics
- [16] [3GPP TS 31.102](#): Characteristics of the Universal Subscriber Identity Module (USIM) application
- [17] [ETSI TS 102 221](#): Smart Cards; UICC-Terminal interface; Physical and logical characteristics
- [18] [3GPP TS 11.14](#): Specification of the SIM Application Toolkit for the Subscriber Identity Module - Mobile Equipment (SIM - ME) interface
- [19] [3GPP TS 31.111](#): Universal Subscriber Identity Module (USIM) Application Toolkit (USAT)
- [20] [ETSI TS 102 223](#): Smart Cards; Card Application Toolkit (CAT)
- [21] [3GPP TS 22.002](#) (descendant of 3GPP TS 22.02): Circuit Bearer Services (BS) supported by a Public Land Mobile Network (PLMN)
- [22] [3GPP TS 22.004](#) (descendant of 3GPP TS 02.04): General on supplementary services
- [23] [3GPP TS 22.030](#) (descendant of 3GPP TS 02.30): Man-Machine Interface (MMI) of the Mobile Station (MS)
- [24] [3GPP TS 22.060](#) (descendant of 3GPP TS 02.60): General Packet Radio Service (GPRS); Service description; Stage 1
- [25] [3GPP TS 23.060](#) (descendant of 3GPP TS 03.60): General Packet Radio Service (GPRS); Service description; Stage 2
- [26] [3GPP TS 22.081](#) (descendant of 3GPP TS 02.81): Line Identification Supplementary Services; Stage 1
- [27] [3GPP TS 22.082](#) (descendant of 3GPP TS 02.82): Call Forwarding (CF) Supplementary Services; Stage 1
- [28] [3GPP TS 22.083](#) (descendant of 3GPP TS 02.83): Call Waiting (CW) and Call Holding (HOLD); Supplementary Services; Stage 1
- [29] [3GPP TS 22.085](#) (descendant of 3GPP TS 02.85): Closed User Group (CUG) supplementary services; Stage 1
- [30] [3GPP TS 22.088](#) (descendant of 3GPP TS 02.88): Call Barring (CB) supplementary services; Stage 1
- [31] [3GPP TS 22.090](#) (descendant of 3GPP TS 02.90): Unstructured Supplementary Service Data (USSD); Stage 1
- [32] [3GPP TS 23.038](#) (descendant of 3GPP TS 03.38): Alphabets and language specific information
- [33] [3GPP TS 23.040](#) (descendant of 3GPP TS 03.40): Technical realization of the Short Message Service (SMS)
- [34] [3GPP TS 23.041](#) (descendant of 3GPP TS 03.41): Technical realization of Cell Broadcast Service (CBS)

1.2 Related documents

- [35] [3GPP TS 23.107](#): Quality of Service (QoS) concept and architecture
- [36] [3GPP TS 24.011](#) (descendant of 3GPP TS 04.11): Point-to-Point (PP) Short Message Service (SMS) support on mobile radio interface
- [37] [3GPP TS 24.008](#) (descendant of 3GPP TS 04.08): Mobile radio interface Layer 3 specification; Core network protocols; Stage 3
- [38] [3GPP TS 24.080](#) (descendant of 3GPP TS 04.80): Mobile radio interface layer 3 supplementary services specification; Formats and coding
- [39] [3GPP TS 24.301](#) Non-Access-Stratum (NAS) protocol for Evolved Packet System (EPS)
- [40] [3GPP TS 25.331](#) Radio Resource Control (RRC)
- [41] [3GPP TS 25.133](#) Requirements for support of radio resource management
- [42] [3GPP TS 27.005](#) (descendant of 3GPP TS 07.05): Use of Data Terminal Equipment - Data Circuit terminating Equipment (DTE - DCE) interface for Short Message Service (SMS) and Cell Broadcast Service (CBS)
- [43] [3GPP TS 27.007](#) (descendant of 3GPP TS 07.07): AT command set for User Equipment (UE)
- [44] [3GPP TS 27.060](#) (descendant of 3GPP TS 07.60): Mobile Station (MS) supporting Packet Switched Services
- [45] [3GPP TS 22.101](#) (descendant of 3GPP TS 02.07 and 3GPP TS 02.40): Service principles
- [46] [Common PCN Handset Specification \(CPHS\) v4.2 \[ZIP!\]](#)
- [47] [3GPP TS 36.133](#) Evolved Universal Terrestrial Radio Access (E-UTRA); Requirements for support of radio resource management
- [48] [3GPP TS 45.008](#) (descendant of GSM 05.08): Radio subsystem link control

1.3 Document Conventions

Throughout this document EMS31-X is also referred to as LTE Engine or short UE, MS (Mobile Station) or Mobile Terminal (MT). In related documents the equivalent term DCE (Data Communication Equipment) may be found. AT commands are used to control the EMS31-X. The controlling device is referred to as Customer Application or short TE. Related documents may use the equivalent term DTE (Data Terminal Equipment). All abbreviations and acronyms used throughout this document are based on 3GPP specifications. For definitions please refer to 3GPP TR 21.905 [9].

1.3.1 Quick Reference Table

Each AT command description includes a table similar to the example shown below. The table is intended as a quick reference to indicate the following functions:

- PIN:** Is the AT command PIN protected?
+ Yes
- No
± Usage is dependent on conditions specified for the command, or not all command types are PIN protected (for example write command PIN protected, read command not).
Note: The table provided in Section 17.1, [Available AT Commands and Dependency on SIM PIN](#) uses the same symbols.
- Is the AT command supported in AIRPLANE mode?
+ Yes
- No
± In AIRPLANE mode, not all described functions are available. For example, the test or read command is usable, the write or execute command is not. Furthermore, only some of the listed parameters can be changed in AIRPLANE mode. A typical example is `AT^SCFG` that controls different features.
- Last:** If commands are concatenated, this AT command must be the last one.
+ Yes
- No
Note: See also Section 1.4, [AT Command Syntax](#) for details on concatenated AT commands.

Example:

PIN	→	Last
-	-	-

1.3.2 Superscript notation for parameters and values

Table 1.1: Symbols used to mark the type of parameters

Parameter type	Meaning
<param> ^(num)	Parameter value must be numeric type.
<param> ^(str)	Parameter value must be string type.
<param> ^(text)	Parameter value is a string according to selected character set. Not enclosed in double quotes
<param> ^(u)	Unspecified, i.e. parameter value may be numeric or string type.

Table 1.2: Symbols used to indicate storage options or correlations with other commands

Parameter option	Meaning
<param> ^(+CSCS)	Parameter value has to be (is) coded according to current setting of <chset> (see AT+CSCS for details)
<param> ^(&W)	Parameter value is stored to user profile in non-volatile memory after executing AT&W
<param> ^(&V)	Parameter value is displayed by AT&V
<param> ^(NV)	Parameter is stored in non-volatile memory.

Table 1.3: Symbols used to mark different types of default values of parameters

Value option	Meaning
[x]	Default value set if parameter is omitted.
x ^(&F)	Factory value restored by AT&F
x ^(P)	Powerup value of a parameter not stored in non-volatile memory.
x ^(D)	Delivery value of a parameter which may be overridden from non-volatile setting (refer to symbol ^(NV) and symbol ^(&W) above).

1.4 AT Command Syntax

The "AT" or "at" prefix must be set at the beginning of each command line. To terminate a command line enter <CR>. Commands are usually followed by a response that includes "<CR><LF><response><CR><LF>". Throughout this document, only the responses are presented, <CR><LF> are omitted intentionally.

Table 1.4: Types of AT commands and responses

AT command type	Syntax	Function
Test command	AT+CXXX=?	The test response returns supported parameters and supported values. Values can be shown as a list of single values or a range, for example, (1,2,3) or (1-3).
Read command	AT+CXXX?	This command returns the currently set value of the parameter or parameters.
Write command	AT+CXXX=<...>	This command sets user-definable parameter values.
Exec(ution) command	AT+CXXX	The execution command reads non-variable parameters determined by internal processes in the UE.

1.4.1 Using Parameters

- Multiple parameters are separated by commas. This applies to write commands, command responses, URCs and result codes. Please note that throughout this document spaces behind commas may be added for better readability.
- Optional parameters are enclosed in square brackets. If optional parameters are omitted, the current settings are used until you change them.
- Optional parameters or subparameters can be omitted unless they are followed by other parameters. If you want to omit a parameter in the middle of a string it must be replaced by a comma.
- A parameter value enclosed in square brackets represents the value that will be used if an optional parameter is omitted. See also example 2.
- When the parameter is a character string the string must be enclosed in quotation marks. Symbols in quotation marks will be recognized as strings.
- All spaces will be ignored when using strings without quotation marks.
- It is possible to omit the leading zeros of strings which represent numbers.
- If an optional parameter of a ITU-T V.250 command is omitted, its value is assumed to be 0.

1.4.2 Concatenating AT Commands

Concatenating AT commands on the same line is possible, though not recommended because of restrictions listed below (for more details see ITU-T V.250 [13]).

When concatenating AT commands you need to enter the "AT" or "at" prefix only once at the beginning of a command line. Basic commands (i.e., ITU-T V.250 commands) are concatenated without delimiter. Extended commands (i.e., commands starting with AT+ or AT^) use a semicolon as delimiter.

Disadvantages and restrictions:

- There is no way to control the minimum time to wait between finishing an AT command and sending the next one. Please refer to Section 1.5, [Communication between Customer Application and EMS31-X](#) for details about timing.
- The sequence of processing the AT commands may be different from the sequential order of command input.
- Many AT commands cannot be concatenated (see list below). Concatenating these commands might end up with an error result code, or leads to an unexpected order of responses.

AT command type	Comment
3GPP TS 27.007 commands	Cannot be concatenated with extended commands (prefix AT^S)
3GPP TS 27.005 commands (SMS)	To be used standalone
Commands starting with AT&	To be used standalone
AT+IPR	To be used standalone

1.5 Communication between Customer Application and EMS31-X

After power-up or restart ensure that the UE is in ready state before trying to send any AT command or data. For detailed information on timing conditions, signal states and particularly the startup behavior of the EMS31-X's signal lines refer to the Hardware Interface Description [2].

Leaving hardware flow control unconsidered the Customer Application (TE) is coupled with the EMS31-X (UE) via a receive and a transmit line.

Since both lines are driven by independent devices collisions may (and will) happen. For example, if the TE issues an AT command and the EMS31-X starts sending a URC. This will probably cause the TE to misinterpret the URC being part of the AT command's response. To avoid this conflict the following measures must be taken:

- If an AT command is finished (with "OK" or "ERROR") the TE shall always wait at least 100 ms before sending the next one. This applies to bit rates of 9600 bps or higher (see [AT+IPR](#)). At bit rates below 9600 bps the delay must be longer: 300 ms at 1200 bps, and 500 ms at 300 bps.
The pause between two AT commands gives the EMS31-X the opportunity to the transmission of pending URCs and get necessary service.
- The TE shall communicate with the EMS31-X using activated echo ([ATE1](#)), i.e. the EMS31-X echoes characters received from the TE.
Hence, when the TE receives the echo of the first character "A" of the AT command just sent by itself it has control both over the receive and the transmit paths.

Using Backspace at command line:

- As the standard GSM alphabet does not provide a backspace functionality the EMS31-X is designed to use the character "08" (hex 0x08) as backspace for command line input. This allows the user to easily erase the last character when writing an AT command. On the other hand, this solution requires entering the escape sequence \08 for writing the "ò" character in GSM character string parameters.
- If command echo is enabled ([ATE1](#)) Backspace may cause 08 - 32 - 08 (decimal) character sequence or no echo, depending on serial interface and speed of character input.

1.6 Supported character sets

1.6 Supported character sets

EMS31-X supports two character sets: *GSM 7 bit*, also referred to as GSM alphabet or SMS alphabet (3GPP TS 23.038 [32]) and *UCS2 16 bit* (ISO-10646 [10]). See [AT+CSCS](#) for information about selecting the character set. Character tables can be found below.

Explanation of terms

- **Escape Character**

There are two types of escape sequences which lead to an alternative interpretation on subsequent characters by the UE:

- **AT command interface**

Escape sequences starting with character value 0x5C are used for the UE's non-UCS2 input and output.

- **GSM 7 bit default alphabet**

The escape sequence used within a text coded in the GSM 7 bit default alphabet is starting with character value 0x1B and needs to be correctly interpreted by the TE, both for character input and output. To the EMS31-X, an escape sequence appears like any other byte received or sent.

For SMS user data input after the prompt '>' in text mode ([AT+CMGF](#))=1 and [AT+CSCS](#)="GSM" the character 0x1A is interpreted as 'CTRL-Z'. The character 0x1B (interpreted as 'ESC') as well as the escape character 0x5C (is interpreted as 'Ö'), therefore both escape mechanisms are not supported in this case.

- **TE Character Set**

The character set currently used by the Customer Application is selected with [AT+CSCS](#). It is recommended to select UCS2 setting.

- **Data Coding Scheme (DCS)**

DCS is part of a short message and is saved on the SIM. When writing a short message to the SIM in text mode, the DCS stored with [AT+CSMP](#) is used and determines the coded character set.

- **International Reference Alphabet (IRA)**

The International Reference Alphabet is equivalent to ASCII (American Standard Code for Information Interchange) and ISO 646, i.e. it defines a 7-bit coded character set. The mapping can be obtained from the character set tables below (UCS2 values 0x0000 to 0x007F).

When you enter characters that are not valid characters of the supported alphabets the behavior is undefined. If GSM alphabet is selected, all characters sent over the serial line (between TE and UE) must be in the range from 0 to 127 (7 bit range).

Note: If the UE is configured for GSM alphabet, but the Customer Application (TE) uses ASCII, bear in mind that some characters have different code values, such as the following:

- "@" character with GSM alphabet value 0 is not displayable by an ASCII terminal program, e.g. Microsoft® Hyperterminal®.
- "@" character with GSM alphabet value 0 will terminate any C string! This is because value 0 is defined as C string end tag. Therefore, the GSM Null character will cause problems on application level when using 'C'-functions, e.g. "strlen()". Using an escape sequence as shown in the table below solves the problem. By the way, this may be the reason why even network providers sometimes replace '@' with "@=" in their SIM application.
- Some other characters of the GSM alphabet may be misinterpreted by an ASCII terminal program. For example, GSM "ö" (as in "Börse") is assumed to be "l" in ASCII, thus resulting in "B|rse". This is because in both alphabets there are different characters assigned to value 7C (hexadecimal).

If the TE sends characters differently coded or undefined in ASCII or GSM (e.g. Ä, Ö, Ü) it is possible to use escape sequences. The UE's input parser translates the escape sequence to the corresponding GSM character value.

Note:

The UE also uses escape sequences for its non-UCS2 output: Quotation mark (") and the escape character itself (\, respectively Ö in GSM alphabet) are converted, as well as all characters with a value below 32 (hexadecimal 0x20).

Hence, the input parser of the Customer Application needs to be able to translate escape sequences back to the corresponding character of the currently used alphabet.

Unsupported characters are shown as a space (hexadecimal 0x20).

1.6 Supported character sets

Table 1.5: Exemplary escape sequences generated by EMS31-X for its non-UCS2 output

Character Value	ASCII Character	GSM Character	UCS2 Character	Escape Sequence	Numeric Escape Sequence
0x5C	\	Ö	00D6	\5C	0x5C 0x35 0x43
0x22	"	"	0022	\22	0x5C 0x32 0x32
0x00	NULL	@	n/a	\00	0x5C 0x30 0x30

Usually terminal programs are not able to recognize escape sequences, and thus, handle them as normal characters.

To prevent misinterpretation of control characters or special characters it is recommended to always use UCS2 alphabet and PDU mode.

1.6 Supported character sets

1.6.1 GSM alphabet tables and UCS2 character values

This section provides tables for the GSM default alphabet (3GPP TS 23.038 [32]) supported by the EMS31-X. Below any GSM character find the corresponding two byte character value of the UCS2 alphabet. For details refer to "ETSI GSM 03.38 mapping into Unicode" [11].

Main character table of GSM 7 bit default alphabet				b7	0	0	0	0	1	1	1	1
				b6	0	0	1	1	0	0	1	1
				b5	0	1	0	1	0	1	0	1
b4	b3	b2	b1		0	1	2	3	4	5	6	7
0	0	0	0	0	@ 0040	Δ 0394	SP 0020	0 0030	i 00A1	P 0050	¿ 00BF	p 0070
0	0	0	1	1	£ 00A3	_ 005F	! 0021	1 0031	A 0041	Q 0051	a 0061	q 0071
0	0	1	0	2	\$ 0024	Φ 03A6	" 0022	2 0032	B 0042	R 0052	b 0062	r 0072
0	0	1	1	3	¥ 00A5	Γ 0393	# 0023	3 0033	C 0043	S 0053	c 0063	s 0073
0	1	0	0	4	è 00E8	Λ 039B	* 00A4	4 0034	D 0044	T 0054	d 0064	t 0074
0	1	0	1	5	é 00E9	Ω 03A9	% 0025	5 0035	E 0045	U 0055	e 0065	u 0075
0	1	1	0	6	ù 00F9	Π 03A0	& 0026	6 0036	F 0046	V 0056	f 0066	v 0076
0	1	1	1	7	ì 00EC	Ψ 03A8	' 0027	7 0037	G 0047	W 0057	g 0067	w 0077
1	0	0	0	8	ò 00F2 ³⁾	Σ 03A3	(0028	8 0038	H 0048	X 0058	h 0068	x 0078
1	0	0	1	9	ç 00E7	⊙ 0398) 0029	9 0039	I 0049	Y 0059	i 0069	y 0079
1	0	1	0	10/A	LF [LF] ²⁾	⊚ 039E	* 002A	: 003A	J 004A	Z 005A	j 006A	z 007A
1	0	1	1	11/B	∅ 00D8	¹⁾	+ 002B	; 003B	K 004B	Ä 00C4	k 006B	ä 00E4
1	1	0	0	12/C	ø 00F8	Æ 00C6	, 002C	< 003C	L 004C	Ö 00D6	l 006C	ö 00F6
1	1	0	1	13/D	CR [CR] ²⁾	æ 00E6	- 002D	= 003D	M 004D	Ñ 00D1	m 006D	ñ 00F1
1	1	1	0	14/E	À 00C5	ß 00DF	. 002E	> 003E	N 004E	Ü 00DC	n 006E	ü 00FC
1	1	1	1	15/F	á 00E5	É 00C9	/ 002F	? 003F	O 004F	Ş 00A7	o 006F	à 00E0

Figure 1.1: Main character table of GSM 7 bit default alphabet

- 1) This code is an escape to the following extension of the 7 bit default alphabet table.
- 2) This code is not a printable character and therefore not defined for the UCS2 alphabet. It shall be treated as the accompanying control character.
- 3) See Section 1.5 for further details on using backspace and "ò" character.

Extension character table of GSM 7 bit default alphabet				b7	0	0	0	0	1	1	1	1
				b6	0	0	1	1	0	0	1	1
				b5	0	1	0	1	0	1	0	1
b4	b3	b2	b1		0	1	2	3	4	5	6	7
0	0	0	0	0								
									007C			
0	0	0	1	1								
0	0	1	0	2								
0	0	1	1	3								
0	1	0	0	4		^						
						005E						
0	1	0	1	5						€ ²⁾		
										20AC		
0	1	1	0	6								
0	1	1	1	7								
1	0	0	0	8			{					
							007B					
1	0	0	1	9			}					
							007D					
1	0	1	0	10 /A	³⁾	[LF]						
1	0	1	1	11 /B								
1	1	0	0	12 /C				[
								005B				
1	1	0	1	13 /D				~				
								007E				
1	1	1	0	14 /E]				
								005D				
1	1	1	1	15 /F			\					
							005C					

Figure 1.2: Extension character table of GSM 7 bit default alphabet

- 1) This code value is reserved for the extension to another extension table. On receipt of this code, a receiving entity shall display a space until another extension table is defined.
- 2) This code represents the EURO currency symbol. The code value is the one used for the character 'e'. Therefore a receiving entity which is incapable of displaying the EURO currency symbol will display the character 'e' instead.
- 3) This code is defined as a Page Break character and may be used for example in compressed CBS messages. Any mobile which does not understand the 7 bit default alphabet table extension mechanism will treat this character as Line Feed.

1.6 Supported character sets

If the Customer Application receives a code where a symbol is not represented in Figure 1.2, [Extension character table of GSM 7 bit default alphabet](#) it shall display the character shown in the main GSM 7 bit default alphabet table (see Figure 1.1, [Main character table of GSM 7 bit default alphabet](#)).

1.6.2 UCS2 and GSM character coding and conversion

This section provides basic information on how to handle input and output character conversion, e.g. for SMS text mode, if the character representation of UE and Customer Application differ, i.e. if the Data Coding Scheme and the TE character set use different mappings.

1.6.2.1 Output of SIM data (UE to TE)

Used character set	DCS = 7 bit GSM	DCS = 8 bit Data	DCS = 16 bit UCS2
GSM	Case 1 GSM (1:1)	Case 2 8 bit to IRA (1:2)	Case 3 UCS2 to IRA (2:4)
UCS2	Case 4 GSM to IRA (1:4)	Case 5 8 bit to IRA (1:4)	Case 6 UCS2 to IRA (2:4)

Note: The ratio of SIM bytes to output bytes is given in parentheses.

Case 1

Every GSM character is sent to the TE as it is (8-bit value with highest bit set to zero).

Example: 47'H, 53'H, 4D'H → 47'H, 53'H, 4D'H, displayed as "GSM"

Case 2

Every data byte is sent to the TE as 2 IRA characters each representing a halfbyte.

Example: B8'H (184 decimal) → 42'H, 38'H, displayed as "B8"

Case 3

Every 16-bit UCS2 value is sent to the TE as 4 IRA characters.

Example: C4xA7'H (50343 decimal) → 43'H, 34'H, 41'H, 37'H, displayed as "C4A7"

Problem: An odd number of bytes leads to an error because there are always two bytes needed for each UCS2 character

Case 4

Every GSM character is sent to the TE as 4 IRA characters to show UCS2 in text mode.

Example: 41'H ("A") → 30'H, 30'H, 34'H, 31'H, displayed as "0041"

Case 5

Every data byte is sent to the TE as IRA representation of UCS2 (similar to case 4).

Example: B2'H → 30'H, 30'H, 42'H, 32'H, displayed as "00B2"

Case 6

Every 16-bit value is sent to the TE as IRA representation of it. It is assumed that number of bytes is even.

Example: C3x46'H → 43'H, 33'H, 34'H, 36'H, displayed as "C346"

1.6 Supported character sets

1.6.2.2 Input of SIM data (TE to UE)

Used character set	DCS = 7 bit GSM	DCS = 8 bit Data	DCS = 16 bit UCS2
GSM	Case 1 GSM (1:1)	Case 2 IRA to 8 bit (2:1)	Case 3 IRA to 16 bit (4:2)
UCS2	Case 4 UCS2 to GSM (4:1)	Case 5 UCS2 to 8 bit (4:1)	Case 6 UCS2 to 16 bit (4:2)

Note: The ratio between the number of input characters and bytes stored on the SIM is given in parentheses.

Case 1

Every character is sent from TE to UE as GSM character (or ASCII with standard terminal emulation, e.g. Hyperterminal®).

Character value must be in range from 0 to 127 because of 7-bit GSM alphabet.

To reach maximum SMS text length of 160 characters in 140 bytes space characters will be compressed on SIM. This must be set using the parameter `<dcs>` of `AT+CSMP` (add 64).

Example: "ABCDEFGH" typed is sent and stored uncompressed as → 4142434445464748'H (stored compressed as 41E19058341E91'H)

Case 2

Every data byte is sent as 2 IRA characters.

Maximum text length is 280 IRA characters which will be converted into 140 bytes SMS binary user data

Example: "C8" typed is sent as 43'H, 38'H → stored as C8'H

Case 3

Every 16-bit value is sent as 4 IRA characters.

Maximum text length is 280 IRA characters which will be converted into 70 UCS2 characters (16-bit each)

Number of IRA characters must be a multiple of four because always 4 half bytes are needed for a 16-bit value

Example: "D2C8" typed is sent as 44'H, 32'H, 43'H, 38'H → stored as D2C8'H

Case 4

Every GSM character is sent as 4 IRA characters representing one UCS2 character.

Example: To store text "ABC" using UCS2 character set you have to type "004100420043".

This is sent as 30'H,30'H,34'H,31'H, 30'H,30'H,34'H,32'H, 30'H,30'H,34'H,33'H → detected as IRA representation of 3 UCS2 characters, converted to GSM character set and stored as 41'H, 42'H, 43'H.

Maximum input is 640 IRA characters representing 160 UCS2 characters when compression is active. These are converted to 160 GSM 7-bit characters.

Without compression only 140 GSM characters can be stored which are put in as 560 IRA characters.

Values of UCS2 characters must be smaller than 80'H (128 decimal) to be valid GSM characters.

Number of IRA characters must be a multiple of four. Problems:

- "41" → Error, there are four IRA characters (two bytes) needed
- "0000" → Error, not an UCS2 character
- "4142" → Error, value of UCS2 character > 7F'H
- "008B" → Error, value of UCS2 character > 7F'H

This affects the maximum input length of a string)

Case 5

Every UCS2 character is sent as 4 IRA characters and is converted into two 8-bit values. This means that the first two characters have to be '00'.

Example: UCS2 character 009F'H typed as "009F" is sent as 30'H,30'H,39'H,46'H → converted into 8-bit value 9F'H.

Maximum number of UCS2 characters is 140 which are represented by 560 IRA characters. Number of IRA characters must be a multiple of four.

Case 6

Every UCS2 character is sent as 4 IRA characters each and is converted into a 16-bit value again.

Example: UCS2 character 9F3A'H typed as "9F3A" is sent as 39'H,46'H,33'H,41'H → converted into 9F3A'H.

Maximum number of UCS2 characters is 70 which are represented by 280 IRA characters. Number of IRA characters must be a multiple of four.

Invalid UCS2 values must be prevented.

1.7 Unsolicited Result Code Presentation

URC stands for Unsolicited Result Code and is a report message issued by the UE without being requested by the TE, i.e. an URC is issued automatically when a certain event occurs. Hence, a URC is not issued as part of the response related to an executed AT command.

Typical events leading to URCs are incoming calls ("RING"), waiting calls, received short messages, changes in temperature, network registration etc.

For most of these messages, the UE needs to be configured whether or not to send a URC. Descriptions of these URCs are provided with the associated AT command. A summary of all URCs can be found in Section [17.5, Summary of Unsolicited Result Codes \(URC\)](#).

Important: If the interface used for URC output is reserved by an active data connection or a long running AT command, URCs are buffered internally and will be issued after the interface becomes idle again. A pending URC will be signaled on the URC output interface via RING line. This allows to systematically suspend any longer data connection (refer [+++](#) and [ATO](#)) to check for pending URCs after being signaled!

For detailed information regarding configuration of URC signaling refer to [AT^SCFG](#), "URC/Ringline", [<urcRinglineCfg>](#).

1.7.1 Common URCs

This section contains all URCs not associated to a certain AT command. They cannot be defined by the user and appear automatically when the voltage conditions described below occur.

Notes for "^SBC" URCs reporting undervoltage/overvoltage conditions:

Please refer to [\[2\]](#) for specifications regarding the minimum and maximum operating voltage limits. If the supply voltage exceeds the defined thresholds the UE switches off automatically. The automatic shutdown procedure is equivalent to the power-down initiated with the [AT^SMSO](#) command.

URC 1

`^SYSSTART`

Indicates that the UE has been restarted to Normal mode or Airplane mode and is ready to operate. For Normal and Airplane mode see [AT+CFUN](#).

URC 2

`^SBC: Undervoltage Warning`

Supply voltage is close to the defined undervoltage threshold.

URC 3

`^SBC: Undervoltage Shutdown`

Undervoltage threshold exceeded. UE automatically switches off.

URC 4

`^SBC: Overvoltage Warning`

Supply voltage is close to defined overvoltage threshold.

URC 5

`^SBC: Overvoltage Shutdown`

Overvoltage threshold exceeded. UE automatically switches off.

1.8 Errors and Messages

The command result codes "+CME ERROR: <err>" and "+CMS ERROR: <err>" indicate errors related to mobile equipment or network functionality.

The format of <err> can be either numeric or verbose and is selectable via [AT+CMEE](#).

A result error code terminates the execution of the command and prevents the execution of all remaining commands that may follow on the same command line. If so, neither "ERROR" nor "OK" result codes are returned for these commands. A 30 seconds timeout will deliver "ERROR" when the input of a command is not complete.

Using the wrong command syntax may result in errors: For example, using the execute command syntax although the command has no execute format, causes "ERROR" to be returned. Likewise, using the write command syntax although the command has no write format causes "+CME ERROR: <err>" to be returned.

See also:

- Section [2.9.1](#), [CME/CMS Error Code Overview](#)
- Section [2.5.1](#), [Verbose and numeric result codes](#)
- Section [3.1](#), [AT+CEER](#)

2. Configuration Commands

The AT Commands described in this chapter allow the external application to determine the EMS31-X's behaviour under various conditions.

2.1 AT&F Reset AT Command Settings to Factory Default Values

[AT&F](#) resets AT command settings to their factory default values.

For a list of affected parameters refer to Section [17.4, Factory Default Settings Restorable with AT&F](#).

Syntax

Exec Command	
AT&F[<value>]	
Response(s)	
OK	
PIN → Last	Reference(s)
- + -	V.250

Parameter Description

<value> ^(num)	
[0]	Reset parameters in Section 17.4, Factory Default Settings Restorable with AT&F to their factory default values.

2.2 AT&V Display current configuration

[AT&V](#) returns the current parameter setting. The configuration varies depending on whether or not PIN authentication has been done.

Syntax

Exec Command	
AT&V[<value>]	
Response(s)	
ACTIVE PROFILE: ... (see Section 2.2.1, AT&V responses) OK	
PIN → Last	Reference(s)
- + -	V.250

Parameter Description

<value> ^(num)	
[0]	Profile number

Note

- The parameter of [AT+CSDH](#) will only be displayed in SMS Text mode, see [AT+CMGF](#).

2.2.1 AT&V responses

The following table shows different kinds of responses depending on whether or not the PIN is entered.

PIN authentication done	No PIN authentication
<p>ACTIVE PROFILE: E1 Q0 V1 &C1 &D2 &S0 \Q3 S0:000 S3:013 S4:010 S5:008 S6:000 S7:060 S8:000 S10:002 +CMGF: 1 +CSDH: 0 +CNMI: 0,0,0,0,1 +ICF: 3 +IPR: 115200 +CMEE: 2 +CSMS: 0,1,1,1 +CEREG: 0,1 +COPS: 0,0,"operator" +CGSMS: 0 OK</p>	<p>ACTIVE PROFILE: E1 Q0 V1 &C1 &D2 &S0 \Q3 S0:000 S3:013 S4:010 S5:008 S6:000 S7:060 S8:000 S10:002 +ICF: 3 +IPR: 115200 OK</p>

2.3 AT&W Store AT Command Settings to User Defined Profile

AT&W stores the current AT command settings to a user defined profile in non-volatile memory of EMS31-X. The AT command settings will automatically be restored from the user defined profile during power-up or if **ATZ** is used. **AT&F** restores AT command factory default settings. Hence, until first use of **AT&W**, **ATZ** works as **AT&F**. A list of parameters stored to the user profile can be found at Section 17.3, [AT Command Settings storable with AT&W](#).

Syntax

Exec Command	
AT&W[<value>]	
Response(s)	
OK	
ERROR	
+CME ERROR: <err>	
PIN → Last	Reference(s)
- + -	V.250

Parameter Description

<value> ^(num)	
[0]	User Profile Number

2.4 ATQ Result Code Presentation Mode

ATQ controls if the EMS31-X transmits any result code to the TE. Other information text transmitted as response is not affected.

Syntax

Exec Command	
ATQ[<n>]	
Response(s)	
If <n>=0: OK	
If <n>=1: (none)	
PIN → Last	Reference(s)
- + -	V.250

Parameter Description

<n> ^{(num)(&V)(&W)}	
Result Code Presentation Mode. It is not recommended to change this value.	
[0] ^{(&F)(D)}	UE transmits result code.
1	Result codes are suppressed and not transmitted.

2.5 ATV Result code format mode

This command determines the contents of header and trailer transmitted with AT command result codes and information responses. Possible responses are described in Section 2.5.1, [Verbose and numeric result codes](#).

Syntax

Exec Command	
ATV[<value>]	
Response(s)	
OK ERROR	
PIN → Last	Reference(s)
- + -	ITU-T V.250 [13]

Parameter Description

<value>^{(num)(&V)(&W)}

[0]	Information response: <text><CR><LF> Short result code format: <numeric code><CR>
1(&F)(D)	Information response: <CR><LF><text><CR><LF> Long result code format: <CR><LF><verbose code><CR><LF>

2.5.1 Verbose and numeric result codes

Verbose format	Numeric format	Meaning
OK	0	command executed, no errors
CONNECT	1	link established
RING	2	ring detected
NO CARRIER	3	link not established or disconnected
ERROR	4	invalid command or command line too long
NO DIALTONE	6	no dial tone, dialling impossible, wrong mode
BUSY	7	remote station busy
NO ANSWER	8	no answer

2.6 ATZ Restore AT Command Settings from User Defined Profile

First [ATZ](#) resets the AT command settings to their factory default values, similar to [AT&F](#). Afterwards the AT command settings are restored from a user defined profile in non-volatile memory of EMS31-X, if one was stored with [AT&W](#) before. Any additional AT command on the same command line may be ignored. A delay of 300 ms is required before next AT command is sent.

Syntax

Exec Command	
ATZ[<value>]	
Response(s)	
OK	
PIN → Last	Reference(s)
- + -	V.250

Parameter Description

<value> ^(num)	
[0]	User Profile Number

2.7 AT+CFUN Functionality Level

AT+CFUN controls EMS31-X's functionality levels. It can also be used to reset the UE.

Syntax

<p>Test Command</p> <p>AT+CFUN=?</p> <p>Response(s)</p> <p>+CFUN: (list of supported <fun>s), (list of supported <rst>s)</p> <p>OK</p> <p>ERROR</p> <p>+CME ERROR: <err></p>	
<p>Read Command</p> <p>AT+CFUN?</p> <p>Response(s)</p> <p>+CFUN: <fun></p> <p>OK</p> <p>ERROR</p> <p>+CME ERROR: <err></p>	
<p>Write Command</p> <p>AT+CFUN=<fun>[, <rst>]</p> <p>Response(s)</p> <p>OK</p> <p>ERROR</p> <p>+CME ERROR: <err></p> <p>If <fun>= 0:</p> <p>OK</p> <p>If <rst>= 1:</p> <p>OK</p> <p>^SHUTDOWN</p> <p>^SYSSTART</p>	
<p>PIN → Last</p> <p>- + -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

<fun> ^(num)	Description
0	<p>Minimum functionality.</p> <p>Shuts down TX and RX RF-circuits whereby EMS31-X logs off from the network. Access to the (U)SIM is also disabled. AT commands whose execution requires a radio connection or (U)SIM access either return an error result code or reflect the limited operating state.</p> <p>To return to normal mode the command AT+CFUN=1 can be used. After this, SIM PIN authentication is necessary for registering to a network.</p>
1 ^(D)	<p>Full functionality level.</p>
4	<p>Airplane mode.</p> <p>Shuts down TX and RX RF-circuits whereby EMS31-X logs off from the network and switches to AT+COPS=2. AT commands whose execution requires a radio connection either return an error response (such as "NO CARRIER" or "+CME ERROR: NO NETWORK SERVICE") or reflect the limited operating</p>

state. A list of AT commands supported during Airplane mode can be found in Section 17.2, [Availability of AT Commands Depending on Operating Mode of ME](#).

The benefit of Airplane mode is that, at locations where no RF emission is allowed (typically airplanes, hospitals etc.), the subscriber can continue using network-independent features rather than powering off the entire device (e.g. a PDA or smartphone).

`<rst>`^(num)

Parameter `<rst>` applies only to `<fun>` 1 and 4.

- | | |
|-----|--|
| [0] | UE switches to <code><fun></code> level without reset. |
| 1 | UE resets and restarts to full functionality level or Airplane mode, depending on given <code><fun></code> value. " <code>^SHUTDOWN</code> " URC indicates that the UE has completed the reset procedure and will restart. " <code>^SYSSTART</code> " URC indicates that the UE has restarted and is ready to operate.
If fast switch off is enabled (see parameter <code><fso></code> in <code>AT^SCFG</code>) there will be no " <code>^SHUTDOWN</code> " URC. |

2.8 AT^SMSO Switch Off EMS31-X

AT^SMSO initiates EMS31-X's power-off procedure. Do not send any other AT command after this.

Low level of the ME's V180 signal and the URC "[^SHUTDOWN](#)" notify that the procedure has completed and the ME has entered the POWER DOWN mode. Therefore, be sure not to disconnect the operating voltage until the V180 signal has gone low and until the URC "[^SHUTDOWN](#)" is displayed. Otherwise, you run the risk of losing data. For further details on how to turn off the ME refer to [\[2\]](#). If a fast switch off (see parameter [<fso>](#) in [AT^SCFG](#)) is enabled, there is no reply like OK, ERROR or any "[^SHUTDOWN](#)" URC.

Syntax

Test Command
AT^SMSO=?
Response(s)
OK
Exec Command
AT^SMSO
Response(s)
^SMSO: MS OFF
OK
ERROR
PIN → Last
- + +

Unsolicited Result Code

[^SHUTDOWN](#)

Indicates that the power-off procedure is finished and the module will be switched off in less than 1 second. If [<fso>](#) is used to enable a fast UE switch off, there will be no "[^SHUTDOWN](#)" URC.

Note

- If [<fso>](#) is used to enable a fast UE switch off, flash access cycles (writing/deleting) will be finalized, but there will no longer be any network deregistration, the current settings will not be saved and there will be no further output on the interfaces. All other jobs will be deleted and logical data consistency cannot be guaranteed.

2.9 AT+CMEE Error Message Format

AT+CMEE controls the format of error result codes that indicates errors related to EMS31-X functionality. Format can be selected between plain "ERROR" output, error numbers or verbose "+CME ERROR: <err>" and "+CMS ERROR: <err>" messages.

Possible error result codes are listed in Table 2.1, General "CME ERROR" Codes (3GPP TS 27.007), Table 2.2, EPS related "CME ERROR" Codes (3GPP TS 27.007) and Table 2.3, SMS related "CMS ERROR" Codes (3GPP TS 27.005).

Syntax

<p>Test Command</p> <p>AT+CMEE=?</p> <p>Response(s)</p> <p>+CMEE: (list of supported<errMode>s)</p> <p>OK</p>	
<p>Read Command</p> <p>AT+CMEE?</p> <p>Response(s)</p> <p>+CMEE: <errMode></p> <p>OK</p>	
<p>Write Command</p> <p>AT+CMEE=<errMode></p> <p>Response(s)</p> <p>OK</p> <p>ERROR</p> <p>+CME ERROR: <err></p>	
<p>PIN → Last</p> <p>- + -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43], 3GPP TS 27.005 [42]</p>

Parameter Description

<errMode> ^{(num)(&V)(&W)}	
0(&F)(D)	Disable result code, i.e. only "ERROR" will be displayed.
1	Enable error result code with numeric values.
2	Enable error result code with verbose (string) values.

Example

To obtain enhanced error messages it is recommended to choose <errMode>=2.

```
AT+CMEE=2
OK
```

2.9.1 CME/CMS Error Code Overview

Table 2.1: General "CME ERROR" Codes (3GPP TS 27.007)

<err> Code	Text (if AT+CMEE=2)
0	phone failure
1	no connection to phone
2	phone adapter link reserved
3	operation not allowed
4	operation not supported
5	PH-SIM PIN required
6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	memory full
21	invalid index
22	not found
23	memory failure
24	text string too long
25	invalid characters in text string
26	dial string too long
27	invalid characters in dial string
30	no network service
31	network timeout
32	network not allowed - emergency calls only
40	network personalization PIN required
41	network personalization PUK required
42	network subset personalization PIN required
43	network subset personalization PUK required
44	service provider personalization PIN required
45	service provider personalization PUK required
46	corporate personalization PIN required
47	corporate personalization PUK required
48	PH-SIM PUK (master phone code) required
50	Incorrect parameters
60	System Failure

<err> Code	Text (if AT+CMEE=2)
100	unknown
256	operation temporary not allowed
257	call barred
258	phone busy
259	user abort
260	invalid dial string
261	SS not executed
262	SIM blocked
263	invalid block

Table 2.2: EPS related "CME ERROR" Codes (3GPP TS 27.007)

<err> Code	Text (if AT+CMEE=2)
103	illegal MS (#3)
106	illegal ME (#6)
107	EPS services not allowed (#)
111	PLMN not allowed (11)
113	roaming not allowed in this tracking area (#13)
132	service option not supported (#32)
133	requested service option not subscribed (#33)
134	service option temporary out of order (34)
151	invalid mobile class (#51)

Table 2.3: SMS related "CMS ERROR" Codes (3GPP TS 27.005)

<err> Code	Text (if AT+CMEE=2)
1	unassigned (unallocated) number
8	operator determined barring
10	call barred
21	short message transfer rejected
27	destination out of service
28	unidentified subscriber
29	facility rejected
30	unknown subscriber
38	network out of order
41	temporary failure
42	congestion
47	resources unavailable, unspecified
50	requested facility not subscribed
69	requested facility not implemented
81	invalid short message transfer reference value
95	invalid message, unspecified
96	invalid mandatory information
97	message type non-existent or not implemented

<err> Code	Text (if AT+CMEE=2)
98	message not compatible with short message protocol state
99	information element non-existent or not implemented
111	protocol error, unspecified
127	interworking, unspecified
128	telematic interworking not supported
129	short message type 0 not supported
130	cannot replace short message
143	unspecified TP-PID error
144	data coding scheme (alphabet) not supported
145	message class not supported
159	unspecified TP-DCS error
160	command cannot be actioned
161	command unsupported
175	unspecified TP-command error
176	TPDU not supported
192	SC busy
193	no SC subscription
194	SC system failure
195	invalid SME address
196	destination SME barred
197	SM rejected-duplicate SM
198	TP-VPF not supported
199	TP-VP not supported
208	do SIM SMS storage full
209	no SMS storage capability in SIM
210	error in MS
211	memory capacity exceeded
212	SIM application toolkit busy
213	SIM data download error
255	unspecified error cause
300	ME failure
301	SMS service of ME reserved
302	operation not allowed
303	operation not supported
304	invalid PDU mode parameter
305	invalid text mode parameter
310	SIM not inserted
311	SIM PIN required
312	PH-SIM PIN required
313	SIM failure
314	SIM busy
315	SIM wrong

<err> Code	Text (if AT+CMEE=2)
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	memory failure
321	invalid memory index
322	memory full
330	SMSC address unknown
331	no network service
332	network timeout
340	no +CNMA acknowledgement expected
500	unknown error
512	user abort
513	unable to store
514	invalid status
515	invalid character in address string
516	invalid length
517	invalid character in PDU
518	invalid parameter
519	invalid length or character
520	invalid character in text
521	timer expired
522	operation temporary not allowed

2.10 AT+CSCS Character Set

AT+CSCS write command informs the EMS31-X which character set is used by the TE. This enables the UE to convert character strings correctly between TE and UE character sets. Please also refer to Section 1.6, [Supported character sets](#).

Note: If UE-TE interface is set to 8-bit operation ([AT+ICF](#)) and selected character set is `<chset>="GSM"` (7-bit), the highest bit will be set to zero.

Syntax

<p>Test Command</p> <p>AT+CSCS=?</p> <p>Response(s)</p> <p>+CSCS: (list of supported<chset>s)</p> <p>OK</p>	
<p>Read Command</p> <p>AT+CSCS?</p> <p>Response(s)</p> <p>+CSCS: <chset></p> <p>OK</p>	
<p>Write Command</p> <p>AT+CSCS=<chset></p> <p>Response(s)</p> <p>OK</p> <p>ERROR</p> <p>+CME ERROR: <err></p>	
<p>PIN → Last</p> <p>- + -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

<chset> ^(str)	
"GSM" ^{(&F)(P)}	GSM 7 bit default alphabet (3GPP TS 23.038 [32] , Subclause 6.2.1).
"UCS2"	16-bit universal multiple-octet coded character set (ISO-10646 [10]). UCS2 character strings are converted to hexadecimal numbers in the range 0000 to FFFF; e.g. "004100620063" equates to three 16-bit characters with decimal values 65, 98 and 99.

2.11 AT^SCFG

2.11 AT^SCFG Extended Configuration Settings

AT^SCFG can be used to query and configure various settings of the EMS31-X.

AT^SCFG read command returns a list of all supported parameters and their current values.

AT^SCFG write command queries a configuration parameter (if no value is entered) or sets its value(s).

Input of parameter names is always coded in GSM character set, parameter values are expected to be given as specified via AT+CSCS.

Syntax

Test Command

AT^SCFG=?

Response(s)

```

^SCFG: "GPIO/mode/ASC1", (list of supported <g_mode>s)
^SCFG: "GPIO/mode/DCD0", (list of supported <g_mode>s)
^SCFG: "GPIO/mode/DSR0", (list of supported <g_mode>s)
^SCFG: "GPIO/mode/DTR0", (list of supported <g_mode>s)
^SCFG: "GPIO/mode/FSR", (list of supported <g_mode>s)
^SCFG: "GPIO/mode/RING0", (list of supported <g_mode>s)
^SCFG: "GPIO/mode/SYNC", (list of supported <g_mode>s)
^SCFG: "GPRS/AutoAttach", (list of supported <gaa>s)
^SCFG: "MEopMode/CFUN", (list of supported <cfun>s), (list of supported <cfun_save>s)
^SCFG: "MEopMode/PingRsp", (list of supported <pingv>s)
^SCFG: "MEopMode/Prov/AutoSelect", (list of supported <provAutoSelect>s)
^SCFG: "MEopMode/Prov/Cfg", (list of supported <provCfg>s)
^SCFG: "Ident/Manufacturer", (max. string length of <manufacturer>)
^SCFG: "Ident/Product", (max. string length of <product>)
^SCFG: "MESHUTDOWN/Fso", (list of supported <fso>s)
^SCFG: "MESHUTDOWN/sVsup/threshold", (list of supported <vthresh>s), (list of supported
<PowerSupplyDomain>s)
^SCFG: "Radio/Band/4G", (list of supported <lte_mask>s)
^SCFG: "Radio/Mtpl/4G", (list of supported <PL_mode>s), (list of supported <PL_profile>s), (list of
supported <lte_mask>s), , (list of supported <PL_limit>s)
^SCFG: "Sim/CS", (list of supported <CS>s)
^SCFG: "Tcp/IPv6Priv", (list of supported <v6privacyv>s)
^SCFG: "Tcp/MR", (list of supported <tcpMr>)
^SCFG: "Tcp/OT", (list of supported <tcpOt>)
^SCFG: "Tcp/WithURCs", (list of supported <tcpWithUrc>)
^SCFG: "Tcp/TLS/Version", (list of supported <TLS_min_version>s), (list of supported
<TLS_max_version>s)
^SCFG: "URC/Ringline", (list of supported <urcRinglineCfg>s)
^SCFG: "URC/Ringline/ActiveTime", (list of supported <urcRinglineDuration>s)
OK

```

Read Command

AT^SCFG?

Response(s)

```

^SCFG: "GPIO/mode/ASC1", <g_mode>
^SCFG: "GPIO/mode/DCD0", <g_mode>
^SCFG: "GPIO/mode/DSR0", <g_mode>
^SCFG: "GPIO/mode/DTR0", <g_mode>
^SCFG: "GPIO/mode/FSR", <g_mode>
^SCFG: "GPIO/mode/RING0", <g_mode>
^SCFG: "GPIO/mode/SYNC", <g_mode>
^SCFG: "GPRS/AutoAttach", <gaa>
^SCFG: "MEopMode/CFUN", <cfun>, <cfun_save>

```

Read Command (Continued)

AT^SCFG?

Response(s)

```
^SCFG: "MEopMode/PingRsp", <pingv>
^SCFG: "MEopMode/Prov/AutoSelect", <provAutoSelect>
^SCFG: "MEopMode/Prov/Cfg", <provCfg>
^SCFG: "Ident/Manufacturer", <manufacturer>
^SCFG: "Ident/Product", <product>
^SCFG: "MESHUTDOWN/Fso", <fso>
^SCFG: "MESHUTDOWN/sVsup/threshold", <vthresh_BB_curr>, <vthresh_BB_request>
^SCFG: "Radio/Band/4G", <lte_mask>
^SCFG: "Radio/Mtpl/4G", <PL_mode>[, <PL_profile>]
^SCFG: "Sim/CS", <CS>
^SCFG: "Tcp/IPv6Priv", <v6privacyv>
^SCFG: "Tcp/MR", <tcpMr>
^SCFG: "Tcp/OT", <tcpOt>
^SCFG: "Tcp/TLS/Version", <TLS_min_version>, <TLS_max_version>
^SCFG: "Tcp/WithURCs", <tcpWithUrc>
^SCFG: "URC/Ringline", <urcRinglineCfg>
^SCFG: "URC/Ringline/ActiveTime", <urcRinglineDuration>
OK
```

Write Command

Configure ASC1 interface lines RXD1, TXD1, RTS1, CTS1 shared with GPIO16 - GPIO19 lines

AT^SCFG="GPIO/mode/ASC1"[, <g_mode>]

Response(s)

```
^SCFG: "GPIO/mode/ASC1", <g_mode>
OK
ERROR
+CME ERROR: <err>
```

Write Command

Configure DCD0 line of ASC0 interface shared with GPIO2

AT^SCFG="GPIO/mode/DCD0"[, <g_mode>]

Response(s)

```
^SCFG: "GPIO/mode/DCD0", <g_mode>
OK
ERROR
+CME ERROR: <err>
```

Write Command

Configure DSR0 line of ASC0 interface shared with GPIO3 line

AT^SCFG="GPIO/mode/DSR0"[, <g_mode>]

Response(s)

```
^SCFG: "GPIO/mode/DSR0", <g_mode>
OK
ERROR
+CME ERROR: <err>
```

Write Command

Configure DTR0 line of ASC0 interface shared with GPIO1 line

AT^SCFG="GPIO/mode/DTR0"[, <g_mode>]

Response(s)

```
^SCFG: "GPIO/mode/DTR0", <g_mode>
OK
```

Write Command (Continued)

Configure DTR0 line of ASC0 interface shared with GPIO1 line

```
AT^SCFG="GPIO/mode/DTR0"[, <g_mode>]
```

Response(s)

```
ERROR  
+CME ERROR: <err>
```

Write Command

Configure Fast Shutdown line FST_SHDN shared with GPIO4 line

```
AT^SCFG="GPIO/mode/FSR"[, <g_mode>]
```

Response(s)

```
^SCFG: "GPIO/mode/FSR", <g_mode>  
OK  
ERROR  
+CME ERROR: <err>
```

Write Command

Configure RING0 line of ASC0 interface shared with GPIO24 line

```
AT^SCFG="GPIO/mode/RING0"[, <g_mode>]
```

Response(s)

```
^SCFG: "GPIO/mode/RING0", <g_mode>  
OK  
ERROR  
+CME ERROR: <err>
```

Write Command

Configure Status LED line shared with GPO5 line

```
AT^SCFG="GPIO/mode/SYNC"[, <g_mode>]
```

Response(s)

```
^SCFG: "GPIO/mode/SYNC", <g_mode>  
OK  
ERROR  
+CME ERROR: <err>
```

Write Command

Automatic GPRS attach

```
AT^SCFG="GPRS/AutoAttach"[, <gaa>]
```

Response(s)

```
^SCFG: "GPRS/AutoAttach", <gaa>  
OK  
ERROR  
+CME ERROR: <err>
```

Write Command

Enable/disable non volatile storage of AT+CFUN.

```
AT^SCFG="MEopMode/CFUN"[, <cfun>]
```

Response(s)

```
^SCFG: "MEopMode/CFUN", <cfun>, <cfun_save>  
OK  
ERROR  
+CME ERROR: <err>
```

Write Command

Allow/block response on PING

```
AT^SCFG="MEopMode/PingRsp"[, <pingv>]
```

Response(s)

```
^SCFG: "MEopMode/PingRsp", <pingv>
```

OK

ERROR

+CME ERROR: <err>

Write Command

Auto select provider profile.

```
AT^SCFG="MEopMode/Prov/AutoSelect"[, <provAutoSelect>]
```

Response(s)

```
^SCFG: "MEopMode/Prov/AutoSelect", <provAutoSelect>
```

OK

ERROR

+CME ERROR: <err>

Write Command

Provider profile configuration.

```
AT^SCFG="MEopMode/Prov/Cfg"[, <provCfg>]
```

Response(s)

```
^SCFG: "MEopMode/Prov/Cfg", <provCfg>
```

OK

ERROR

+CME ERROR: <err>

Write Command

Configure manufacturer name.

```
AT^SCFG="Ident/Manufacturer"[, <manufacturer>]
```

Response(s)

```
^SCFG: "Ident/Manufacturer", <manufacturer>
```

OK

ERROR

+CME ERROR: <err>

Write Command

Configure product name.

```
AT^SCFG="Ident/Product"[, <product>]
```

Response(s)

```
^SCFG: "Ident/Product", <product>
```

OK

ERROR

+CME ERROR: <err>

Write Command

Enable/disable fast switch off.

```
AT^SCFG="MESHutdown/Fso"[, <fso>]
```

Response(s)

```
^SCFG: "MESHutdown/Fso", <fso>
```

OK

ERROR

+CME ERROR: <err>

Write Command

Query / configure undervoltage threshold

AT^SCFG="MESHUTDOWN/sVsup/threshold"[, <vthresh>][, <PowerSupplyDomain>]

Response(s)

^SCFG: "MESHUTDOWN/sVsup/threshold", <vthresh_BB_curr>, <vthresh_BB_request>
OK
ERROR
+CME ERROR: <err>

Write Command

Radio band selection

AT^SCFG="Radio/Band/4G"[, <lte_mask>]

Response(s)

^SCFG: "Radio/Band/4G", <lte_mask>
OK
ERROR
+CME ERROR: <err>

Write Command

Instant Power Limitation for SAR Reduction and Thermal Mitigation

AT^SCFG="Radio/Mtpl/4G"[, <PL_mode>[, <PL_profile>, <lte_mask>, , <PL_limit>]]

Response(s)

^SCFG: "Radio/Mtpl/4G", <PL_mode>[, <PL_profile>, <lte_mask>, , <PL_limit>]

In case of: <PL_mode>=0

^SCFG: "Radio/Mtpl/4G", <PL_mode>

In case of: <PL_mode>=1 and <PL_profile>

^SCFG: "Radio/Mtpl/4G", <PL_mode>, <PL_profile>

In case of: <PL_mode>=2 and <PL_profile> one profile configuration is printed out

^SCFG: "Radio/Mtpl/4G", <PL_mode>, <PL_profile>, <lte_mask>, , <PL_limit>

^SCFG: ["Radio/Mtpl/4G", <PL_mode>, <PL_profile>, <lte_mask>, , <PL_limit>]

^SCFG: ["Radio/Mtpl/4G"]

In case of: <PL_mode>=2 full profile configuration (1-8) is printed out

^SCFG: "Radio/Mtpl/4G", <PL_mode>, <PL_profile>, <lte_mask>, , <PL_limit>

^SCFG: ["Radio/Mtpl/4G">, <PL_mode>, <PL_profile>, <lte_mask>, , <PL_limit>]

^SCFG: ["Radio/Mtpl/4G", <PL_mode>, <PL_profile>, <lte_mask>, , <PL_limit>]

^SCFG: ["Radio/Mtpl/4G"]

In case of: <PL_mode>=3 and <PL_profile>, <lte_mask>, <PL_limit> only the enabled profile is printed out

^SCFG: "Radio/Mtpl/4G", <PL_mode>

OK

ERROR

+CME ERROR: <err>

Write Command

Select the (U)SIM interface to be used.

AT^SCFG="Sim/CS"[, <CS>]

Response(s)

^SCFG: "Sim/CS", <CS>
OK

Write Command (Continued)

Select the (U)SIM interface to be used.

```
AT^SCFG="Sim/CS", <CS>
```

Response(s)

```
ERROR  
+CME ERROR: <err>
```

Write Command

Enable/disable IPv6 privacy extensions for the IP stack

```
AT^SCFG="Tcp/IPv6Priv", <v6privacyv>
```

Response(s)

```
^SCFG: "Tcp/IPv6Priv", <v6privacyv>  
OK  
ERROR  
+CME ERROR: <err>
```

Write Command

Configuration of TCP parameter 'MaxRetransmissions':

```
AT^SCFG="Tcp/MR", <tcpMr>
```

Response(s)

```
^SCFG: "Tcp/MR", <tcpMr>  
OK  
ERROR  
+CME ERROR: <err>
```

Write Command

Configuration of TCP parameter 'OverallTimeout':

```
AT^SCFG="Tcp/OT", <tcpOt>
```

Response(s)

```
^SCFG: "Tcp/OT", <tcpOt>  
OK  
ERROR  
+CME ERROR: <err>
```

Write Command

Set a range of accepted TLS versions for the IOverAT services.

```
AT^SCFG="Tcp/TLS/Version", <TLS_min_version>, <TLS_max_version>
```

Response(s)

```
^SCFG: "Tcp/TLS/Version", <TLS_min_version>, <TLS_max_version>  
OK  
ERROR  
+CME ERROR: <err>
```

Write Command

Configuration of Internet Service URCS:

```
AT^SCFG="Tcp/WithURCs", <tcpWithUrc>
```

Response(s)

```
^SCFG: "Tcp/WithURCs", <tcpWithUrc>  
OK  
ERROR  
+CME ERROR: <err>
```

Write Command

Subcommand controls the behaviour of the RING line if it is selected for URC signalization.

AT^SCFG="URC/Ringline"[, <urcRinglineCfg>]

Response(s)

^SCFG: "URC/Ringline", <urcRinglineCfg>

OK

ERROR

+CME ERROR: <err>

Write Command

Subcommand controls duration of active RING line if it is selected for URC signalization.

AT^SCFG="URC/Ringline/ActiveTime"[, <urcRinglineDuration>]

Response(s)

^SCFG: "URC/Ringline/ActiveTime", <urcRinglineDuration>

OK

ERROR

+CME ERROR: <err>

PIN → Last

- ± -

Parameter Description

<g_mode>^{(str)(+CSCS)(NV)}

Mode of operation for signal lines

This parameter can be used to configure shared signal lines of the EMS31-X module. Depending on the connected devices the setting determines the specific function assigned to the related signal line(s). Keep in mind that the functions assigned to shared lines are mutually exclusive.

To enable, for example, the second serial interface ASC1 select `AT^SCFG="GPIO/mode/ASC1","std"`.

The changes will fully take effect after restart of the UE and are non-volatile.

“std“ Signal lines are assigned to this interface.

“rsv“ Signal line not used.

<gaa>^{(str)(+CSCS)(NV)}

PS Domain Auto Attach

This parameter can be used to control whether the UE will perform a PS Domain attach immediately after power-up and registering to the network or not. If the setting is changed to "enabled" and the UE is not attached yet, it will not initiate an attach immediately but after the next power-up and registration to the network. For LTE please see more information in Section 10.3.1, [Attaching to LTE Networks](#).

“disabled“ GPRS auto attach is disabled

“enabled“(D) GPRS auto attach is enabled

<cfun>^{(str)(NV)}

CFUN Mode

Parameter determines whether the `AT+CFUN` parameter <fun> values for Normal mode and Airplane mode are stored persistently.

“0“(D) Setting of `AT+CFUN` parameter <fun> is stored persistently.

“1“ Setting of `AT+CFUN` parameter <fun> is volatile, i.e. changes are not reestablished after restart.

`<cfun_save>`^{(str)(NV)}

Saved CFUN Mode

Indicates `AT+CFUN` parameter `<fun>` which will be used for next UE restart.

`<pingv>`^{(str)(+CSCS)(NV)}

Enable ping response

Enable or disable response on PING. If module is connected to Internet and has valid IP address it will or will not respond to ICMP PING depending on this setting.

“0” Disable response on PING
“1”^(D) Enable

`<provAutoSelect>`^{(str)(NV)}

Autoselect provider profile

The `AT^SCFG "MEopMode/Prov/AutoSelect"` parameter `<provAutoSelect>` enables / disables the autoselection of provider profiles. Setting take effect immediately.

The autoselection functionality is effective only when `AT+CFUN=1` or `4`, and after SIM PIN is verified.

“on”^(D) Autoselection is on.
The provider profile changes automatically when the inserted SIM card matches one of the provider profiles preconfigured in the UE.

“off” Autoselection is off.
The provider profile can be set manually using the `AT^SCFG "MEopMode/Prov/Cfg"` write command.

`<provCfg>`^{(str)(NV)}

Provider configuration

The `AT^SCFG "MEopMode/Prov/Cfg"` parameter `<provCfg>` controls the provider profiles. Settings take effect immediately.

Please note that it is also allowed to manually change the provider profile when `<provAutoSelect>` value is "on", but the configuration does not take effect until the `<provAutoSelect>` is disabled.

The following profiles are supported:

“att” AT&T provider profile.
“verizon” Verizon provider profile.

`<manufacturer>`^{(str)(NV)}

Manufacturer name

Setting can be used to configure the name of the manufacturer which is displayed with the commands `ATI` and `AT+CGMI`. Maximal length of the Manufacturer name is 25 characters (or less if you use multibyte characters).

“Cinterion”^(D)

`<product>`^{(str)(NV)}

Product name

Setting can be used to configure the name of the product which is displayed with the commands `ATI` and `AT+CGMM`. Maximal length of the product name is 25 characters (or less if you use multibyte characters).

“EMS31-X”^(D)

2.11 AT^SCFG

`<fso>(str)(+CSCS)(NV)`

Enable/disable fast switch off

This parameter configures a fast UE switch off, i.e., a shutdown without network deregistration. If enabled, the UE can be shut down without network deregistration by using either the AT command `AT^SMSO` or the hardware line `FST_SHDN`. For further details please refer to [2].

Please take great care before changing the fast switch off mode. Factory setting is `<fso>="0"`.

"0" ^(D)	Fast UE switch off is disabled. <code>AT^SMSO</code> performs an orderly UE shutdown and issues the " <code>^SHUTDOWN</code> " URC. Triggering the <code>FST_SHDN</code> line has no effect.
"1"	Fast UE switch off enabled. <code>AT^SMSO</code> performs the fast switch off and does not issue any reply, e.g., OK, ERROR or any " <code>^SHUTDOWN</code> " URC. Triggering the <code>FST_SHDN</code> line will start the fast shutdown procedure.

`<vthresh>(str)(NV)`

Undervoltage threshold value

The undervoltage thresholds defined for the BB (base band) domain are calculated for max. 400 mV voltage drops. Power supply sources for EMS31-X applications shall be designed to tolerate 400 mV voltage drops without crossing the lower limits of 3.3 V (BB). For EMS31-X applications operating at the limit of the allowed tolerance the default undervoltage threshold may be adapted by selecting a `<vthresh>` value.

New settings take effect after restart.

"-4" ^(D)	3.10 V
"-3"	3.15 V
"-2"	3.20 V
"-1"	3.25 V
"0"	3.30 V
"1"	3.35 V
"2"	3.40 V
"3"	3.45 V
"4"	3.50 V

`<PowerSupplyDomain>(str)`

Power Supply Domain

"0"	<code><vthresh></code> value applies to BB domain (BATT+ _{BB} line).
-----	---

`<vthresh_BB_curr>(str)`

Current BB undervoltage threshold

"-4" ^(D)	3.10 V
"-3"	3.15 V
"-2"	3.20 V
"-1"	3.25 V
"0"	3.30 V
"1"	3.35 V
"2"	3.40 V
"3"	3.45 V
"4"	3.50 V

`<vthresh_BB_request>(str)`

BB undervoltage threshold after next restart

For values see `<vthresh_BB_curr>`.

`<lte_mask>(str)(+CSCS)(NV)`

LTE radio band(s) mask

`<lte_mask>` specifies LTE frequency bands in *hexadecimal 32-bit value order*. Every bit corresponds to a dedicated band number as defined in 3GPP standard TS 36.101 (4G).

When a bit (corresponding to a dedicated band) is set, the band is enabled, when the bit is cleared, the dedicated band is disabled respectively. The `<lte_mask>` value should be a string starting with '0x', to be transferred into binary follow below pattern.

Mask in Hexadecimal:	[Hex8]	[Hex7]	[Hex2]	Hex1
Mask in binary:	b32b31b30b29	b28b27b26b25	b8b7b6b5	b4b3b2b1

Hex8 to Hex2 can be omit if all zero, but `<lte_mask>` should contain no more than 8 hexadecimal digitals, and also contain at least one hexadecimal digital.

EMS31-X supported band listed below:

"0x00000002"	LTE BAND II (BC2)
"0x00000008"	LTE BAND IV (BC4)
"0x00000800"	LTE BAND XII (BC12)
"0x00001000"	LTE BAND XIII (BC13)

Usage of `<lte_mask>` depends on the `AT^SCFG` subcommand:

Using `<lte_mask>` for `AT^SCFG "Radio/Mtpl/4G"`:

Parameter is mandatory within the profile specifying the module's output power limit. It shall be given as a single LTE band within each profile (multiple band values as in the case of `AT^SCFG "Radio/Band/4G"` are not accepted). For details see `<PL_mode>` and related parameters.

Using `<lte_mask>` for `AT^SCFG "Radio/Band/4G"`:

Parameter sets the LTE frequency band(s) the UE is allowed to use. The setting can be either a single or a multiple band value. Delivery default is the combination of all bands supported by the EMS31-X.

A changed value takes effect immediately. The status of the SIM PIN authentication remains unchanged, eliminating the need to enter the SIM PIN again after the change.

An ERROR result code will be returned when the user tries

- to set a band not supported by the EMS31-X,
- to set `<lte_mask>= "0x00000000"`
- to change the band configuration during Airplane mode.

`<PL_mode>(str)`

Power Limitation Mode

The `AT^SCFG` subcommand "Radio/Mtpl/4G" can be used to instantly adapt the module's Specific Absorption Rate (SAR) by reducing its output power for specific or all bands in any operating mode.

8 profiles for instant RF output power limitation can be defined and stored to the NV memory. A profile contains all supported bands (`<lte_mask>`) and, for each single band, a parameter limiting the maximum RF output power (`<PL_limit>`). Changing limit values of a profile with `<PL_mode>` 3 takes effect immediately. Activating and deactivating power limitation with `<PL_mode>` 1 or 0, takes effect immediately. Powerup default of `<PL_mode>` is 0 (disabled).

"0"^(P) Power limitation deactivated (no further parameters are possible).

"1" Power limitation activated.
`<PL_profile>` parameter is mandatory for activation.

"2" Query profile settings.
The response shows the currently used limit values if instant power limitation is active, i.e. if `<PL_mode>= 1`. You can read either all profiles, or a specific profile by adding a `<PL_profile>` number.

"3" Change profile. All parameters are mandatory.

`<PL_profile>`^(str)

Power Limitation Profile

This parameter is used to set the profile.

"1"... "8" Number of profile.

`<PL_limit>`^{(str)(NV)}

Power Limitation

This parameter is used to set the power limit.

Parameter is global for the UE, non-volatile and will not be reset by `AT&F`.

Setting takes effect immediately.

"18"... "23" Power limit value in dBm for LTE bands.

`<v6privacy>`^{(str)(NV)}

Enable IPv6 privacy

Enable or disable IPv6 privacy extensions (RFC 4941) for the IP stack

"0" Disable IPv6 privacy extensions

"1"^(D) Enable

`<tcpMr>`^{(str)(+CSCS)(NV)}

Maximum Number of Retransmissions (MR)

"1"... "10"^(D)... "30"
This parameter determines the maximum number of times to retransmit TCP packets. The mechanism takes effect only if `AT^SCFG "Tcp/OT"` is disabled with value "0".

The value set with `<tcpMr>` will be assumed as default for the `<srvParm-Tag> "tcpMR"` when a new service profile is created with `AT^SISS`. In each service profile, you can set another "tcpMR" value which has precedence over the global value set with `AT^SCFG`. Existing service profiles are not affected when you change the global value via `AT^SCFG`.

`<tcpOt>`^{(str)(+CSCS)(NV)}

Overall TCP Timer for outstanding connections (tcpOT)

"0"... "6000"^(D)
Setting specifies the number of seconds to wait before closing a connection if TCP/IP packets are not acknowledged.

Setting the maximum value is practically equivalent to deactivating the tcpOT mechanism because the maximum time would never be reached by the TCP/IP stack.

The value set with `<tcpOt>` will be assumed as default for the `<srvParm-Tag> "tcpOT"` when a new service profile is created with `AT^SISS`. However, in each service profile, you can set another "tcpOT" value which has precedence over the global value set with `AT^SCFG`. Existing service profiles are not affected when you change the global value via `AT^SCFG`. Use of default value is recommended.

<TLS_min_version>^{(str)(NV)}

Minimum TLS Version allowed

This parameter sets the accepted minimum TLS version for IOverAT services.

"MIN" ^(D)	Automatic minimum
"0.9"	TLSv0.9 (SSLv3)
"1.0"	TLSv1
"1.1"	TLSv1.1
"1.2"	TLSv1.2
"MAX"	Automatic maximum

<TLS_max_version>^{(str)(NV)}

Maximum TLS version allowed

This parameter sets the accepted maximum TLS version for IOverAT services. Must be equal or greater than <TLS_min_version>.

"1.0"	TLSv1
"1.1"	TLSv1.1
"1.2"	TLSv1.2
"MAX" ^(D)	Automatic maximum

<tcpWithUrc>^{(str)(+CSCS)(NV)}

URC mode or polling mode for Internet service commands

This parameter enables or disables the presentation of the following URCs related to Internet service commands: "^SISR" URC, "^SISW" URC and "^SIS" URC for parameter <urcCause>=0 (Internet service events). "^SIS" URCs with <urcCause>=1 or 2 used to indicate incoming Socket connections are always enabled.

"on" ^(D)	Enable URCs related to Internet service commands. Throughout the Chapter "Internet Service AT Commands" the mode is also referred to as URC mode.
"off"	Disable URCs related to Internet service commands. This requires the TE to employ polling techniques when using the Internet service AT commands: The TE is responsible to retrieve all status information needed to control an Internet session. The method is referred to as polling mode.

<CS>^{(str)(NV)}

Card slot / (U)SIM

The AT^SCFG subcommand "SIM/CS" specifies the (U)SIM interface currently used. The UE supports 2 physical (U)SIM interfaces. Depending on whether the module supports MIM interface, the 2nd interface can be connected either to (U)SIM or MIM interface. Remote (U)SIM access is not supported. Only one of the supported (U)SIM interfaces can be used at a time. For details on how to connect the first and the second (U)SIM interface please refer to [2].

"SIM1" ^(D)	First (U)SIM slot is enabled regardless of whether a (U)SIM card is inserted. Access to another (U)SIM inserted in slot 2 is deactivated.
"SIM2"	Second (U)SIM slot is enabled regardless of whether a (U)SIM card is inserted. Access to another (U)SIM inserted in slot 1 is deactivated.

`<urcRinglineCfg>`^{(str)(+CSCS)(NV)}

Parameter specifies the ring line to be used for signaling URCs both for idle interface and while interface is reserved, i.e. while busy on AT command execution or data transmission.

For details about URC presentation refer to Section 1.7, [Unsolicited Result Code Presentation](#).

For details on using the RING0 line to wake up the TE refer to [2].

Setting is local for every interface.

“off“	URCs are not indicated by a ring line.
“local“ ^(D)	URCs are indicated by an activated ring line on the same interface where the URC appears.
“asc0“	URCs are indicated by activated RING0 line of the ASC0 interface (low active).

`<urcRinglineDuration>`^{(str)(+CSCS)(NV)}

This parameter determines how long the ring line is activated in order to indicate a URC. For details about URC presentation refer to Section 1.7, [Unsolicited Result Code Presentation](#). For more information on the RING0 line and its timing for different types of URCs please refer to [2]. `<urcRinglineDuration>` is applicable to all types of URCs except the RING URC. The timing of the RING URC (incoming calls) is not configurable by AT command.

The type of ring line used for URC indication depends on parameter `<urcRinglineCfg>`.

Setting is global for all interfaces.

“0“	RING line will be activated for about 5s.
“1“	RING line will be activated for about 100 ms.
“2“ ^(D)	RING line will be activated for about 1 s.

Example

Usage of "URC/Ringline":

AT+CSCS="GSM"	Switch to GSM character set.
OK	
AT^SCFG?	Query all parameters.
...	
^SCFG:"URC/Ringline", "local"	URCs on this interface will be indicated by Ring line associated to the interface (e.g. RING0 for ASC0).
...	
OK	
AT^SCFG="URC/Ringline", "asc0"	URCs on <i>this</i> interface will be indicated by an activated RING0 no matter whether or not the UE-TE link is reserved.
^SCFG:"URC/Ringline", "asc0"	
OK	
AT^SCFG="URC/Ringline", "off"	Disable any Ring line indication for URCs on this interface.
^SCFG:"URC/Ringline", "off"	
OK	

2.12 AT^SPOW Set UART Mode and SLEEP Mode on UART

AT^SPOW enables or disables the UE's UART interfaces ASC0 and ASC1 and controls SLEEP mode on both interfaces. Parameter settings are non-volatile and common for all interfaces.

If SLEEP mode is enabled (`<mode>=2`), RTS0 and RTS1 are used by the TE to signal the UE to wake up. SLEEP mode requires that CTS/RTS flow control be configured both on UE side (see [AT\Q](#)) and TE side.

Please refer to "[EMS31-X Hardware Interface Description, Version 03.006](#)" for more information on power saving.

Syntax

```

Test Command
AT^SPOW=?
Response(s)
^SPOW: (list of supported <mode>s), (time range of <timeout>)
OK
ERROR
+CME ERROR: <err>

Read Command
AT^SPOW?
Response(s)
^SPOW: <mode>, <timeout>
OK
ERROR
+CME ERROR: <err>

Write Command
AT^SPOW=<mode>, <timeout>
Response(s)
OK
ERROR
+CME ERROR: <err>
    
```

PIN → Last
 - + -

Parameter Description

<code><mode></code> ^{(num)(NV)}	
1	UART interfaces ASC0 and ASC1 are activated.
2 ^(D)	UART interfaces ASC0 and ASC1 are in a power saving mode, i.e., in SLEEP mode.
<code><timeout></code> ^{(num)(NV)}	
0	Value 0 applies only to <code><mode>=1</code> .
100...5000 ^(D) ...10000	In SLEEP mode (<code><mode>=2</code>), time in milliseconds the UE remains awake after the last sent character. Minimum value: 100 ms, recommended 5000 ms. <code><timeout></code> values below 100 are denied with ERROR.

Note

- The change of `<mode>` takes effect after restart of the UE, e.g. with `AT+CFUN=1,1`.

3. Status Control Commands

3. Status Control Commands

The AT Commands described in this chapter allow the external application to obtain various status information from the EMS31-X.

3.1 AT+CEER Extended Error Report

AT+CEER returns an extended error report regarding the reason of the last

- EMM failure
- ESM failure

Example:

```
+CEER: lastEmmCause: PLMN_NOT_ALLOWED, lastEsmCause: UNKNOWN_PDN_TYPE
```

Syntax

<p>Test Command</p> <pre>AT+CEER=?</pre> <p>Response(s)</p> <pre>OK ERROR +CME ERROR: <err></pre>	
<p>Exec Command</p> <pre>AT+CEER</pre> <p>Response(s)</p> <pre>+CEER: <lastEmmCause>, <lastEsmCause> OK ERROR +CME ERROR: <err></pre>	
<p>Write Command</p> <pre>AT+CEER=<reset></pre> <p>Response(s)</p> <pre>OK ERROR +CME ERROR</pre>	
<p>PIN → Last</p> <pre>- + -</pre>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

<lastEmmCause>^(num)

Verbose string containing the textual representation of the last EMM failure cause.

<lastEsmCause>^(num)

Verbose string containing the textual representation of the last ESM failure cause.

3.1 AT+CEER

`<reset>^(num)`

0 Reset the extended error report to initial value.

3.1.1 Release Causes for EMM Failures

<code><lastEmmCause></code> ID	Description
103	Illegal UE
106	Illegal ME
107	EPS service not allowed

3.1.2 Release Causes for ESM Failures

<code><lastEsmCause></code> ID	Description
8	OPERATOR_DETERMINED_BARRING
26	INSUFFICIENT_RESOURCES
27	UNKNOWN_OR_MISSING_APN
28	UNKNOWN_PDN_TYPE
29	USER_AUTHENTICATION_FAILED
30	ACTIVATION_REJECTED_BY_GW
31	ACTIVATION_REJECTED_UNSPECIFIED
32	SERVICE_OPTION_NOT_SUPPORTED
33	REQUESTED_SERVICE_OPTION_NOT_SUBSCRIBED

3.2 AT^SIND Extended Indicator Control

AT^SIND controls the presentation of indicator event URCs. You can enable or disable URCs to be issued by the EMS31-X each time the value of the related indicator changes, you can request the current status of all indicators, and you can also query the status of a single indicator.

Syntax

Test Command

AT^SIND=?

Response(s)

```
^SIND: (<indDescr>, list of supported <indValue>s)[, (<indDescr>, list of supported <indValue>s)[,
...]], (list of supported <mode>s)
OK
```

Read Command

AT^SIND?

Response(s)

```
^SIND: <indDescr>, <mode>[, <indValue>]
[^SIND: <indDescr>, <mode>[, <indValue>]]
...

If <indDescr>="eons":
^SIND: eons, <mode>, <indValue>, <eonsOperator>, <servProvider>

If <indDescr>="nitz":
^SIND: nitz, <mode>, <nitzUT>, <nitzTZ>, <nitzDST>

If <indDescr>="lsta":
^SIND: "lsta", <mode>, <lstaLevel>

If <indDescr>="is_cert":
^SIND: is_cert, <mode>[, <srvProfileId>, <issuer>, <serialNumber>, <subject>,
<signatureAlgorithm>, <thumbprintAlgorithm>, <thumbprint>]
...

In case of <indDescr>="catmcov"
^SIND: catmcov, <mode>, <catmcovBitMask>, <coverage_ds>

In case of <indDescr>="prov"
^SIND: prov, <mode>, <provMm>, <provCur>[, <provNext>]
OK
ERROR
+CME ERROR: <err>
```

Write Command

AT^SIND=<indDescr>, <mode>

Response(s)

```
^SIND: <indDescr>, <mode>[, <indValue>]

If <indDescr>="eons" and <mode>=2:
^SIND: <indDescr>, <mode>, <indValue>, <eonsOperator>, <servProvider>

If <indDescr>="nitz" and <mode>=2:
^SIND: <indDescr>, <mode>, <nitzUT>, <nitzTZ>, <nitzDST>
```

Write Command (Continued)

```
AT^SIND=<indDescr>, <mode>
```

Response(s)

If <indDescr>="is_cert" and <mode>=1 or 2:

```
^SIND: is_cert, <mode>[, <srvProfileId>, <issuer>, <serialNumber>, <subject>,  
<signatureAlgorithm>, <thumbprintAlgorithm>, <thumbprint>]
```

...

OK

ERROR

+CME ERROR: <err>

Write Command

```
AT^SIND="lsta", <mode>[, <lstaLevel>]
```

Response(s)

```
^SIND: "lsta", <mode>[, <lstaLevel>]
```

OK

ERROR

+CME ERROR: <err>

Write Command

```
AT^SIND=<indDescr>, <mode>
```

Response(s)

```
^SIND: catmcov, <mode>, <catmcovBitMask>, <coverage_ds>
```

...

OK

ERROR

+CME ERROR: <err>

Write Command

```
AT^SIND="prov", <mode>
```

Response(s)

```
^SIND: prov, <mode>, <provMm>, <provCur>[, <provNext>]
```

OK

ERROR

+CME ERROR: <err>

PIN → Last

- + -

Unsolicited Result Codes

URC 1

Format of the standard indicator:

```
+CIEV: <indDescr>, <indValue>
```

Value of an indicator has changed.

URC 2

Format of the "simdata" indicator:

```
+CIEV: <indDescr>
```

This URC is issued indicating that the content of one or more (U)SIM Elementary Files has been changed.

URC 3

Format of the "eons" indicator:

+CIEV: <indDescr>, <indValue>, <eonsOperator>, <servProvider>

One URC is issued for each new LAI (Location Area Information) broadcast by the network.

URC 4

Format of the "nitz" indicator:

+CIEV: <indDescr>, <nitzUT>, <nitzTZ>, <nitzDST>

URC 5

Format of the "lsta" indicator:

In case <indValue> equals "20".

+CIEV: <indDescr>, <indValue>, <lstaDrxCnt>, <lstaRsrp>, <lstaRsrq>, <lstaRssi>

The URC is issued for every radio link failure. The radio link failure criterion is based on the radio link counter S. If module retrieves registration after jamming disappears, this URC will also be issued once to indicate the recovery, with <lstaDrxCnt> set to 0.

URC 6

In case <indValue> equals "21".

+CIEV: <indDescr>, <indValue>, <lstaFrRep>, <lstaFrScnd>, <lstaFrStart>, <lstaFrEnd>, <lstaMin>, <lstaMax>, <lstaMean>, <lstaGrade>

After radio link loss the URC provides some statistic parameters of signal strength distribution across the band.

URC 7

Format of the "is_cert" indicator:

+CIEV: <indDescr>, <srvProfileId>, <issuer>, <serialNumber>, <subject>, <signatureAlgorithm>, <thumbprintAlgorithm>, <thumbprint>

The URC is issued after opening a secure Internet connection with AT^SISO.

URC 8

Format of the "catmcov" indicator:

+CIEV: <indDescr>, <catmcovBitMask>, <coverage_ds>

URC 9

Format of the "prov" indicator:

+CIEV: <indDescr>, <provMm>, <provCur>[, <provNext>]

Parameter Description

<indDescr>^(str)

This section describes <indDescr> values and their associated <indValue> ranges. For command input on the AT^SIND write command line <indDescr> values are handled as string type. In responses and URCs <indDescr> values are output without quotation marks.

"service"	Service availability: 0 Not registered to any network. 1 Registered to home network or, if "roam"=1 then registered to another network.
"message"	Unread short message at memory location <mem1>. Refer to AT+CPMS. 0 No unread message(s) available. 1 Unread message(s) available.

3.2 AT^SIND

"roam"	<p>Roaming indicator:</p> <p>0 Registered to home network or not registered.</p> <p>1 Registered to other network.</p>
"smsfull"	<p>Capacity of storage for received short messages:</p> <p>0 The short message memory location <mem3> is still free or has just become free again. Refer to AT+CPMS.</p> <p>1 All memory locations of <mem3> are used up.</p>
"rssi"	<p>Received signal (field) strength:</p> <p>0 Signal strength \leq -112 dBm</p> <p>1 - 4 Signal strength in 15 dB steps</p> <p>5 Signal strength \geq -51 dBm</p> <p>99 Signal strength not known or not detectable</p> <p>Received signal (field) strength can also be obtained with AT+CSQ. However, the signal strength is scaled to value range 0..31 by this command.</p>
"simdata"	<p>(U)SIM notifies of changed Elementary File data:</p> <p>All data provided by the (U)SIM is stored in one of many of its so-called Elementary Files.</p> <p>Be aware that this Elementary File data can be changed at any time by the network provider or an application running on the (U)SIM.</p> <p>Therefore, a "+CIEV: "simdata"" URC is issued if (U)SIM sent a SAT REFRESH command indicating that the content of one or more Elementary Files has been changed.</p>
"ciphcall"	<p>Ciphering Status Change Indication:</p> <p>0 Current call or SMS is not ciphered.</p> <p>1 Current call or SMS is ciphered.</p> <p>As stated in GSM specifications 02.07 and 02.09 the ciphering indicator feature allows the EMS31-X to detect that ciphering is not switched on and to indicate this to the user.</p> <p>The ciphering indicator feature may be disabled by the home network operator setting data in the "administrative data" field (EF_{AD}) on the (U)SIM, as defined in 3GPP TS 11.11 [14], 3GPP TS 31.101 [15], 3GPP TS 31.102 [16].</p> <p>If this feature is not disabled by the (U)SIM, then whenever a connection is in place, which is, or becomes unenciphered, an indication shall be given to the user. This enables the user's decision how to proceed.</p> <p>Read command AT^SIND? returns valid ciphering status only if a call is in progress or active.</p> <p>If EF_{AD} setting disables the ciphering indicator feature read command always indicates a ciphered link and no URC presentation will take place.</p> <p>The following restrictions apply if the same serial channel is used for AT^SIND "ciphcall" indication and for the action triggering this URC. In general, the recommended solution is to use a dedicated channel for all status signalling via URCs.</p> <ul style="list-style-type: none"> • If an unciphered mobile originated SMS is performed, AT^SIND "ciphcall" URCs on the same serial channel will be issued after the related "OK" and indicate the ciphering state at <i>this</i> time. Because the SMS is already sent at this time, two URCs will be issued on this channel, but both are indicating that ciphering is enabled. • If an unciphered mobile originated data call is performed, AT^SIND "ciphcall" URCs on the same serial channel will be issued after the interface is not longer blocked by the call (call is released or temporarily stopped) and indicate the ciphering state at <i>this</i> time.
"eons"	<p>Enhanced Operator Name String (EONS) Indication:</p> <p>The Enhanced Operator Name String indicator feature allows the EMS31-X to output various operator names for different PLMN identities via URC. It also allows the output of a different operator name based on a subset of the registered network by using a range of Tracking Area Codes (TAC) or a single TAC. The presentation of the "eons" indicator is determined by network activity. For</p>

example, the indicator appears every time a location update occurs or a NITZ information is sent, no matter whether or not the status of the EONS information has changed. This means that the same EONS information may be reported several times.

The EONS tables are stored in the (U)SIM and will be read at power-up.

Following are the (U)SIM Elementary Files that are affected by the introduction of EONS feature in the (U)SIM:

EF_{UST} (USIM Service Table) - describes which features are active.

EF_{OPL} (Operator PLMN List) - contains the PLMN identification and location ID together with the index of the corresponding PNN record

EF_{PNN} (PLMN Network Name) - contains the full and short form version of the network name for the registered PLMN

If the Operator Name Source is CPHS Operator Name String long and short form, refer to <indValue>, the following two (U)SIM Elementary Files will be used:

EF_{ONString} (Operator Name String) - contains the name of the PLMN operator who issued the (U)SIM.

EF_{OPShort} (Operator Name Short form) - contains a short form of the name of the PLMN operator who issued the (U)SIM.

“nitz“

Network Identity and Time Zone indication:

This indicator shows the time relevant information elements of an MM Information (MMI) or GMM Information (GMMI) message received from the network (see 3GPP TS 24.008 [37], ch. 9.2.15a and 9.4.19). The network usually sends a NITZ indicator when the mobile attaches to the network, when it enters a location area with different time zone or when a daylight change occurs.

A NITZ indicator may consist of the following parameters: Universal Time (UT), local Time Zone (TZ), Daylight Saving Time (DST). All information elements of MMI/GMMI are optional and therefore, the presentation of the parameters <nitzUT>, <nitzTZ>, <nitzDST> varies with the network. For example, the network may send all three parameters UT, TZ, DST, or only UT and TZ or only TZ.

UT is indicated in usual date/time format and represents the current world time (GMT) at the moment when sent.

TZ is given as a positive (east) or negative (west) offset from UT in units of 15 minutes.

DST shows the number of hours added to the local TZ because of daylight saving time (summertime) adjustment. Usually DST is 1 hour but it can be also 2 hours in certain locations.

Example for time and time zone with DST:

+CIEV: nitz,"04/07/23,13:39:20",-28,1

In this example TZ is -28, showing a time offset of -7 hours (west) to Universal Time/GMT (which never changes for DST). DST is 1 which indicates that one hour was added to TZ because of Daylight Saving Time. If a network does not send the DST parameter the TZ value would be -32 (8 hours west) as would be done in winter:

+CIEV: nitz,"04/11/23,13:39:20",-32

Please be aware that although the last NITZ value can be looked up again via "AT^SIND=nitz,2" the returned values may be out of date. Especially the UT value is obsolete because there is no internal NITZ clock and therefore no continuation of UT.

NITZ values are lost when the UE detaches from network. Also when a manual network selection fails and the UE automatically falls back to the previous network the NITZ values cannot be recalled. Nevertheless an indicated time zone is valid until a new MMI/GMMI will trigger another NITZ indication.

“psinfo“

Packet Switched Status Indication

"psinfo" indicates the status of the UE related to packet switched data calls.
0 PDN not (yet) found
16 Camped on EUTRAN capable cell
17 Attached in EUTRAN capable cell

"Ista"

Link Stability Indication (for 2G only!)
The Link Stability indicator feature allows the EMS31-X to output radio link errors and statistic parameters of signal strength distribution across the band via URC.

0 Radio link error.
1 Radio link signal strength distribution.

The presentation of the "Ista" indicator is determined by the radio link spectrum shape. For example, each time a radio link error appears the URC indicates an Error Downcounter value and the RSSI of the serving cell to provide some kind of warning. Every consecutive error decrements the Error Downcounter value and successful downlink signal reception resets it to start value of 11. The factor on which Error Downcounter is decremented depends on network settings. Error Downcounter value 0 means that the UE has lost the cell and will start the cell reselection process. In this case the URC is enhanced and includes the following statistic parameters of signal strength distribution across the band.

These are:

- Number of reported channels,
- Maximal signal strength value,
- Minimal signal strength value,
- Mean value of signal strength across frequency band and
- Variance of signal strength across frequency band.

To avoid that radio link error URCs are output too often, when radio conditions are bad, you can select a lower warning level with `<lstaLevel>`.

Link Stability Indication (for 4G)

URC's are issued for radio link quality and statistic parameters of signal strength distribution across the band.

20 Radio link quality.
21 Radio link signal strength distribution.

In idle mode S-Criteria of serving cell is evaluated each DRX (Discontinuous Reception) Cycle (32, 64, 128, 256 frames).

If S-criteria is not met, Cell Reselection Evaluation Process is executed.

If the EMS31-X has not found any new suitable cell based on searches and measurements of the neighbor cells indicated in the measurement control system information for 10 seconds, the EMS31-X initiates cell selection procedures for the selected PLMN.

A DRX counter counts the consecutive DRX cycles that serving cell does not meet S-criteria during that 10 seconds. This is used for the URCs with `<indValue>` equals "20".

If UE has lost the cell and starts the cell reselection process an enhanced URC with `<indValue>` equals "21" will be output.

"simtray"

Indication of (U)SIM tray status as indicated by CCIN line. Result does not depend on whether the tray holds a (U)SIM or not.

0 (U)SIM tray empty.
1 (U)SIM tray plugged in.

"euiccid"

(U)SIM embedded identification number:

"euiccid" delivers the (U)SIM embedded identification number retrieved from the (U)SIM Elementary File EF_{EUICCID}.

3.2 AT^SIND

"is_cert"	Report details of the server certificate used for a secure Internet connection opened with AT^SISO. The following certificate details are listed: <srvProfileId>, <issuer>, <serialNumber>, <subject>, <signatureAlgorithm>, <thumbprintAlgorithm>, <thumbprint> Detailed guidelines for managing the required certificates can be found in [8]. See also AT commands AT^SISS, AT^SBNR and AT^SBNW.
"catmcof"	The UE will indicate if the network supports CAT-M and if the coverage is sufficient for the device.
"prov"	Provider configuration mismatch: The "prov" indicator delivers the provider configuration mismatch status via URC. +CIEV: prov,<provMm>,<provCur>,<provNext> The AT^SIND test command indicates the maximum length of the "prov" <indValue>. Changing the provider configuration is done by AT^SCFG parameter "MEop-Mode/Prov/Cfg" (see <provCfg>).

<indValue>^(num)

Integer type value in the range stated above for the corresponding <indDescr>.

Notes specific to the EONS feature:

If the indicator is "eons", the <indValue> is a type associated to the operator name according to 3GPP TS 22.101 [45]. This type depends on the source of the operator name.

Priority of types associated to the operator names is defined as follows (the type listed first has the highest priority). If a type cannot be indicated the next one will be used.

0	Not registered.
1	EF _{OPL} and EF _{PNN} in alphanumeric format.
2	Operator Name String in long and short format according to Common PCN Handset Specification (CPHS) [46].
3	Name information received by the NITZ service in long and short alphanumeric format. The short form will be displayed only if EF _{OPShort} from CPHS is available.
4	Any operator name stored in UE's internal memory in alphanumeric format.
5	Broadcast MCC-MNC in numeric format consisting of a 3-digit country code plus a 2- or 3-digit network code.

<mode>^(num)

Set or query URC presentation mode of a specific indicator <indDescr>.

0 ^(P)	Disables the presentation of a specific URC.
1	Enables the presentation of a specific URC. The URC will be buffered in the UE when the UE-TE link is reserved (e.g. in online data mode), and flushed to the TE when the UE-TE link is free again. Otherwise, the URC will be forwarded directly to the TE.
2	Requests the presentation mode of the URC status and the current value of a single indicator type.

<eonsOperator>^{(str)(+CSCS)}

Operator in format which depends on the type associated to the operator name. Refer to <indValue>.

<servProvider>^{(str)(+CSCS)}

Service Provider Name according to the status settings ((U)SIM Service No. 17) in the (U)SIM Service Table (SST) of the (U)SIM.

Service Provider Name (SPN) will be read from EF_{SPN}.

<servProviderType>^(num)

Service Provider Type according to Registered Public Land Mobile Network (RPLMN) and Home Public Land Mobile Network (HPLMN).

- | | |
|---|---|
| 0 | No Service Provider Information available. |
| 1 | Service Provider Name will be displayed. RPLMN is the HPLMN. |
| 2 | Service Provider Display Information will be displayed. One list entry is equal to the RPLMN. |

<nitzUT>^{(str)(+CSCS)}

Universal Time delivered as part of the "nitz" Indicator. Refer to <indDescr>.

<nitzTZ>^(num)

Time Zone delivered as part of the "nitz" Indicator. Refer to <indDescr>.

<nitzDST>^(num)

Adjustment for Daylight Saving Time as part of the "nitz" Indicator. Refer to <indDescr>.

<lstaLevel>^(num)

Warning Level

0-11 User value to limit the indication of radio link errors.

Refer to <indDescr>.

<lstaEdvs>^(num)

EDVS (0-11)

Error Downcounter value scaled. Refer to <indDescr>.

<lstaRssi>^(num)

value in dBm

Received signal strength indication value. Refer to <indDescr>.

<lstaNo>^(num)

Number of reported channels. Refer to <indDescr>.

<lstaMin>^(num)

value in dBm

Minimal received signal strength value. Refer to <indDescr>.

<lstaMax>^(num)

value in dBm

Maximal received signal strength value. Refer to <indDescr>.

<lstaVar>^(num)

Variance of signal strength across frequency. Refer to <indDescr>.

<lstaDrxCnt>^(num)

Number of consecutive DRX cycles that serving cell does not meet S-criteria. Refer to <indDescr>.

<lstaRsrp>^(num)

value in dBm
Reference Signal Received Power. Refer to <indDescr>.

<lstaRsrq>^(num)

value in dBm
Reference Signal Received Quality. Refer to <indDescr>.

<lstaRssi>^(num)

value in dBm
E-UTRA Carrier Received Signal Strength Indicator.

<lstaFrRep>^(num)

Number of reported frequencies. Refer to <indDescr>.

<lstaFrScnd>^(num)

Number of scanned frequencies. Refer to <indDescr>.

<lstaFrStart>^(num)

Start frequency of the scan. Refer to <indDescr>.

<lstaFrEnd>^(num)

End frequency of the scan. Refer to <indDescr>.

<lstaGrade>^(num)

Grade derived from the <lstaMean> value of the power scan results. Refer to <indDescr>.

<lstaMean>^(num)

value in dBm
Mean value of received signal strength across frequency. Refer to <indDescr>.

<srvProfileId>^(num)

Internet service profile identifier. Refer to AT^SISS, <srvProfileId>.

<issuer>^(str)

Certificate's issuer. Refer to <indDescr>.

<serialNumber>^(str)

Certificate's serial number. Refer to <indDescr>.

<subject>^(str)

Certificate's subject. Refer to <indDescr>.

<signatureAlgorithm>^(str)

Certificate's signature algorithm. Refer to <indDescr>.

<thumbprintAlgorithm>^(str)

Certificate's thumbprint algorithm. Refer to <indDescr>.

<thumbprint>^(str)

Certificate's thumbprint. Refer to <indDescr>.

<catmcovBitMask>^(str)

List of a detailed information on current coverage situation as a bitmask in hexadecimal format.

"0"	No LTE coverage
"1"	LTE visible
"2"	CAT-M support visible
"4"	Base-station provides sufficient coverage enhancement as required by the device

<coverage_ds>^(str)

The coverage decision.

"0"	No coverage
"1"	Coverage

<provMm>^(num)

Provider configuration mismatch.

0	No provider mismatch.
1	Provider mismatch.

<provCur>^(str)

Current operator configuration mnemonics.

<provNext>^(str)

Operator Configuration which is matching the SIM profile and is going to be loaded. Parameter is provided in the URC only if there is provider configuration mismatch (<provMm>=1) and if the SIM profile matches any pre-configured Operator Configuration.

3.3 AT+CPAS Activity Status

AT+CPAS execute command queries EMS31-X's activity status.

Syntax

Test Command

AT+CPAS=?

Response(s)

+CPAS: (list of supported <pas>s)

OK

Exec Command

AT+CPAS

Response(s)

+CPAS: <pas>

OK

PIN → Last

- + -

Reference(s)

3GPP TS 27.007 [43]

Parameter Description

<pas>^(num)

0	Ready
4	RRC connected state
5	Asleep

3.4 AT+WS46 Select wireless network

Syntax

Test Command

AT+WS46=?

Response(s)

(list of supported <n>s)

OK

Read Command

AT+WS46?

Response(s)

<n>

OK

Write Command

AT+WS46=<n>

Response(s)

OK

ERROR

+CME ERROR: <err>

PIN → Last

- + -

Reference(s)

3GPP TS 27.007 [43]

Parameter Description

<n> (num)

28

E-UTRAN only

4. Serial Interface Control Commands

The AT Commands described in this chapter allow the external application to determine various settings related to the EMS31-X's serial interface.

4.1 AT\Q Flow Control

[AT\Q](#) allows to configure flow control on the EMS31-X's asynchronous serial interface ASC0 and ASC1. [AT\Q](#) setting is always common for all interfaces and can be changed, for compatibility reasons, on each interface, but is only applicable to ASC0 and ASC1.

Syntax

```
Exec Command
AT\Q[<n>]
Response(s)
OK
```

PIN → Last
- + -

Parameter Description

Parameter	Description
<n> ^{(num)(&V)(&W)}	
0 - 2	These values are accepted, but don't have any effect. AT\Q setting is always reported as <n>=3 in the active profile (see AT&V).
[3] ^{(&F)(D)}	RTS/CTS hardware flow control

4.2 AT&C Set Data Carrier Detect (DCD) Line Mode

The [AT&C](#) command controls the behavior of the UE's DCD line.

Syntax

Exec Command	
AT&C[<value>]	
Response(s)	
OK	
PIN → Last	Reference(s)
- + -	V.250

Parameter Description

<value> ^{(num)(&V)(&W)}	
[0]	DCD line shall always be on.
1 ^(&F)	DCD line shall be on only when data carrier signal is present.
2	DCD line shall be on when one or more Internet services defined on the related serial channel are in an active state as described below. For details on the various service states refer to AT^SISI , parameter <srvState> or AT^SISO , parameter <srvState>. The DCD line status for an Internet service is signaled at the interface where the service had been opened with the AT command AT^SISO . <ul style="list-style-type: none">• Transparent TCP or Transparent UDP client, SOCKET, HTTP, SMTP: DCD shall be on when <srvState>="Connecting" or "Up"• Transparent TCP Listener: DCD shall be on when <srvState>="Up", "Alerting", "Connected" and "Released"• FTP: DCD shall be on when data channel is connected, i.e. <srvState>="Up"

4.3 AT&D Set Data Terminal Ready (DTR) Line Mode

[AT&D](#) determines how the UE responds if the DTR line is changed from ON to OFF state during data connection (PPP or active Internet Services transparent access mode; refer to [AT^SIST](#)).

Syntax

Exec Command	
AT&D[<value>]	
Response(s)	
OK	
PIN → Last	Reference(s)
- + -	V.250

Parameter Description

<value> ^{(num)(&V)(&W)}	
[0]	UE ignores status of the DTR line.
1	ON->OFF on DTR: Change to command mode while retaining the data connection.
2(&F)	ON->OFF on DTR: Disconnect the data connection (only for PPP) and change to command mode. For Internet service the behaviour is like AT&D1 .

4.4 AT&S Set Data Set Ready (DSR) Line Mode

AT&S determines how the UE sets the DSR line depending on its communication state.

Syntax

Exec Command	
AT&S[<value>]	
Response(s)	
OK	
PIN → Last	Reference(s)
- + -	ITU-T V.250 [13]

Parameter Description

<value> ^{(num)(&V)(&W)}	
[0] ^(&F)	DSR line is always ON
1	UE in command mode: DSR is OFF. UE in data mode: DSR is ON.

4.5 ATE AT Command Echo

ATE controls if the EMS31-X echoes characters received from TE during AT command state.

Syntax

Exec Command	
ATE[<value>]	
Response(s)	
OK	
PIN → Last	Reference(s)
- + -	V.250

Parameter Description

<value> ^{(num)(&V)(&W)}	
[0]	Echo mode off
1 ^(&F)	Echo mode on

4.6 AT+ICF Character Framing

AT+ICF controls character framing and parity format used for receiving and transmitting data via EMS31-X's asynchronous serial interfaces (UART).

Following settings are supported:

- 7 bits, even parity, 1 stop bit (**AT+ICF=5,1**)
- 7 bits, odd parity, 1 stop bit (**AT+ICF=5,0**)
- 8 bits, even parity, 1 stop bit (**AT+ICF=2,1**)
- 8 bits, no parity, 1 stop bit (**AT+ICF=3**)
- 8 bits, odd parity, 1 stop bit (**AT+ICF=2,0**)
- 8 bits, no parity, 2 stop bits (**AT+ICF=1**)

Changed **AT+ICF** settings take effect after restart. This requires storing any changes with **AT+W**. For compatibility reason **AT+ICF** can be used in Multiplex mode (refer **AT+CMUX**), though setting will not take effect. However, note that settings made on multiplex channel 1 are stored in the user defined profile with next **AT+W**.

If the current **<format>** setting uses no parity (e.g. **<format>=3**) and **AT+ICF** is used to switch to a format with parity (e.g. **<format>=2**), it is necessary to explicitly set parameter **<parity>**, e.g. **AT+ICF=2,1**. If not done correctly EMS31-X will respond with "+CME ERROR: invalid index". This is because for **<format>=3**, the parameter **<parity>** is set to the internal value 'no parity' which is not supported by **<format>=2**. Please remember that if an optional parameter is omitted for which no default is stated in this document, the value of the parameter remains unchanged.

Syntax

<p>Test Command</p> <p>AT+ICF=?</p> <p>Response(s)</p> <p>+ICF: (list of supported <format>s), (list of supported <parity>s)</p> <p>OK</p>	
<p>Read Command</p> <p>AT+ICF?</p> <p>Response(s)</p> <p>+ICF: <format>[, <parity>]</p> <p>OK</p>	
<p>Write Command</p> <p>AT+ICF=[<format>[, <parity>]]</p> <p>Response(s)</p> <p>OK</p> <p>ERROR</p> <p>+CME ERROR: <err></p>	
<p>PIN → Last</p> <p>- + +</p>	<p>Reference(s)</p> <p>V.250</p>

Parameter Description

<format> ^{(num)(&V)(&W)}	
Specifies the character format used for receiving and transmitting.	
1	8 data 0 parity 2 stop
2	8 data 1 parity 1 stop

3(&F)(D)	8 data 0 parity 1 stop
5	7 data 1 parity 1 stop

<parity>^{(num)(&V)(&W)}

Specifies the method of calculating the parity bit, if a parity bit is supported by <format>. If <format> does not support parity, this parameter has to be omitted.

0	odd
1	even

Note

- Generally, [AT+ICF](#) should be used as a standalone command as specified in Section 1.4.2, [Concatenating AT Commands](#).
If nevertheless combinations with other commands on the same command line cannot be avoided, there are several constraints to be considered:
 - Avoid combinations with the AT commands listed in Section 1.4.2, [Concatenating AT Commands](#).
 - Keep in mind that there shall be a minimum pause between two AT commands as specified in Section 1.5, [Communication between Customer Application and EMS31-X](#).
 - If switching to the new character framing takes effect while a response is being transmitted, the last bytes may be sent with the new character framing and thus, not properly transmitted. The following commands will be correctly sent at the new character framing.
Please consider this effect especially when local echo is active ([ATE1](#)).

4.7 AT+IPR Bit Rate

AT+IPR allows to query and set the bit rate of the EMS31-X's asynchronous serial interface (UART).
The test command returns the values of supported fixed bit rates.
The read command returns the current bit rate of the interface.
The write command determines the bit rate to be used for the interface.

It is not recommended to set bit rates lower than 9600 bps in order to avoid timing problems (see Section 1.5, [Communication between Customer Application and EMS31-X](#) for details about timing).

It is highly recommended to use **AT+IPR** as a standalone AT command, i.e. better do not combine with other commands on the same AT command line.

The current setting of **AT+IPR** will be preserved after firmware download (i.e. a firmware update does not restore the factory setting), or in the event of power failure.

Syntax

<p>Test Command</p> <p>AT+IPR=?</p> <p>Response(s)</p> <p>+IPR: () , (list of supported selectable <rate>s)</p> <p>OK</p>	
<p>Read Command</p> <p>AT+IPR?</p> <p>Response(s)</p> <p>+IPR: <rate></p> <p>OK</p>	
<p>Write Command</p> <p>AT+IPR=<rate></p> <p>Response(s)</p> <p>OK</p> <p>ERROR</p> <p>+CME ERROR: <err></p>	
<p>PIN → Last</p> <p>- + -</p>	<p>Reference(s)</p> <p>V.250</p>

Parameter Description

<rate> ^{(num)(&V)(NV)}
Bit rate per second (bps)
1200
2400
4800
9600
19200
38400
57600
115200 ^(D)
230400
460800

921600
3686400

Note

- Generally, [AT+IPR](#) should be used as a standalone command as specified in Section 1.4.2, [Concatenating AT Commands](#).
If nevertheless combinations with other commands on the same command line cannot be avoided, there are several constraints to be considered:
 - Avoid combinations with the AT commands listed in Section 1.4.2, [Concatenating AT Commands](#).
 - Keep in mind that there shall be a minimum pause between two AT commands as specified in Section 1.5, [Communication between Customer Application and EMS31-X](#).
 - If switching to the new bit rate takes effect while a response is being transmitted, the last bytes may be sent with the new bit rate and thus, not properly transmitted. The following commands will be correctly sent at the new bit rate.
Please consider this effect especially when local echo is active ([ATE1](#)).

4.8 AT+CMUX Multiplex mode

Multiplex mode according to 3GPP TS 27.010 [4] enables the use of virtual channels set up over one single serial interface. Every channel is used as an independent serial link. This way, up to three simultaneous AT command sessions can be handled at a time. For example, the first Mux channel can be used to send or receive data, while two Mux channels are available to control the module with AT commands or to establish a dedicated channel to receive Unsolicited Result Codes (URC), e.g. "+CIEV:" or "RING".

The multiplex driver can be installed on the first serial interface ASC0 and on the second serial interface ASC1. At a time Multiplex mode it can be started only on one of these interfaces. All remaining AT instances can be used in parallel. The second serial interface ASC1 is not recommended to be used for Multiplex mode.

EMS31-X incorporates an internal multiplexer and thus integrates all the functions needed to implement full-featured multiplex solutions. For the application on top, customers have the flexibility to create their own multiplex programs conforming to the multiplexer protocol. To help system integrators save the time and expense of designing multiplexer applications, Gemalto M2M GmbH offers WinMUX, a ready-to-use multiplex driver for Windows XP, Windows Vista and Windows 7. Another approach is to develop customized solutions based on the sources of the WinMUX driver.

Refer to "[Multiplexer User's Guide](#)" [3] which provides a detailed description of the multiplex architecture and step-by-step instructions of how to install and configure the Multiplex mode. The WinMUX driver and its source files can be supplied on request. Please contact your local distributor to obtain the latest installation software and user's guide.

[AT+CMUX](#) write command is used to enter Multiplex mode. Setup of the logical channels is initiated by the TE, i.e. the TE acts as initiator. This means that the TE shall ensure that logical channels are established before any further actions on the channels can be started. There is a timeout of five seconds, if the multiplexer protocol is enabled but no multiplexer control channel is established. Afterwards EMS31-X returns to AT command mode. The parameter maximum frame size (N1) according to 3GPP TS 27.010 [4] is implemented as 98 bytes by default. All other parameters are not available. Refer to "[Multiplexer User's Guide](#)" [3] for further details regarding frame size.

Syntax

Test Command

```
AT+CMUX=?
```

Response(s)

```
+CMUX: (list of supported<mode>s)
```

```
OK
```

Read Command

```
AT+CMUX?
```

Response(s)

```
+CMUX: <mode>
```

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Write Command

```
AT+CMUX=<mode>
```

Response(s)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

PIN → Last

```
- + +
```

Reference(s)

3GPP TS 27.007 [43],
3GPP TS 27.010 [4]

Parameter Description

<mode>^(num)

Enable Multiplex mode.

0 Basic option

Note

- In Multiplex mode, the write command `AT+IPR=<rate>` is accepted and always returns "OK" but has no effect.

5. Identification Commands

The AT Commands described in this chapter allow the external application to obtain various identification information related to the EMS31-X and linked entities.

5.1 ATI Display product identification information

The [ATI](#) execute command delivers a product information text.

Syntax

Exec Command	ATI	Response(s)	Cinterion EMS31-X REVISION <revUE> OK
Exec Command	ATI1	Response(s)	Cinterion EMS31-X REVISION <revUE> A-REVISION <revApp> OK
Exec Command	ATI176	Response(s)	<imeisv_number> OK
PIN → Last	- + -	Reference(s)	ITU-T V.250 [13]

Parameter Description

<revUE>^(num)

Revision of UE in the format X.Y.Z.T, where X.Y.Z. are numbers and T is a combination of a number and a letter (e.g. 5.0.1.0c).

<revApp>^(num)

Revision of Application software in the format XX.YYY.ZZ, where X, Y and Z are numbers.

`<imeisv_number>`^(num)

IMEISV (International Mobile station Equipment Identity and Software Version number)

For information on IMEISV refer to 3GPP TS 23.003, subclause 6.2.2 and 3GPP TS 27.007 [\[43\]](#). The 16 digits of IMEISV are composed of Type Allocation Code (TAC) (8 digits), Serial Number (SNR) (6 digits) and the software version (SVN) (2 digits separated by dot).

5.2 AT+CGMI Request manufacturer identification

[AT+CGMI](#) returns a manufacturer identification text.

Syntax

Test Command	
AT+CGMI=?	
Response(s)	
OK	
Exec Command	
AT+CGMI	
Response(s)	
Cinterion	
OK	
PIN → Last	Reference(s)
- + -	3GPP TS 27.007 [43]

5.3 AT+CGMM Request model identification

[AT+CGMM](#) returns a product model identification text.

Syntax

Test Command	
AT+CGMM=?	
Response(s)	
OK	
Exec Command	
AT+CGMM	
Response(s)	
EMS31-X	
OK	
PIN → Last	Reference(s)
- + -	3GPP TS 27.007 [43]

5.4 AT+CGMR Request revision identification of software status

[AT+CGMR](#) delivers a product firmware version identification.

Syntax

Test Command	
AT+CGMR=?	
Response(s)	
OK	
Exec Command	
AT+CGMR	
Response(s)	
REVISION <revUE>	
OK	
PIN → Last	Reference(s)
- + -	3GPP TS 27.007 [43]

Parameter Description

<revUE> ^(str)
Revision of UE in the format X.Y.Z.T, where X.Y.Z. are numbers and T is a combination of a number and a letter (e.g. 5.0.1.0c).

5.5 AT+CGSN Request International Mobile Equipment Identity (IMEI)

AT+CGSN delivers the International Mobile Equipment Identity (IMEI). Command is identical with: **AT+GSN**.

Syntax

<p>Test Command</p> <pre>AT+CGSN=?</pre> <p>Response(s)</p> <pre>OK</pre>	
<p>Exec Command</p> <pre>AT+CGSN</pre> <p>Response(s)</p> <pre><sn></pre> <pre>OK</pre>	
<p>Write Command</p> <pre>AT+CGSN=<snt></pre> <p>Response(s)</p> <pre>If <snt>=0 or 1</pre> <pre>+CGSN: <sn></pre> <pre>If <snt>=2</pre> <pre>+CGSN: <imeisv_number></pre> <pre>If <snt>=3</pre> <pre>+CGSN: <SVN></pre> <pre>OK</pre> <pre>ERROR</pre> <pre>+CME ERROR: <err></pre>	
<p>PIN → Last</p> <pre>- + -</pre>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

<sn>^(str)

International Mobile Equipment Identity (IMEI) identifying a mobile equipment used in the mobile network. IMEI is composed of Type Allocation Code (TAC) (8 digits), Serial Number (SNR) (6 digits) and the Check Digit (CD) (1 digit). For information on IMEI refer to 3GPP TS 23.003, subclause 6.2.1 and 3GPP TS 27.007 [43].

<snt>^(num)

Integer type indicating the serial number type that has been requested.

<imeisv_number>^(num)

IMEISV (International Mobile station Equipment Identity and Software Version number). The 16 digits of IMEISV are composed of Type Allocation Code (TAC) (8 digits), Serial Number (SNR) (6 digits) and the software version (SVN) (2 digits). For information on IMEISV refer to 3GPP TS 23.003, subclause 6.2.2 and 3GPP TS 27.007 [43].

<SVN>^(num)

Current SVN which is a part of IMEISV; refer 3GPP TS 23.003, subclause 6.2.2 and 3GPP TS 27.007 [43]. This allows identifying different software versions of a given mobile.

5.6 AT+GSN Request International Mobile Equipment Identity (IMEI)

AT+GSN delivers the International Mobile Equipment Identity (IMEI). Command is identical with **AT+CGSN**

Syntax

Test Command

AT+GSN=?

Response(s)

OK

Exec Command

AT+GSN

Response(s)

<sn>

OK

Write Command

AT+GSN=<snt>

Response(s)

If <snt>=0

<sn>

OK

ERROR

+CME ERROR: <err>

Write Command

AT+GSN=<snt>

Response(s)

If <snt>=1

+GSN: <sn>

If <snt>=2

+GSN: <imeisv_number>

If <snt>=3

+GSN: <SVN>

OK

ERROR

+CME ERROR: <err>

PIN → Last

- + -

Reference(s)

ITU-T V.250 [13]

Parameter Description

<sn>^(str)

International Mobile Equipment Identity (IMEI) identifying a mobile equipment used in the mobile network. IMEI is composed of Type Allocation Code (TAC) (8 digits), Serial Number (SNR) (6 digits) and the Check Digit (CD) (1 digit). For information on IMEI refer to 3GPP TS 23.003, subclause 6.2.1 and 3GPP TS 27.007 [43].

<snt>^(num)

Integer type indicating the serial number type that has been requested.

<imeisv_number>^(num)

IMEISV (International Mobile station Equipment Identity and Software Version number).

The 16 digits of IMEISV are composed of Type Allocation Code (TAC) (8 digits), Serial Number (SNR) (6 digits) and the software version (SVN) (2 digits). For information on IMEISV refer to 3GPP TS 23.003, subclause 6.2.2 and 3GPP TS 27.007 [43].

<SVN>^(num)

Current SVN which is a part of IMEISV; refer 3GPP TS 23.003, subclause 6.2.2 and 3GPP TS 27.007 [43]. This allows identifying different software versions of a given mobile.

5.7 AT+CIMI Request International Mobile Subscriber Identity (IMSI)

[AT+CIMI](#) delivers the International Mobile Subscriber Identity (IMSI). The IMSI permits the TE to identify the individual SIM attached to the UE.

Syntax

Test Command

```
AT+CIMI=?
```

Response(s)

```
OK
```

Exec Command

```
AT+CIMI
```

Response(s)

```
<imsi>
```

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

PIN → Last

```
+ + -
```

Reference(s)

3GPP TS 27.007 [43]

Parameter Description

<imsi>^(str)

International Mobile Subscriber Identity (string without quotes).

5.8 AT^SINFO Information Output

The `AT^SINFO` command delivers general product information text.

Syntax

Test Command

```
AT^SINFO=?
```

Response(s)

```
OK
```

Read Command

```
AT^SINFO?
```

Response(s)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Write Command

List all available operator configuration packages.

```
AT^SINFO="FW/DeltaPkg/avail"
```

Response(s)

```
^SINFO: [<FlavourID>, <FlavourFW>, <FlavourICCID>, <FlavourMCC-MNC>]
```

```
^SINFO: [<FlavourID>, <FlavourFW>, <FlavourICCID>, <FlavourMCC-MNC>]
```

```
...
```

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Write Command

Currently active flavour packages.

```
AT^SINFO="FW/DeltaPkg/current"
```

Response(s)

```
^SINFO: XXX.<FlavourID>
```

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

PIN → Last

```
- + -
```

Parameter Description

<FlavourID>^(str)

Name of "operator flavour", i.e. "att" for AT&T or "verizon" for Verizon.

<FlavourFW>^(str)

Corrsonding operator flavour's firmware version in format "xx.yyy", where "xx" stands for release of the product, updated once during the project, and "yyy" is a sub-version of the firmware.

<FlavourICCID>^(str)

List of "operator flavour" assigned ICCIDs. The <FlavourICCID> may contain single value or combinations of either single values and/or ranges separated by semicolon (;), i.e. (min-max;value), (value), (min-max;min-max), etc.

<FlavourMCC-MNC>^(str)

List of "operator flavour" assigned MCC-MNCs. The <FlavourMCC-MNC> might contain single value or several values separated by semicolon (;).

Note

- Please note that either <FlavourICCID> or <FlavourMCC-MNC> can be empty lists displayed as empty quotes (""). In case both <FlavourICCID> and <FlavourMCC-MNC> are empty, the operator configuration cannot be selected by automatic mechanism, as there is no value to be matched to.

6. Security Commands

The AT Commands described in this chapter allow the external application to determine various security related settings.

6.1 AT+CPIN PIN Authentication

The `AT+CPIN` write command can be used to enter one of the passwords listed below. The read command checks whether or not the UE is waiting for a password, or which type of password is required.

Syntax

Test Command <code>AT+CPIN=?</code> Response(s) OK	
Read Command <code>AT+CPIN?</code> Response(s) <code>+CPIN: <code></code> OK ERROR <code>+CME ERROR: <err></code>	
Write Command <code>AT+CPIN=<pin>[, <new pin>]</code> Response(s) OK ERROR <code>+CME ERROR: <err></code>	
PIN → Last - + -	Reference(s) 3GPP TS 27.007 [43]

Parameter Description

<code><pin></code> ^(str) Password (string type), e.g. SIM PIN1. If the requested password was a PUK then <code><pin></code> must be followed by <code><new pin></code> .
<code><new pin></code> ^(str) If the requested code was a PUK: specify a new password or restore the former disabled password.
<code><code></code> ^(text) SIM PIN authentication READY PIN has already been entered. No further entry needed. SIM PIN ME is waiting for SIM PIN1.

6.1 AT+CPIN

SIM PUK	ME is waiting for SIM PUK1 if PIN1 was disabled after three failed attempts to enter PIN1.
PH-SIM PIN	ME is waiting for phone-to-SIM card password if "PS" lock is active and the client inserts other SIM card than the one used for the lock. ("PS" lock is also referred to as phone or antitheft lock).
PH-NET PIN	ME is waiting for network personalisation password
PH-NET PUK	ME is waiting for network personalisation unblocking password

Notes

- Successful PIN authentication only confirms that the entered PIN was recognized and correct. The output of the result code OK does not necessarily imply that the mobile is registered to the desired network. Typical example: PIN was entered and accepted with OK, but the ME fails to register to the network. This may be due to missing network coverage, denied network access with currently used SIM card, no valid roaming agreement between home network and currently available operators etc. EMS31-X offers various options to verify the present status of network registration: For example, the [AT+COPS](#) command indicates the currently used network. With [AT+CEREG](#) you can also check the current status and activate an unsolicited result code which appears whenever the status of the network registration changes (e.g. when the ME is powered up, or when the network cell changes).
- See [AT+CPWD](#) for information on passwords.
- See [AT+CLCK](#) for information on lock types.

6.2 AT+CLCK Facility lock

AT+CLCK can be used to lock, unlock or interrogate a network or UE *<facility>*. The command can be aborted when network facilities are being set or interrogated.

Syntax

<p>Test Command</p> <p>AT+CLCK=?</p> <p>Response(s)</p> <p>+CLCK: list of supported <i><facility></i>s</p> <p>OK</p>	
<p>Write Command</p> <p>AT+CLCK=<i><facility></i>, <i><mode></i>[, <i><password></i>]</p> <p>Response(s)</p> <p>if <i><mode></i> is not equal 2 and command successful:</p> <p>OK</p> <p>if <i><mode></i>= 2 and command successful:</p> <p>+CLCK: <i><status></i></p> <p>OK</p> <p>ERROR</p> <p>+CME ERROR: <i><err></i></p>	
<p>PIN → Last</p> <p>- ± -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43], 3GPP TS 22.004 [22], 3GPP TS 22.088 [30], 3GPP TS 23.088, 3GPP TS 24.088</p>

Parameter Description

<i><facility></i> ^(str)	
“SC”	SIM (lock (U)SIM cards) (U)SIM requests password upon UE power-up and when this lock command is issued. <i><password></i> : SIM PIN1.
“PS”	PH SIM (lock PHone to (U)SIM card). UE requests password when other than current (U)SIM card is inserted. <i><password></i> : PH-SIM PIN.

Factory defined (U)SIM locks:

Typical examples of factory set (U)SIM locks are prepaid phones or network locks, used to restrict the operation of a mobile to a specific provider or operator. The client should be aware that each of these lock types can only be unlocked if the associated password is available. For example, a mobile can be locked to accept only (U)SIM cards from the respective provider, or even one single (U)SIM card. Once a different (U)SIM card is inserted the UE will prompt the client to enter a specific code. This is not the PUK of the (U)SIM card, but usually an 8-digit code which needs to be requested from the provider.

The locks can only be set by the manufacturer and need to be agreed upon between the parties concerned, e.g. provider, operator, distributor etc. on the one side and the manufacturer on the other side. For details contact your local dealer or Gemalto M2M GmbH.

<password> and instructions for unlocking must be obtained from the network provider.

“PN” Network Personalisation

<mode>^(num)

0	Unlock
1	Lock
2	Query status

<status>^(num)

0	Lock is inactive
1	Lock is active

<password>^(str)

Password string used to lock and to unlock a <facility>. Length and authority for passwords depend on the <facility> in question and are therefore listed in the section on parameter <facility>. Passwords can be modified with AT+CPWD.

Examples

EXAMPLE 1

Lock (U)SIM card (<facility>="SC")

AT+CLCK="SC",1,"9999"	The "SC" parameter enables or disables the SIM PIN authentication (PIN 1) when you power up the UE.
OK	(U)SIM card locked. As a result, SIM PIN 1 must be entered to enable UE to register to the network.

AT+CLCK="SC",0,"9999"	Unlocks SIM card.
OK	When powered up, UE registers to the network without requesting SIM PIN1.
	Note: Depending on the services offered by the provider, this feature is not supported by all SIM card types. If so, the command returns ERROR when you attempt to unlock the card.

To query the status of the SIM card lock:

AT+CLCK="SC",2	Query the status of SIM card lock.
+CLCK: 1	(U)SIM card is locked. SIM PIN1 must be entered to enable UE to register to the network.
OK	

EXAMPLE 2

Phone lock (<facility>="PS")

AT+CPIN?	Make sure that PIN1 authentication is valid.
OK	

To lock the UE to the currently inserted (U)SIM card, first specify a password for <facility> "PS":

AT+CPWD="PS","", "1234"	If "PS" lock has not been set before: enter new password. Old password shall be given as an empty string.
OK	

Optionally, if "PS" password was defined before, change existing password:

AT+CPWD="PS","1234", "3333"	To replace existing "PS" password: Enter old and new password.
OK	

Then, activate the Phone Lock:

AT+CLCK="PS",1,"3333"	Locks the mobile to the current SIM card.
OK	

To operate the mobile with the (U)SIM card for which "PS" lock was activated:

```
AT+CPIN?  
+CPIN: SIM PIN  
OK  
AT+CPIN="9999"  
OK
```

No additional password is required for operation ((U)SIM recognized by mobile).

To operate the mobile with other (U)SIM card than the one used for the "PS" lock:
Enter SIM PIN of present card, followed by "PS" lock password.

```
AT+CPIN?  
+CPIN: SIM PIN  
OK  
AT+CPIN="1111"  
OK
```

PIN authentication accepted.

```
AT+CPIN?  
+CPIN: PH-SIM PIN  
OK
```

"PS" lock password is required.

```
AT+CPIN="3333"  
OK
```

"PS" Lock password has been accepted. UE is fully operational now.

To deactivate the Phone Lock:

```
AT+CLCK="PS",0,"3333"  
OK
```

Phone Lock password has to be provided again.
Now the mobile can be used with any (U)SIM card, without the need of the phone lock password.

6.3 AT+CPWD Change Password

AT+CPWD allows to define a new password for a password protected <facility> lock function. Each password is a string of digits, the length of which varies with the associated <facility>. The test command returns a list of pairs which represent the available facilities and the maximum length of the associated password. See AT+CLCK for more information on the various lock features.

All parameters are mandatory:

- To delete a password use the syntax: AT+CPWD=<facility>,<old password>," (i.e. <new password> shall be given as an empty string).
- To specify a password the very first time (e.g. for "PS" lock) use the syntax: AT+CPWD=<facility>,",<new password> (i.e. <old password> shall be given as an empty string.)

Syntax

<p>Test Command</p> <p>AT+CPWD=?</p> <p>Response(s)</p> <p>+CPWD: list of supported (<facility>, <password length>)</p> <p>OK</p>	
<p>Write Command</p> <p>AT+CPWD=<facility>, <old password>, <new password></p> <p>Response(s)</p> <p>New password has been registered for the facility lock function.</p> <p>OK</p> <p>If parameter <old password> was not correct:</p> <p>+CME ERROR: 16 (+CME ERROR: incorrect password)</p> <p>If the password for the selected <facility> has been invalidated due to too many failed attempts:</p> <p>+CME ERROR: . . .</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: <err></p>	
<p>PIN → Last</p> <p>+ ± -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

<facility> ^(str)	
"SC"	SIM PIN. (U)SIM requests password upon ME power-up and when this lock command is issued. If incorrectly entered three times, the SIM PUK is required to perform authentication. Input of the SIM PUK password is possible only with AT command AT+CPIN. <password length>: 4 to 8 digits.
"PS"	Phone locked to (U)SIM card. ME requests password when other than current (U)SIM card is inserted. "PS" lock is frequently referred to as "phone lock", or "device lock".

Factory defined (U)SIM locks:

Typical examples of factory set (U)SIM locks are prepaid phones or network locks, used to restrict the operation of a mobile to a specific provider or operator. The client should be aware that each of these lock types can only be unlocked if the associated password is available. For example, a mobile can be locked to accept only (U)SIM cards from the respective provider, or even one single (U)SIM card. Once a different SIM card is inserted the ME will prompt the client to enter a specific code. This is not the PUK of the (U)SIM card, but usually an 8-digit

code which needs to be requested from the provider.

The locks can only be set by the manufacturer and need to be agreed upon between the parties concerned, e.g. provider, operator, distributor etc. on the one side and the manufacturer on the other side. For details contact your local dealer or Gemalto M2M GmbH.

“PN“ Network Personalisation

<password length>^(num)

4...16

Length of password. The range of permitted length for a password depends on the associated <facility>. It is available from the test command response, or in the description of parameter <facility>.

<old password>^(str)

Password specified for the facility.

<new password>^(str)

New password.

7. Call related Commands

The AT Commands described in this chapter are related to Mobile Originated (MOC, i.e. outgoing) Calls and Mobile Terminated (MTC, i.e. incoming) Calls.

7.1 ATH Disconnect existing connection

[ATH](#) disconnects any active PPP connection.

Syntax

Exec Command	
ATH[<n>]	
Response(s)	
OK	
PIN → Last	Reference(s)
+ - -	ITU-T V.250 [13]

Parameter Description

<n> ^(num)	
[0]	Disconnect from command line and terminate connection.

7.2 ATO Switch from command mode to data mode / PPP online mode

[ATO](#) is the corresponding command to the [+++](#) escape sequence: If the UE is in command mode during a data connection [ATO](#) causes the UE to return to data mode.

Syntax

Exec Command	
ATO[<n>]	
Response(s)	
If connection is not successfully resumed: NO CARRIER or TA returns to data mode from command mode CONNECT	
PIN → Last	Reference(s)
- - -	ITU-T V.250 [13]

Parameter Description

<n> ^(num)	
[0]	Switch from command mode to data mode

7.3 +++

7.3 +++ Switch from data mode or PPP online mode to command mode

The +++ escape sequence is only available during a packet switched connection. The +++ character sequence causes the EMS31-X to pause data mode and return to AT command mode. This allows to enter AT commands while maintaining the data connection to the remote device. The same task can be performed by toggling the DTR line if [AT&D](#) is set to 1. [ATO](#) is used to resume data or PPP online mode.

To prevent the +++ character sequence from being misinterpreted as data, it must be preceded and followed by a pause of 1000 ms. The +++ characters must be entered in quick succession, all within 1000 ms.

Syntax

Exec Command	
+++	
Response(s)	
OK	
PIN → Last	Reference(s)
- + -	ITU-T V.250 [13]

8. Network Service Commands

The AT Commands described in this chapter are related to various network services.

8.1 AT+COPN Read operator names

The `AT+COPN` command returns the list of operator names from the UE. Each operator code `<numericn>` that has an alphanumeric equivalent `<alphan>` in the UE memory is returned.

Syntax

Test Command	
AT+COPN=?	
Response(s)	
OK	
ERROR	
+CME ERROR: <code><err></code>	
Exec Command	
AT+COPN	
Response(s)	
+COPN: <code><numericn></code> , <code><alphan></code>	
[+COPN: ...]	
OK	
ERROR	
+CME ERROR: <code><err></code>	
PIN → Last	Reference(s)
- + -	3GPP TS 27.007 [43]

Parameter Description

<code><numericn></code> ^(str)
Operator in numeric format
<code><alphan></code> ^(str)
Operator in long alphanumeric format

8.2 AT+COPS Operator Selection

AT+COPS queries the present status of the EMS31-X's network registration and allows to determine whether automatic or manual network selection shall be used.

Three operator selection modes are available with **AT+COPS**:

- Automatic
EMS31-X searches for the home operator automatically. If successful the EMS31-X registers to the home network. If the home network is not found, EMS31-X goes on searching. If a permitted operator is found, EMS31-X registers to this operator.
If no operator is found the EMS31-X remains unregistered.
- Manual
Desired operator can be determined using the **AT+COPS** write command. If the operator is found, EMS31-X registers to it immediately. If the selected operator is forbidden, the EMS31-X remains unregistered.
- Manual/automatic
The UE first tries to find the operator determined via **AT+COPS** write command. If the UE fails to register to this operator, then it starts to select another (permitted) operator automatically.

The **AT+COPS** test command lists sets of five parameters, each representing an operator present in the network. A set consists of

- an integer indicating the availability of the operator,
- long alphanumeric format of the operator's name,
- short alphanumeric format of the operator's name,
- numeric format representation of the operator and
- an integer indicating the access technology of the operator.

Any of the parameters may be unavailable and will then be an empty field (,). The list of operators comes in the following order: Home network, networks referenced in SIM and other networks.

The operator list is followed by a list of the supported **<mode>**s and **<format>**s. These lists are delimited from the operator list by two commas.

The response to the **AT+COPS** test command is independent on the settings made with **<mode>** and **<rat>**. The **AT+COPS** test command will return a list of operators with the supported **<rat>**s.

The response to the **AT+COPS** read command depends on the registration status. If the UE is not registered, the read command returns only the current **<mode>**. If the UE is registered the response returns the currently selected operator, the currently set format and the currently used **<rat>**.

The **AT+COPS** write command forces an attempt to select and register to a network operator. If the selected operator is not available, no other operator will be selected (except **<mode>=4**). The selected operator name **<format>** will apply to further read commands, too.

Syntax

Test Command

```
AT+COPS=?
```

Response(s)

```
+COPS: [list of supported (<opStatus>, long alphanumeric <opName>, short alphanumeric <opName>, numeric <opName>, <rat>)s ], , (list of supported <mode>s), (list of supported <format>s)  
OK  
ERROR  
+CME ERROR: <err>
```

Read Command

```
AT+COPS?
```

Response(s)

```
+COPS: <mode>[, <format>, <opName>[, <rat>]]  
OK
```

Read Command	(Continued)
AT+COPS?	
Response(s)	
ERROR +CME ERROR: <err>	
Write Command	
AT+COPS=<mode>[, <format>[, <opName>[, <rat>]]]	
Response(s)	
OK ERROR +CME ERROR: <err>	
PIN → Last	Reference(s)
± ± -	3GPP TS 27.007 [43]

Parameter Description

<opStatus>^(num)

Operator Status

0	Unknown
1	Operator available
2	Current operator
3	Operator forbidden

<opName>^{(str)&(V)}

Operator Name

If test command: Operator name in long alphanumeric format, short alphanumeric format and numeric format.
If read command: Operator name as per <format>.
If write command: Operator name in numeric format.

<mode>^{(num)&(V)(NV)}

Only Parameter values 0 and 1 are stored in the non-volatile memory of the EMS31-X.

0 ^(D)	Automatic mode; <opName> field is ignored.
1	Manual operator selection The AT+COPS write command requires <opName> in numeric format, i.e. <format> shall be 2. When using this mode keep in mind that only the <mode> parameter is non-volatile, but not the selected <opName>. After restarting the UE the network will be selected according to the priority order specified in 3GPP TS 23.122: "Last Registered PLMN", "Home PLMN", "Preferred PLMN" (related (U)SIM elementary files are EF_LOCI, EF_IMSI, EF_PLMNwAct). The same priority order applies when swapping the (U)SIM during operation.
2	Manually deregister from network and remain unregistered until <mode>=0 or 1 or 4 is selected.
3	Set only <format> (for AT+COPS read command).
4	Manual / automatic selection; if manual selection fails, automatic mode (<mode>=0) is entered (<opName> field will be present).

`<rat>`^{(num)(&V)(NV)}

Radio Access Technology (RAT)

7 E-UTRAN

`<format>`^{(num)(&V)(&W)}

0^{(&F)(D)}

Long alphanumeric format of `<opName>`.

1

Short alphanumeric format of `<opName>`.

2

Numeric format of `<opName>`. This is the Location Area Identification (LAI) number, which consists of the 3-digit Mobile Country Code (MCC) plus the 2- or 3-digit Mobile Network Code (MNC).

Note

- `AT+COPS=?` shows PLMNs as available (`<opStatus>=1`) as long as a location update was not rejected and the PLMNs are not written to the forbidden PLMN list (SIM EF-FPLMN).

8.3 AT+CESQ Extended Signal Quality

The `AT+CESQ` command returns received signal quality parameters. If the current serving cell is not a GERAN cell, `<rxlev>` and `<ber>` are set to value 99. If the current serving cell is not a UTRA FDD or UTRA TDD cell, `<rscp>` is set to 255. If the current serving cell is not a UTRA FDD cell, `<ecno>` is set to 255. If the current serving cell is not an E-UTRA cell, `<rsrq>` and `<rsrp>` are set to 255.

Syntax

<p>Test Command</p> <p>AT+CESQ=?</p> <p>Response(s)</p> <p>+CESQ: (list of supported <code><rxlev></code>s), (list of supported <code><ber></code>s), (list of supported <code><rscp></code>s), (list of supported <code><ecno></code>s), (list of supported <code><rsrq></code>s), (list of supported <code><rsrp></code>s)</p> <p>OK</p>	
<p>Exec Command</p> <p>AT+CESQ</p> <p>Response(s)</p> <p>+CESQ: <code><rxlev></code>, <code><ber></code>, <code><rscp></code>, <code><ecno></code>, <code><rsrq></code>, <code><rsrp></code></p> <p>OK</p> <p>ERROR</p>	
<p>PIN → Last</p> <p>+ - -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

<code><rxlev></code> ^(num)	Received signal strength level (see 3GPP TS 45.008 [48] subclause 8.1.4). For 2G networks only
99	not known or not detectable
<code><ber></code> ^(num)	Channel bit error rate (in percent). For 2G networks only
99	not known or not detectable
<code><rscp></code> ^(num)	Received signal code power (see 3GPP TS 25.133 [41] subclauses 9.1.1.3 and 9.1.1.1.3) For 3G networks only
255	not known or not detectable
<code><ecno></code> ^(num)	Ratio of the received energy per PN chip to the total received power spectral density (see 3GPP TS 25.133 [41] subclause 9.1.2.3) For 3G networks only
255	not known or not detectable
<code><rsrq></code> ^(num)	Reference signal received quality (see 3GPP TS 36.133 [47] subclause 9.1.7). For 4G networks only
0	rsrq < -19.5 dB
1	-19.5 dB ≤ rsrq < -19 dB
2	-19 dB ≤ rsrq < -18.5 dB

...	
32	$-4 \text{ dB} \leq \text{rsrq} < -3.5 \text{ dB}$
33	$-3.5 \text{ dB} \leq \text{rsrq} < -3 \text{ dB}$
34	$-3 \text{ dB} \leq \text{rsrq}$
255	not known or not detectable

`<rsrp>(num)`

Reference signal received power (see 3GPP TS 36.133 [47] subclause 9.1.4). For 4G networks only

0	$\text{rsrp} < -140 \text{ dBm}$
1	$-140 \text{ dBm} \leq \text{rsrp} < -139 \text{ dBm}$
2	$-139 \text{ dBm} \leq \text{rsrp} < -138 \text{ dBm}$
...	
95	$-46 \text{ dBm} \leq \text{rsrp} < -45 \text{ dBm}$
96	$-45 \text{ dBm} \leq \text{rsrp} < -44 \text{ dBm}$
97	$-44 \text{ dBm} \leq \text{rsrp}$
255	not known or not detectable

8.4 AT+CPOL Preferred Operator List

AT+CPOL read command queries the list of the preferred operators.
AT+CPOL write command allows to edit the list of the preferred operators.
 The response of **AT+CPOL** read command also depends on the setting of **AT+CPLS**.
 If **<index>** is given but **<operator>** is left out, the entry is deleted.

Syntax

<p>Test Command</p> <p>AT+CPOL=?</p> <p>Response(s)</p> <p>+CPOL: (list of supported <index>s), (list of supported <format>s)</p> <p>OK</p> <p>ERROR</p> <p>+CME ERROR: <err></p>	
<p>Read Command</p> <p>AT+CPOL?</p> <p>Response(s)</p> <p>+CPOL: <index>, <format>, <operator>[, <gsm>, <gsm_compact>, <utran>, <e-utran>]</p> <p>+CPOL: ...</p> <p>OK</p> <p>ERROR</p> <p>+CME ERROR: <err></p>	
<p>Write Command</p> <p>AT+CPOL=[<index>][, <format>][, <operator>][, <gsm>, <gsm_compact>, <utran>, <e-utran>]]]</p> <p>Response(s)</p> <p>OK</p> <p>ERROR</p> <p>+CME ERROR: <err></p>	
<p>PIN → Last</p> <p>+ + -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

<index> ^(num)	
The order number of the operator in the SIM preferred operator list.	
<format> ^(num)	
0	Long alphanumeric format <operator>
1	Short alphanumeric format <operator>
2	Numeric format <operator>
<operator> ^(str)	
The operator in the format specified in <format> .	

<gsm>^(num)

0	AcT GSM disabled
1	AcT GSM enabled

<gsm_compact>^(num)

0	AcT GSM Compact disabled
---	--------------------------

<utran>^(num)

0	AcT UTRAN disabled
1	AcT UTRAN enabled

<e-utran>^(num)

0	AcT E-UTRAN disabled
1	AcT E-UTRAN enabled

Note

- The Access Technology selection parameters <gsm>, <gsm_compact>, <utran>, <e-utran> are required for SIM cards or UICCs containing PLMN selector with Access Technology.

8.5 AT+CPLS Select Preferred Operator List

AT+CPLS is used to select a preferred PLMN list defined in Elementary Files of the SIM card or active application of the (U)SIM. The setting takes effect for the **AT+CPOL** command.

Syntax

<p>Test Command</p> <pre>AT+CPLS=?</pre> <p>Response(s)</p> <pre>+CPLS: (list of (U)SIM supported <plmn-selector>s) OK</pre>	
<p>Read Command</p> <pre>AT+CPLS?</pre> <p>Response(s)</p> <pre>+CPLS: <plmn-selector> OK ERROR +CME ERROR: <err></pre>	
<p>Write Command</p> <pre>AT+CPLS=[<plmn-selector>]</pre> <p>Response(s)</p> <pre>OK ERROR +CME ERROR: <err></pre>	
<p>PIN → Last</p> <p>+ - -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

<plmn-selector> ^(num)	
0 ^(P)	User controlled PLMN with EF _{PLMNwAcT} /EF _{PLMNsel} If <plmn-selector> is omitted from the write command, the default value 0 is used instead.
1	Operator controlled PLMN selector with EF _{OPLMNwAcT}
2	HPLMN selector with EF _{HPLMNwAcT}

8.6 AT+CTZR Time Zone Reporting

The [AT+CTZR](#) command enables and disables event reporting for changes of time zone and daylight saving time. If reporting is enabled the EMS31-X returns unsolicited result codes whenever the time zone changes.

Syntax

<p>Test Command</p> <pre>AT+CTZR=?</pre> <p>Response(s)</p> <pre>+CTZR: (list of supported <mode>s) OK</pre>	
<p>Read Command</p> <pre>AT+CTZR?</pre> <p>Response(s)</p> <pre>+CTZR: <mode> OK ERROR +CME ERROR: <err></pre>	
<p>Write Command</p> <pre>AT+CTZR=<mode></pre> <p>Response(s)</p> <pre>OK ERROR +CME ERROR: <err></pre>	
<p>PIN → Last</p> <p>- + -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Unsolicited Result Codes

URC 1

```
+CTZV: <timezone>
```

The URC indicates that the time zone has changed.

URC 2

```
+CTZE: <timezone>, <dst>[, <time>]
```

The URC provides information on daylight saving time.

Parameter Description

<mode>^(num)	
0 ^(P)	Disable event reporting by URCs
1	Enable time event reporting by "+CTZV"
2	Enable time event reporting by "+CTZE"
<timezone>^(num)	
Integer value indicating the time zone	

`<time>`^(str)

Time in format "yy/MM/dd,hh:mms", wherein characters indicates year, month, day, hour, minutes, seconds.

`<dst>`^(num)

Parameter indicates daylight saving time as follows:

0	No adjustment for daylight daving time
1	+1 hour adjustment for daylight saving time
2	+2 hour adjustment for daylight saving time

8.7 AT+CTZU Automatic Time Zone Update

The [AT+CTZU](#) command enables and disables automatic time zone update via NITZ. In addition, [AT+CTZR](#) can be used to activate indicators reporting time zone information change.

Syntax

Test Command	
AT+CTZU=?	
Response(s)	
+CTZU: (list of supported <mode> s)	
OK	
Read Command	
AT+CTZU?	
Response(s)	
+CTZU: <mode>	
OK	
ERROR	
+CME ERROR: <err>	
Write Command	
AT+CTZU= <mode>	
Response(s)	
OK	
ERROR	
+CME ERROR: <err>	
PIN → Last	Reference(s)
- + -	3GPP TS 27.007 [43]

Parameter Description

<mode> ^(num)	
0	Disable automatic time zone update via NITZ
1 ^(P)	Enable automatic time zone update via NITZ.

8.8 AT+CPSMS Enable or Disable Power Saving Mode

AT+CPSMS controls settings of the UE's power saving mode (PSM) parameters. It controls whether the UE wants to apply PSM or not, as well as the requested extended periodic TAU value in E-UTRAN and the requested Active Time value.

Syntax

<p>Test Command</p> <pre>AT+CPSMS=?</pre> <p>Response(s)</p> <pre>+CPSMS: (list of supported <mode>s),,, (list of supported <RequestedPeriodicTAU>s), (list of supported <RequestedActiveTime>s) OK ERROR +CME ERROR:<err></pre>	
<p>Read Command</p> <pre>AT+CPSMS?</pre> <p>Response(s)</p> <pre>+CPSMS: <mode>,,[, <RequestedPeriodicTAU>][, <RequestedActiveTime>] OK ERROR +CME ERROR:<err></pre>	
<p>Write Command</p> <pre>AT+CPSMS=[<mode>,,[, <RequestedPeriodicTAU>[, <RequestedActiveTime>]]]</pre> <p>Response(s)</p> <pre>OK ERROR +CME ERROR:<err></pre>	
<p>PIN → Last</p> <pre>- - -</pre>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

<mode>^{(num)(NV)}

Enable/disable the use of power saving mode (PSM) in the UE.

0 ^(D)	Disable the use of PSM
1	Enable the use of PSM
2	Disable the use of PSM and reset <RequestedPeriodicTAU> and <RequestedActiveTime> to default.

<RequestedPeriodicTAU>^{(str)(NV)}

One byte in an 8 bit format.

Requested extended periodic TAU value to be allocated to the UE in E-UTRAN. The requested extended periodic TAU value is coded as one byte (octet 3) of the GPRS Timer 3 information element coded as bit format (e.g. "01000111" equals 70 hours). For more information on coding and value range, see 3GPP TS 24.008 [37], table 10.5.163a).

<RequestedActiveTime>^{(str)(NV)}

One byte in an 8 bit format.

Requested Active time value to be allocated to the UE. The requested Active Time value is coded as one byte (octet 3) of the GPRS Timer 2 information element coded as bit format (e.g. "00100100" equals 4 minutes). For more information on coding and value range, see 3GPP TS 24.008 [37], table 10.5.163).

8.9 AT^SMONI Monitoring Serving Cell

The `AT^SMONI` command supplies information of the serving cell.

Syntax

Test Command

```
AT^SMONI=?
```

Response(s)

```
OK
```

Exec Command

```
AT^SMONI
```

Response(s)

See: Section 8.9.1, [AT^SMONI Responses](#)

```
OK
```

Write Command

```
AT^SMONI=255
```

Response(s)

See: Section 8.9.1, [AT^SMONI Responses](#)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

PIN → Last

```
- - -
```

Notes

- The parameters LAC and cell are presented as hexadecimal digits, the remaining parameters are composed of decimal digits.
- If the BS supports frequency hopping during a connection, the dedicated channel (ARFCN) is not stable. This mode is indicated by `chann = 'h'`.
- The service state 'SEARCH' (Searching) could mean a PLMN search or a cell search. This can also happen for a short time when the UE is leaving connected mode.

8.9.1 AT^SMONI Responses

UE is not connected:

- UE is camping on a LTE (4G) cell:

Syntax:

```
^SMONI: ACT,EARFCN,Band,DL bandwidth,UL bandwidth,Mode,MCC,MNC,TAC,Global Cell ID,Physical Cell ID,Srxlev,RSRP,RSRQ,Conn_state
```

Example:

```
^SMONI: 4G,6300,20,10,10,FDD,262,02,BF75,0345103,350,33.00,-94.30,-7.10,NOCONN
```

- UE is searching and could not (yet) find a suitable LTE (4G) cell:

Syntax:

```
^SMONI: ACT,EARFCN,Band,DL bandwidth,UL bandwidth,Mode,MCC,MNC,TAC,Global Cell ID,Physical Cell ID,Srxlev,RSRP,RSRQ,Conn_state
```

Example:

```
^SMONI: 4G,,,,,,,,,,,,,SEARCH
```

8.9 AT^SMONI

- UE is in the LTE PSM (Power Saving Mode):

Syntax:

```
^SMONI: ACT,EARFCN,Band,DL bandwidth,UL bandwidth,Mode,MCC,MNC,TAC,Global Cell ID,Physical Cell ID,Srxlev,RSRP,RSRQ,Conn_state
```

Example:

```
^SMONI: 4G,,,,,,,,,,,,,SLEEP - PSM
```

- UE is camping on a LTE (4G) cell but not registered to the network (only emergency call allowed):

Syntax:

```
^SMONI: ACT,EARFCN,Band,DL bandwidth,UL bandwidth,Mode,MCC,MNC,TAC,Global Cell ID,Physical Cell ID,Srxlev,RSRP,RSRQ,Conn_state
```

Example:

```
^SMONI: 4G,6300,20,10,10,FDD,262,02,BF75,0345103,350,33.21,-94.30,-7.10,LIMSRV
```

UE is connected:

- LTE (4G) cell:

Syntax:

```
^SMONI: ACT,EARFCN,Band,DL bandwidth,UL bandwidth,Mode,MCC,MNC,TAC,Global Cell ID,Physical Cell ID,TX_power,RSRP,RSRQ,Conn_state
```

Example:

```
^SMONI: 4G,6300,20,10,10,FDD,262,02,BF75,0345103,350,90.00,-94.10,-7.00,CONN
```

Columns for LTE (4G) Serving Channel parameters:

Column	Description
ACT	Access Technology
EARFCN	E-UTRA Absolute Radio Frequency Channel Number
Band	E-UTRA frequency band (see 3GPP 36.101)
DL bandwidth	DL bandwidth
UL bandwidth	UL bandwidth
Mode	FDD or TDD
MCC	Mobile Country Code (first part of the PLMN code)
MNC	Mobile Network Code (second part of the PLMN code)
TAC	Tracking Area Code (see 3GPP 23.003 Section 19.4.2.3)
Global Cell ID	Global Cell ID
Physical Cell ID	Physical Cell ID
Srxlev	RX level value for base station selection in dB (see 3GPP 25.304)
RSRP	Reference Signal Received Power (see 3GPP 36.214 Section 5.1.1.)
RSRQ	Reference Signal Received Quality (see 3GPP 36.214 Section 5.1.2.)
TX power	Used Uplink Power
Conn_state	Connection state. Can be one of following: CONN, LIMSRV, SLEEP - PSM, NOCONN or SEARCH

8.9.2 Service states

Depending on the service state, an additional textual output is generated (refer also to the response examples):

-
- "SEARCH" (Searching) - The MS is searching, but could not (yet) find a suitable cell. This output appears after restart of the MS or after loss of coverage.
 - "NOCONN" (No connection) - The MS is camping on a cell and registered to the network. The service state is 'idle', i.e. there is no connection established or a dedicated channel in use.
 - "SLEEP - PSM" (Sleeping) - The MS is in LTE PSM (Power Saving Mode).
 - "LIMSRV" (Limited Service) - The MS is camping on a cell but not registered to the network. Only emergency calls are allowed. The MS enters this state, for example, when
 - no SIM card is inserted, or PIN has not been given,
 - neither Home PLMN nor any other allowed PLMN are found,
 - registration request was not answered or denied by the network (use [AT+CEREG](#) to query the registration status),
 - authentication failed.

8.10 AT^SMONP Monitoring Neighbour Cells

The [AT^SMONP](#) supplies information of active cells and all neighbour cells. The active cell information will be delivered additively because an UE can be situated in Soft Handover or Softer Handover.

Syntax

Test Command

```
AT^SMONP=?
```

Response(s)

```
OK
```

Exec Command

```
AT^SMONP
```

Response(s)

See: Section [8.10.1](#), [AT^SMONP Responses](#)

```
OK
```

Write Command

```
AT^SMONP=255
```

Response(s)

See: Section [8.10.2](#), [AT^SMONP Enhanced Responses](#)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

PIN → Last

```
- - -
```

Notes

- Due to the fact that not all necessary information of the neighbour cells can be decoded during a connection, there are several constraints to be considered:
 - Only neighbour cells that have already been visible in IDLE mode will be further updated, as long as they are still included in the list.
 - Though new neighbour cells can be added to the list (e.g. due to handover), their C1 and C2 parameters cannot be displayed until the connection is released. In this case "-" is presented for C1 and C2.
- The neighbour cells have the same PLMN as the serving cell. In case of searching for a network the serving cell can change and the UE shows different sets of neighbour cells depending on the PLMN of the serving cell.
- Parameters for which no values are available are shown as "-".
- If [AT^SMONP](#) or [AT^SMONP=255](#) is called while the UE is searching for a network, the command will return "+CME ERROR: operation not supported".

8.10.1 AT^SMONP Responses

Responses of [AT^SMONP](#) execute command:

- In case of a LTE (4G) serving cell:

Syntax:

4G:

```
EARFCN1,RSRQ1,RSRP1,Srxlev1,PCI1,RSSI1
```

```
EARFCN2,RSRQ2,RSRP2,Srxlev2,PCI2,RSSI2
```

```
...
```

8.10 AT^SMONP

```
EARFCNn,RSRQn,RSRPn,Srxlevn,PCIn,RSSIn
```

Example:

```
4G:
1830,-11.70,-91.50,38,368,-61.03
1830,-11.60,-93.40,36,262,-72.14
1830,-11.70,-95.20,35,329,-74.44
1830,-14.30,-95.10,34,261,-72.52
1830,-18.40,-105.80,24,248,-74.24
OK
```

Columns for LTE (4G) parameters:

Column	Description
EARFCN	E-UTRA Absolute Radio Frequency Channel Number
RSRQ	Reference Signal Received Quality as measured by L1 in dB (see ETSI TS 136 214 version 10.1.0 Section 5.1.3.)
RSRP	Reference Signal Received Power as measured by L1 in dBm (see ETSI TS 136 214 version 10.1.0 Section 5.1.1.)
Srxlev	RX level value for base station selection in dB (see 3GPP 25.304)
PCI	Physical Cell ID
RSSI	Received Signal Strength Indication as measured by L1 in dBm

8.10.2 AT^SMONP Enhanced Responses

Responses of write command `AT^SMONP=255`:

- In case of a 4G serving cell:

Syntax:

```
4G:
EARFCN1,RSRQ1,RSRP1,Srxlev1,PCI1,RSSI1,Cell ID1,MCC1,MNC1,TAC1
EARFCN2,RSRQ2,RSRP2,Srxlev2,PCI2,RSSI2,Cell ID2,MCC2,MNC2,TAC2
...
EARFCNn,RSRQn,RSRPn,Srxlevn,PCIn,RSSIn,Cell IDn,MCCn,MNCn,TACn
```

Example:

```
4G:
1830,-12.60,-91.40,38,368,-60.02,368,262,03,C463
1830,-11.70,-93.20,36,262,-72.05,368,262,03,C463
1830,-10.90,-93.30,36,329,-73.77,368,262,03,C463
1830,-15.10,-96.50,33,261,-72.60,368,262,03,C463
OK
```

Columns for LTE (4G) parameters:

Column	Description
EARFCN	E-UTRA Absolute Radio Frequency Channel Number
RSRQ	Reference Signal Received Quality as measured by L1 in dB (see ETSI TS 136 214 version 10.1.0 Section 5.1.3.)
RSRP	Reference Signal Received Power as measured by L1 in dBm (see ETSI TS 136 214 version 10.1.0 Section 5.1.1.)
Srxlev	RX level value for base station selection in dB (see 3GPP 25.304)
PCI	Physical Cell ID
RSSI	Received Signal Strength Indication as measured by L1 in dBm
Cell ID	LTE Serving cell ID
MCC	Mobile Country Code
MNC	Mobile Network Code
TAC	Tracking Area Code (see 3GPP 23.003 Section 19.4.2.3)

8.11 AT^SNMON Network Monitoring

The `AT^SNMON` command can be used to monitor various network information.

Syntax

<p>Test Command</p> <pre>AT^SNMON=?</pre> <p>Response(s)</p> <pre>^SNMON: "INS4G", (list of supported <action>s), (list of supported <rba4g-1>s), (list of supported <rba4g-2>s) OK ERROR +CME ERROR: <err></pre>	<p>Write Command</p> <p>Start informal network scan for 4G bands. Parameter <code><action></code> shall be 2.</p> <pre>AT^SNMON="INS4G", <action>[, <rba4g-1>][, <rba4g-2>]</pre> <p>Response(s)</p> <pre>^SNMON: "INS4G", <reserved>, <rba4g-1>, <rba4g-2>, <cell_ID>, <tac>, <plmn>, <earfcn>, <pcid>, <bwdl>, <bwup>, <rsrp>, <rsrq>, <sib1-br></pre> <p>In case of no cell found for specific band then all values behind <code><rba4g-1></code> and <code><rba4g-2></code> will be omitted:</p> <pre>^SNMON: "INS4G", <reserved>, <rba4g-1>, <rba4g-2></pre> <p>OK ERROR +CME ERROR: <err></p>
<p>PIN → Last</p> <p>- ± -</p>	<p>Reference(s)</p> <p>3GPP TS 45.008 [48]</p>

Parameter Description

<code><action></code> ^(num)	
This parameter determines the action to be taken for the monitoring command.	
0	Reserved value
1	Reserved value
2	Query values
<code><reserved></code> ^(num)	
0	Value returned in scan output responses. Value has no meaning and can be ignored.
<code><rba4g-1></code> ^{(str)(NV)}	
<code><rba4g-1></code> determines 4G frequency bands the UE is allowed to use. Values are given in <i>hexadecimal 32-bit-value order</i> . Every bit corresponds to a dedicated band number. Leading zeros are not necessary. The number range of <code><rba4g-1></code> covers band 1 to band 32.	
"2"	LTE 1900 (B2)
"8"	LTE 1700 (B4)

“800” LTE 700 (B12)
“1000” LTE 700 (B13)

<rba4g-2>^{(str)(NV)}

<rba4g-2> determines 4G frequency bands the UE is allowed to use. Values are given in *hexadecimal 32-bit-value order*. Every bit corresponds to a dedicated band number. Leading zeros are not necessary. The number range of <rba4g-2> covers band 33 to band 64. If the UE does not support bands 33 to 64 the AT^SNMON test command returns the value range 0 - 0.

<cell_ID>^(str)

Cell ID
28 bit length for LTE

<tac>^(num)

Tracking Area Code (see 3GPP 23.003 Section 19.4.2.3)

<plmn>^(str)

PLMN code
Public Land Mobile Network Code

<earfcn>^(num)

E-UTRA Absolute Radio Frequency Channel Number

<rssi>^(num)

Received signal level of the BCCH carrier. The indicated value is composed of the measured value in dBm plus an offset.
This is in accordance with a formula specified in 3GPP TS 45.008 [48]

<dbm>^(str)

Signal Strength
signal strength in dBm

<pcid>^(num)

Physical Cell ID

<bwdl>^(num)

bandwidth in download direction

<bwup>^(num)

bandwidth in upload direction

<rsrp>^(num)

Reference Signal Received Power as measured by L1 in dBm (see ETSI TS 136 214 version 10.1.0 Section 5.1.1.)

<rsrq>^(num)

Reference Signal Received Quality as measured by L1 in dB (see ETSI TS 136 214 version 10.1.0 Section 5.1.3.)

<sib1-br>^(num)

Indicates the cell support for bandwidth reduced devices (e.g. LTE Cat-M devices)

0	SIB1-BR not supported
1	SIB1-BR supported

<tac>^(num)

Tracking Area Code (see 3GPP 23.003 Section 19.4.2.3)

Notes

- The `AT^SNMON="INS4G"` command can be used even if no SIM is present or no SIM-PIN was entered.
- The `AT^SNMON="INS4G"` command depends on the registration state. A complete network scan is only possible if the module is not registered. To perform a complete scan it is recommended to deregister manually from the network.
- The `AT^SNMON="INS4G"` command may be aborted internally by any other network related activity that interferes with the network scan.
- The time required for a network scan depends not only on the number of radio bands to be scanned, but also on ripple and existing ghost peaks on the scanned radio bands.

8.12 AT+CEDRXS eDRX Setting

The [AT+CEDRXS](#) command controls the settings of eDRX parameters of the UE. The command controls whether the UE wants to apply eDRX or not, as well as the requested eDRX value for each specified type of access technology.

The [AT+CEDRXS](#) test command displays the supported [<mode>](#)s and the value ranges for the access technology and the requested eDRX value as compound values.

The [AT+CEDRXS](#) read command displays current settings for each defined value of [<AcT-type>](#).

Syntax

```

Test Command
AT+CEDRXS=?
Response(s)
+CEDRXS: (list of supported <mode>s), (list of supported <AcT-type>s), (list of supported
<Requested_eDRX_value>s)
OK

Read Command
AT+CEDRXS?
Response(s)
[+CEDRXS: <AcT-type>, <Requested_eDRX_value>]
OK
ERROR
+CME ERROR: <err>

Write Command
AT+CEDRXS=[<mode>[, <AcT-type>[, <Requested_eDRX_value>]]]
Response(s)
OK
ERROR
+CME ERROR: <err>

```

PIN → Last
 - + -

Unsolicited Result Code

When [<mode>](#)=2:

```
+CEDRXP: <AcT-type>[, <Requested_eDRX_value>[, <NW_provided_eDRX_value>[,
<Paging_time_window>]]]
```

eDRX is enabled and URC code is enabled when the eDRX values provided by network has changed.

Parameter Description

<mode> ^(num)	
0	Disable the use of eDRX.
1	Enable the use of eDRX.

- 2 Enable the use of eDRX and enable the `<+CEDRXP>` unsolicited result code.
- 3 Disable the use of eDRX and reset the `<Requested_eDRX_value>` to default.

`<AcT-type>`^(num)

Type of access technology. This parameter is used to specify the relationship between the type of the access technology and requested eDRX value.

- 0 Access technology is not using eDRX. This parameter value is only used in the unsolicited result code
- 4 E-UTRAN (WB-S1 mode)

`<Requested_eDRX_value>`^(str)

Half a byte in a 4 bit format. The values are coded as follows:

"0000"	5,12 seconds
"0001"	10,24 seconds
"0010"	20,48 seconds
"0011"	40,96 seconds
"0100"	61,44 seconds
"0101"	81,92 seconds
"0110"	102,4 seconds
"0111"	122,88 seconds
"1000"	143,36 seconds
"1001"	163,84 seconds
"1010"	327,68 seconds
"1011"	655,36 seconds
"1100"	1310,72 seconds
"1101"	2621,44 seconds

`<NW_provided_eDRX_value>`^(str)

Half a byte in a 4 bit format. The values are coded in the same way as for `<Requested_eDRX_value>`

`<Paging_time_window>`^(str)

Half a byte in a 4 bit format. The requested values are applied immediately and are stored non-volatile. In case the module is attached to the network the change of the values will trigger tracking area update. The stored configuration is used during the network attach after restart in case the auto-attach is enabled.

The values are coded as follows:

"0000"	1,28 seconds
"0001"	2,56 seconds
"0010"	3,84 seconds
"0011"	5,12 seconds
"0100"	6,40 seconds
"0101"	7,68 seconds
"0110"	8,96 seconds
"0111"	10,24 seconds
"1000"	11,52 seconds

"1001"	12,80 seconds
"1010"	14,08 seconds
"1011"	15,36 seconds
"1100"	16,64 seconds
"1101"	17,92 seconds
"1110"	19,20 seconds
"1111"	20,48 seconds

8.13 AT+CEDRXRDP Read dynamic eDRX parameters

The `AT+CEDRXRDP` command reads the current dynamic eDRX parameters applied in the cell. The command returns `<AcT-type>` and `<Requested_eDRX_value>`, `<NW_provided_eDRX_value>` and `<Paging_time_window>` if eDRX is used for the cell that the MS is currently registered to. If the cell that the MS is currently registered to is not using eDRX, the `<AcT-type>=0` is returned.

Syntax

Test Command

```
AT+CEDRXRDP=?
```

Response(s)

```
OK
```

Exec Command

```
AT+CEDRXRDP
```

Response(s)

```
+CEDRXRDP:<AcT-type>[, <Requested_eDRX_value>[, <NW_provided_eDRX_value>[,  
<Paging_time_window>]]]
```

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

PIN → Last

- + -

8.14 AT^SNLWM2M ODIS/DHIR/Portfolio Management

AT^SNLWM2M is used to manage ODIS/DHIR/Portfolio implementation using LWM2M. The command is used only to update the existing objects, not to create a new one. Portfolio object with object ID=16 has 2 instances and each of the instances has 4 fields.

Portfolio objects can be updated by "cfg" command, read by "cfg_read" command and reset to default values by "ctl","init" command. Values of the fields updated by "cfg" or "ctl","init" commands are stored volatile until the "report" command is executed to commit the values non-volatile and report them towards LWM2M server.

Syntax

Test Command

```
AT^SNLWM2M=?
```

Response(s)

```
^SNLWM2M:"cfg", (list of available <object URN>s), (max. string length of <value>s), (range for supported <hash>es)
```

```
^SNLWM2M:"cfg_read", (list of available <object URN>s), (max. string length of <value>s), (range for supported <hash>es)
```

```
^SNLWM2M:"ctl", "init", (range for supported <hash>es)
```

```
^SNLWM2M:"report"
```

```
OK
```

Write Command

The following command shall be used to configure field values of the portfolio object:

```
AT^SNLWM2M="cfg" , <object URN>, <value>[, <hash>]
```

Response(s)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Write Command

The following command shall be used to reset field values of the portfolio object to their default values:

```
AT^SNLWM2M="ctl" , "init" [, <hash>]
```

Response(s)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Write Command

The following command shall be used to read field values of the portfolio object. Return value for each field consists of pair of values - volatile and non-volatile. Volatile storage value is marked with asterix (*)

Note: In case "cfg_read" command is executed without defined object URN then all field values for the portfolio object ID=16 will be returned.

```
AT^SNLWM2M="cfg_read" [, [<object URN>][, <hash>]]
```

Response(s)

```
^SNLWM2M: "cfg_read" , <object URN>, <value>
```

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Write Command

The following command shall be used to report to the network the field values that have been modified by "cfg" or "ctl", "init" commands and to store them non-volatile:

AT^SNLWM2M="report"

Response(s)

OK

ERROR

+CME ERROR: <err>

PIN → Last

- + -

Parameter Description

<object URN>^{(str)(NV)}

This parameter is used for identification of portfolio object fields to be updated. Portfolio object fields are defined by its uniform resource name (URN) that consists of {object ID}/{instance}/{resource identity}/{field id}, where:

"Object ID"	Identification of portfolio object is constant (16).
"Instance"	Object has two instances defined as 0 or 1.
"Resource ID"	Resource identification is constant (0).
"Field ID"	Field identification
"Field ID" contains one of the following values:	
"0"	Host Device ID
"1"	Host Device Manufacturer
"2"	Host Device Model
"3"	Host Device Software Version

<value>^{(str)(NV)}

The value of the given <object URN>. The parameter is coded as UTF-8 character set.

Default values for instance (0):

"16/0/0/0"	HUID0
"16/0/0/1"	HMAN0
"16/0/0/2"	HMOD0
"16/0/0/3"	HSW0

Default values for instance (1):

"16/1/0/0"	HUID1
"16/1/0/1"	HMAN1
"16/1/0/2"	HMOD1
"16/1/0/3"	HSW1

<hash>^(str)

A signature to authenticate the user executing this command. The client certificate has to be preloaded in the module for the authentication. The same client certificate employed for IP Service AT commands is used to authenticate the command.

9. Internet Service Commands

EMS31-X has an embedded TCP/IP stack that is driven by AT commands and enables the host application to easily access the Internet. The advantage of this solution is that it eliminates the need for the application manufacturer to implement own TCP/IP and PPP stacks, thus minimizing cost and time to integrate Internet connectivity into a new or existing host application. This chapter is a reference guide to all the AT commands and responses defined for use with the TCP/IP stack.

The embedded TCP/IP stack provides the following services:

1. Socket Services:
 - TCP Client in Non-Transparent or Transparent Mode
 - UDP Client in Non-Transparent or Transparent Mode
 - Transparent TCP Listener
 - Standard TCP Listener in Non-Transparent or Transparent Mode
 - Non-Transparent UDP Endpoint
2. FTP Client
3. HTTP Client
4. SMTP Client

Please note that a total number of 14 sockets is available for usage.

Step-by-step overview of how to configure and use TCP/IP communications with EMS31-X:

- Use `AT+CGDCONT` to create an Internet connection profile (= bearer). The PDP context IDs set with `<cid>` will later be used as "conId" parameter when creating a service profile with `AT^SISS`. Optionally, you can specify DNS preferences using `AT^SICS`. To activate or deactivate the bearer use the `AT^SICA` command.
- Use `AT^SISS` to create service profile(s), each identified by the `<srvProfileId>`. The service profile specifies the type of Internet service to use, e.g., Socket, FTP, HTTP, SMTP.
- Once the bearer has been established with `AT^SICA`, and the service profile is created with `AT^SISS`, an Internet session can be opened by entering the `AT^SISO` write command and the desired `<srvProfileId>`. A URC indicates how to proceed. The "`^SIS`" URC with `<urcCause>` "5" shows that an opened listener or endpoint is ready. The "`^SISW`" URC means that data can be sent. The "`^SISR`" URC means that received data are available for reading. If an error occurs the "`^SIS`" URC is delivered instead.
- The next steps differ depending on the service type and the transfer mode (Non-Transparent or Transparent).
- Once a service is opened, the `AT^SISI` command shall be used to monitor the progress of the session. The command reports the service state of the used service profile and indicates the number of bytes sent and received, and, in the case of sending, the number of bytes acknowledged or unacknowledged at TCP layer.
- If an error occurs during a session you can enter the `AT^SISE` command and the `<srvProfileId>` to identify the reason. This is especially important in polling mode.
- Finally, to close an opened service, enter the `AT^SISC` write command and the `<srvProfileId>`. Then you can deactivate the bearer using `AT^SICA`.
`AT^SISH` disconnects a remote client from a Transparent TCP Listener without closing the listener (see also below).

Transparent Mode or Non-Transparent Mode:

- *Transparent Mode* is stream-oriented, i.e. a single data stream can be sent, and another single data stream can be received. Packetizing of data is done automatically by the embedded TCP/IP stack. Transparent Mode is activated with `AT^SIST` and then indicated by the "CONNECT" result code. The mode eliminates the need for `AT^SISW` and `AT^SISR` read and write sequences.
- *Non-Transparent Mode* is packet oriented, i.e. data is transferred in separate packets. Maximum packet size is 1500 bytes for TCP, 1460 bytes for UDP. To read and write data `AT^SISW` and `AT^SISR` sequences shall be used.
To send or receive more than 1500 bytes, the read or write action shall be repeated until the data transfer has completed. Each read or write action requires that the command response (of `AT^SISR` or `AT^SISW`) con-

firms that the service is ready to send or receive data. The read/write cycles can be controlled by URCs or polling. For details see below, section "URC mode and polling mode".

To end an upload data stream set the `<eodFlag>` in the last `AT^SISW` command.

- FTP, HTTP, SMTP and UDP Endpoint employ Non-Transparent Mode. TCP Client, UDP client and Standard TCP Listener can employ both modes, and may even mix both modes in the same connection.

Listener services:

A listener is waiting for incoming remote client requests. EMS31-X supports two listener types: Transparent TCP Listener and Standard TCP Listener.

After opening a listener with `AT^SISO` no "`^SISW`" URC appears. Instead, the "`^SIS`" URC with `<urcCause>` "5" shows that the opened listener is ready and starts listening. Additionally, the states can be verified with `AT^SISI` which shows state "4" (Up - listening).

An incoming remote client request is indicated by the "`^SIS`" URC. For details please refer to Section 9.14, [Internet Service URC "`^SIS`"](#), especially parameters `<urcCause>` and `<urcInfoId>`.

- *Transparent TCP Listener:*
 - The Transparent TCP Listener can accept 1 remote client. The connection to the remote client does not need an additional service profile, as it uses the Transparent TCP Listener instance.
 - To define a listener service profile as Transparent TCP Listener the "etx" parameter is mandatory in the address. See `AT^SISS`.
 - `AT^SISS` allows some specific options for the Transparent TCP Listener service, such as "autoconnect", "connecttimeout", "addrfilter";
 - If autoconnect is enabled an incoming remote client is indicated by the "`^SIS`" URC with `<urcCause>` "3" (Transparent) and `<urcInfoId>` "1" (= autoconnect enabled). The request is automatically accepted. The Listener profile instantly changes to Server mode (`AT^SISO <socketState>` to 4 = SERVER) and opens transparent data mode (indicated by "CONNECT" result code).
 - If autoconnect is disabled, the remote client connection request is indicated by the "`^SIS`" URC with `<urcCause>` "3" (Transparent) and `<urcInfoId>` "0" (= autoconnect disabled). The request can be accepted with `AT^SISO` or rejected with `AT^SISH`. In all cases the same `<srvProfileId>` shall be used. After accepting the client the Listener profile instantly changes to Server mode (`AT^SISO <socketState>` to 4 = SERVER).
If a remote client connection request is not accepted within the configured 'connecttimeout', it will be rejected automatically, and the URC "`^SIS`" is sent with `<urcCause>` set to '4'.
 - As long as one remote client is connected all other remote client requests are rejected automatically without displaying the "`^SIS`" URC. The `<rejCounter>` in the response of the `AT^SISO` read command indicates such hidden rejects.
 - `AT^SISH` disconnects a remote client, without closing the service, allowing the Transparent TCP Listener to wait for the next remote client.
`AT^SISC` both disconnects the remote client and shuts down the Transparent TCP Listener.
 - An example can be found in Section 9.14, [Internet Service URC "`^SIS`"](#) and Section 9.15.5, [Transparent TCP Listener: Accepting / Rejecting Incoming Remote Client](#)
- *Standard TCP Listener:*
 - The Standard Listener can accept several remote clients. Each incoming remote client connection request is dynamically assigned to the next free service profile indicated as `<srvProfileId>` within the "`^SIS`" URC. `<urcCause>` in the "`^SIS`" URC equals "1" (Non-Transparent). The dynamically assigned profile acts as Server (`AT^SISO <socketState>` equals 4 = SERVER). Its `<srvProfileId>` shall be used to accept the remote client with `AT^SISO`, or to reject it with `AT^SISC`. The number of acceptable remote clients depends on the number of free service profiles.
 - To transfer data it is possible to proceed with Transparent Mode using `AT^SIST`, or Non-Transparent Mode using `AT^SISR` and `AT^SISW` read / write sequences.
 - An example can be found in Section 9.14, [Internet Service URC "`^SIS`"](#) and Section 9.15.3, [Configuring Non-Transparent Listener](#)

Socket service used with UDP protocol

The significant differences between the TCP and UDP protocols imply that UDP sometimes requires particular procedures or even specific parameters. Details on how to handle UDP services can be found in extra notes or are included in the general parameter descriptions.

The EMS31-X offers two kinds of Socket service with UDP protocol.

- *UDP Client:* Intended for connections to a given remote host. In this case the IP address and the UDP port of the remote host are set as a fixed parameter in the service profile. The UDP Client can use Transparent Mode and Non-Transparent Mode.
- *Non-Transparent UDP Endpoint:* IP address and UDP port of the remote hosts are handled in each read (`AT^SISR`) and write (`AT^SISW`) request. This enables the host application to communicate with different remote hosts.
See example in Section 9.15.9, [UDP Scenario](#).

Secure connection (TLS)

All services except Listener services support server and client authentication for Transport Layer Security (TLS).

- To set TLS add "s" to the address type, such as socktcps, sockudps, ftps, https, smtps. For details see `AT^SISS <srvParmTag>` parameter "address".
- To create, load, delete and read customized TLS certificates use the commands `AT^SBNW` and `AT^SBNR`.
- The `AT^SISS` session profile parameter "secopt" specifies whether or not to check certificates received from the server against the local certificate store (if at least one local certificate is set).
- The `AT^SCFG` subcommand "Tcp/TLS/Version" specifies the security level.
- The used certificates can be shown in text format (issuer, serial, subject, signatureAlg, thumbprint). For this purpose it is recommended to enable the "+CIEV: "is_cert" URC, see `AT^SIND`.

URC mode or polling mode (for non-Transparent Mode only)

The EMS31-X offers two modes of controlling a Non-Transparent Mode session opened with `AT^SISO`. To select the mode use the `AT^SCFG` command, parameter "Tcp/WithURCs" (refer to `<tcpWithUrc>`).

- **URC mode (delivery default):**
The progress of a Non-Transparent Mode session is URC driven. The URCs notify the host whether data can be sent or received, whether data transfer has completed, whether the service can be closed or whether an error has occurred. This mechanism eliminates the need to poll the service until the necessary progress information is received.
To enable the URC mode select: `AT^SCFG="Tcp/WithURCs",on`.
- **Polling mode:**
In polling mode, the presentation of URCs related to the Internet Services is disabled. The host is responsible to retrieve all the status information needed for controlling the Internet session. This is done by polling, where the host application keeps sending the commands `AT^SISR`, `AT^SISW`, `AT^SISI`.
To enable the polling mode select: `AT^SCFG="Tcp/WithURCs",off`.
The disabled URCs are the following: "`^SISR`" URC, "`^SISW`" URC and "`^SIS`" URC for parameter `<urcCause>=0` (Internet service events), but not for all other `<urcCause>s` (needed for Listener or Endpoint and therefore always enabled).

Address notation

Server addresses shall be provided as IPv4 addresses in standard dot format, e.g. "192.168.1.2", or as IPv6 addresses in standard colon format enclosed in square brackets, e.g. "[FE80::2]", or as server address names resolvable by a DNS server.

Timeouts

Timeouts are not part of the Internet AT command functionality implemented in EMS31-X and, if desired, are the responsibility of the host application. It is recommended that the host application validates URCs and AT command responses and reacts adequately, for example by sending a close message or starting a timer.

Using the DCD line to detect the connection status of Internet services

With `AT&C` you can configure the DCD line of the used serial interface to indicate whether an Internet service is

active. For Socket, HTTP the states "Up" or "Connecting" are indicated, for FTP and transparent TCP only the state "Up", for the Transparent TCP Listener service the states "Up", "Alerting", "Connected" and "Released".

Usage of IP Service commands on different interfaces

The UE allows to create an Internet service profile on one interface with `AT^SISS` and to use it on another interface with `AT^SISO`, `AT^SISC`, `AT^SISR`, `AT^SISW`, `AT^SIST`. Nevertheless, to avoid conflicts a profile should be handled on the same interface where it was created with `AT^SISS`, at least where it was opened with `AT^SISO`.

9.1 AT^SICA

9.1 AT^SICA Internet Connection Activate or Deactivate

The `AT^SICA` write command can be used to activate or deactivate an Internet service connection using a PDP context defined with `AT+CGDCONT`. To track activation errors the command `AT+CEER` should be used.

The `AT^SICA` read command shows whether a connection for Internet services is active and which PDP context is used for it. If no connection is active, then the read command just returns OK.

Syntax

Test Command

```
AT^SICA=?
```

Response(s)

```
^SICA: (list of supported <state>s), (list of supported <cid>s)
```

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Read Command

```
AT^SICA?
```

Response(s)

```
[^SICA: <cid>, <state>]
```

```
[^SICA: ...]
```

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Write Command

```
AT^SICA=<state>, <cid>
```

Response(s)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

PIN → Last

```
+ ± -
```

Parameter Description

`<state>`^(num)

0	Deactivate(d)
1	Activate(d)

`<cid>`^(num)

Parameter specifies a particular PDP context definition (see `AT+CGDCONT` parameter `<cid>`).

9.2 AT^SICS Internet Connection Settings

AT^SICS serves to specify additional settings for Internet connection specified with the AT+CGDCONT command. Currently only setup and query of DNS server addresses is supported.

Table 9.1: Applicability of AT^SICS <conParmTag> values

<conParmTag>	Mandatory or optional
"dns1"	optional
"dns2"	optional
"ipv6dns1"	optional
"ipv6dns2"	optional

Syntax

```

Test Command
AT^SICS=?
Response(s)
OK

Read Command
AT^SICS?
Response(s)
^SICS: <conProfileId>, <conParmTag>, <conParmValue>
[^SICS: ...]
OK

Write Command
AT^SICS=<conProfileId>[, <conParmTag>, <conParmValue>]
Response(s)
OK
ERROR
+CME ERROR: <err>

PIN → Last
- + -
    
```

Parameter Description

<conProfileId>^{(num)(NV)}
Internet connection profile as specified with AT+CGDCONT parameter <cid>. Invoking command only with this parameter will delete related DNS server address.

<conParmTag>^{(str)(NV)}
Internet connection parameter.
"dns1" Primary DNS server address (IP address in dotted-four-byte format). This value determines whether to use the DNS server addresses dynamically assigned by the network or a specific DNS server address given by the user. "dns1" = "0.0.0.0" (default) means that the connection profile uses dynamic DNS assignment. Any other address means that the Primary DNS is manually set. The default value applies automatically if no other address is set. Note that the

[AT^SICS](#) read command only returns a manually configured IP address, while the value "0.0.0.0" is not indicated at all, no matter whether assumed by default or explicitly specified.
See also note below.

"dns2"
Secondary DNS server address (IP address in dotted-four-byte format).
If "dns1" = "0.0.0.0" this setting will be ignored. Otherwise this value can be used to manually configure an alternate server for the DNS1.
If "dns1" is not equal "0.0.0.0" and no "dns2" address is given, then "dns2"="0.0.0.0" will be assumed automatically. The [AT^SICS](#) read command only returns a manually configured IP address, while the value "0.0.0.0" is not indicated at all, no matter whether assumed by default or explicitly specified.

"ipv6dns1"
Primary IPV6 DNS server address (IP address Each group is written as 4 hexadecimal digits and the groups are separated by colons (:). The whole address is encapsulated by brackets ([]).
This value determines whether to use the DNS server addresses dynamically assigned by the network or a specific DNS server address given by the user.
"ipv6dns1" = "" (default) means that the connection profile uses dynamic DNS assignment. Any other address means that the Primary DNS is manually set. The default value applies automatically if no other address is set. Note that the [AT^SICS](#) read command only returns a manually configured IP v6 address, while the value "" is not indicated at all, no matter whether assumed by default or explicitly specified.
See also note below.

"ipv6dns2"
Secondary IPV6 DNS server address (IP address Each group is written as 4 hexadecimal digits and the groups are separated by colons (:). The whole address is encapsulated by brackets ([]).
"ipv6dns2" = "" (default) means that the connection profile uses dynamic DNS assignment. Any other address means that the secondary DNS is manually set.
The default value applies automatically if no other address is set. Note that the [AT^SICS](#) read command only returns a manually configured IP v6 address, while the value "" is not indicated at all, no matter whether assumed by default or explicitly specified.

`<conParmValue>(str)(NV)`

Parameter value; type and supported content depend on related `<conParmTag>`.

Note

- If a network does not support or is not correctly configured for automatic DNS address assignment the TCP/IP stack cannot resolve fully qualified domain names. In this case, a warning message will be returned when trying to open an Internet service configured for automatic DNS address assignment.

9.3 AT^SIPS Internet Profile Storage

AT^SIPS saves and loads the settings of the Internet service profiles in the non-volatile memory. AT^SIPS can also be used to reset the settings to their default values without saving.

Syntax

```

Test Command
AT^SIPS=?
Response(s)
^SIPS: (list of supported <type>s), (list of supported <action>s), (list of supported <ProfileId>s)
OK

Write Command
AT^SIPS=<type>, <action>[, <ProfileId>]
Response(s)
OK
ERROR
+CME ERROR: <err>

PIN → Last
- + -
    
```

Parameter Description

<type>^(str)	
Internet profile storage type parameter.	
“service”	Handle AT^SISS parameter set.
“all”	Implemented for compatibility with other products. For EMS31-X, same effect as value “service”.
<action>^(str)	
Internet profile storage action parameter	
“reset”	Reset current profile(s) for given <type> to default settings without saving. If <ProfileId> is given only specific profile will be reset. Only the connections which are in “Down” status and the services which are in “Allocated” status could be affected.
“save”	Stores current profile(s) for given <type>. If <ProfileId> is given only specific profile will be stored.
“load”	Loads stored profile(s) for given <type>. If <ProfileId> is given only specific profile will be loaded.
<ProfileId>^(num)	
Internet service profile storage identifier	
0...9	Possible profile identifiers of used <type>

9.4 AT^SISS Internet Service Setup Profile

AT^SISS specifies the Internet service profiles needed to control data connections by using AT^SICA, AT^SISO, AT^SISC, AT^SISR, AT^SISW, AT^SIST and AT^SISE.

The AT^SISS read command requests the current settings of all Internet service profiles. One line is issued for every possible parameter of a given <srvParmTag> "srvType" value.

The AT^SISS write command specifies the parameters for a service profile identified by <srvProfileId>. At first the type of Internet service needs to be selected via <srvParmTag> value "srvType". This determines the applicability of all other <srvParmTag> values related to this "srvType" and, partially, sets their defaults. Therefore, changing the <srvParmTag> "srvType" of an existing service profile will reset most <srvParmTag> values. Please note that it is not possible to modify an existing service profile while the connection is opened with AT^SISO. Be sure to close it with AT^SISC.

To change the settings the AT^SISS write command needs to be executed for each single <srvParmTag>. All profile parameters set with AT^SISS are volatile. The list below shows which <srvParmTag> settings are mandatory (= m) or optional (= o).

Table 9.2: Applicability of AT^SISS <srvParmTag> values

<srvParmTag>	Socket	FTP	HTTP	SMTP
SrvType	m	m	m	m
conId	m	m	m	m
address	m	m	m	m
tcpMR	o	o	o	o
tcpOT	o	o	o	o
cmd		m	m	o
files		o	o	o
ftpath		o		
smFrom				m
smRcpt				m
smCC				o
smSubj				m
smMsg				o
smAuth				m
hcContent			o	
hcContLen			m	
hcUserAgent			o	
hcProp			o	
user (as separate parameter or in address field)		m	o	m
passwd (as separate parameter or in address field)		m	o	m
alphabet	o	o	o	o
ipVer	o	o	o	o
secopt	o	o	o	o

Syntax

<p>Test Command</p> <p>AT^SISS=?</p> <p>Response(s)</p> <p>OK</p>
<p>Read Command</p> <p>AT^SISS?</p> <p>Response(s)</p> <p>^SISS: <srvProfileId>, <srvParmTag>, <srvParmValue> [^SISS: ...] OK ERROR +CME ERROR: <err></p>
<p>Write Command</p> <p>AT^SISS=<srvProfileId>, <srvParmTag>, <srvParmValue></p> <p>Response(s)</p> <p>OK ERROR +CME ERROR: <err></p>
<p>PIN → Last</p> <p>- + -</p>

Parameter Description

<srvProfileId>^(num)

Internet service profile identifier.

The <srvProfileId> is used to reference all parameters related to the same service profile. Furthermore, when using the AT commands [AT^SISO](#), [AT^SISR](#), [AT^SISW](#), [AT^SIST](#), [AT^SISH](#) and [AT^SISC](#) the <srvProfileId> is needed to select a specific service profile.

0...9

<srvParmTag>^(u)

Internet service profile parameter.

srvType	Type of Internet service to be configured with consecutive usage of AT^SISS . For supported values of <srvParmValue> refer to <srvParmValue-srv-Type> .
alphabet	Selects the character set for input and output of string parameters within a profile. The selected value is bound to the specific profile. This means that different profiles may use different alphabets. Unlike other parameters the alphabet can be changed no matter whether the <srvParmTag> value "srvType" has been set. For supported values of <srvParmValue> refer to <srvParmValue-alphabet> .
user	User name string for FTP, HTTP, SMTP authentication. The user name can be set by <srvParmTag> parameter "user" or as part of "address" parameter. For HTTP only simple authentication is supported. Length: 32 octects

passwd	<p>Password string for FTP, HTTP, SMTP authentication. The password can be set by <srvParmTag> parameter "password" or as part of "address" parameter. Length: 32 octets</p>
conld	<p>Internet connection profile as defined with AT+CGDCONT. The value is one of the PDP context IDs set with parameter <cid>. If the UE is configured for Verizon Wireless Network the "conld" value set by default shall be changed to value 3 (= APN 3).</p>
address	<p>String value containing the URL for the specific service:</p> <p>1. Socket Service URLs:</p> <ul style="list-style-type: none"> - TCP Client URL: "socketcp[s]://<host>:<remotePort>[;etx[=<etx-Char>];timer=<value>];bufsize=<value>];keepidle=<value>];keepcnt=<value>];keepintvl=<value>]" - UDP Client URL: "sockudp[s]://<host>:<remotePort>[;etx[=<etx-Char>];timer=<value>];bufsize=<value>];port=<localPort>]" - UDP Endpoint URL: "sockudp://:<localPort>" - Standard TCP Listener URL: "socketcp://listener:<localPort>];keepidle=<value>];keepcnt=<value>];keepintvl=<value>]" - Transparent TCP Listener URL: "socketcp:// listener:<localPort>;etx[=<etxChar>];timer=<value>];autoconnect='0 1']];connecttimeout=<value>];keepidle=<value>];keepcnt=<value>];keepintvl=<value>];addrfilter=<filter>]" <p>Socket service URL parameters:</p> <ul style="list-style-type: none"> - <host>: IPv4 address in standard dot format, e.g. "192.168.1.2", or IPv6 address in standard colon format enclosed in square brackets, e.g. "[FE80::2]". - <remotePort>: 1 ... 2¹⁶-1 for the remote port number. - <localPort>: 1 ... 2¹⁶-1 for the local port number. - "etx": This parameter allows a socket service to use Transparent Mode. For the Transparent Listener "etx" is mandatory. For the Client services "etx" is optional, but required for using the Transparent Mode parameters "etxChar" and "timer". Please note that even though "etx" is set in a service profile, data transfer can be performed by a mixing Transparent Mode (AT^SIST) and Non-Transparent Mode (AT^SISW / AT^SISR cycles) in the same connection. This applies both to the Transparent Listener and to Client services. - "<etxChar>": Specifies the character used to change from Transparent Mode to AT Command Mode. range: 1...15,17...255 (16 is not allowed because it is used as DLE (0x10)) If parameter is not set no escaping is configured, thus requiring either +++ or DTR ON-OFF transition for changing to AT command mode. If value is set, the transmitted bytes are parsed for the DLE (0x10) character followed by the specified <etxChar> value. If both characters are found the service returns to AT command mode without transmitting these two bytes (same as +++). If you wish to send DLE characters as normal text string within your payload data the characters shall be doubled (DLE DLE). - "bufsize": For Transparent Mode only: Specifies maximum payload size for sending data from the IP service to the underlying IP stack with

- AT^SIST**, i.e. for limiting the length of UDP packets. .
range: 1...[1460]
- "timer": The parameter configures the Nagle algorithm, which is used in transparent access mode.
range: 0, 20...[100]...500 milliseconds in steps of 20
Value 0 disables the Nagle algorithm.
 - "keepidle": specifies the TCP parameter TCP_KEEPIDLE (see RFC1122, Section 4.2.3.6; not for Transparent UDP client)
range: 1...65535 seconds; disabled if no value set (default).
 - "keepcnt": specifies the TCP parameter TCP_KEEPCNT (see RFC1122, Section 4.2.3.6; not for Transparent UDP client); ignored if option "keepidle" is not set
range: 1...[9]...127
 - "keepintvl": specifies the TCP parameter TCP_KEEPINTVL (see RFC1122, Section 4.2.3.6; not for Transparent UDP client); ignored if option "keepidle" is not set
range: 1...[75]...255 seconds
 - "autoconnect" (for Transparent TCP Listener service only):
0 ... disabled (default)
1 ... automatically accept incoming client connects
 - "connecttimeout": specifies the time after which incoming client connects are rejected automatically (for Transparent TCP Listener service only)
range: 1...[30]...180 seconds
 - "addrfilter": This option allows to filter incoming client connects based on the IP address of the client (for Transparent TCP Listener service only). It is possible to specify a maximum of 3 filters separated by commas. If the IP address of any incoming client connect does not match any of the specified filters, then the connect is rejected automatically. If the option is not specified, then all client connects are allowed.
In IPv4: Each filter is specified as 4 numbers separated by dots ("Example: "addrfilter=10.10.0.*,80.190.158.9" - allows connects from 10.10.0.81 and 80.190.158.9 but not from 10.10.17.81 and 80.190.158.10.
In IPv6: Each filter is specified by up to 8 bytes separated by colons ("Examples: *:5678:9abc:def0:1234:5678:9ABC:D*F0
1234::
::1**4
1*34:***3456

2. FTP Client URL

"ftp[s]://[<user>:<passwd>@]<host>[:<port>][/<path>]"

"ftp://": The default TCP port 21 for ftp server is used.

"ftps://": The default SSL port 990 for secure ftp server is used.

<host>: element can be an IPv4 address, or an IPv6 address enclosed in square brackets, or a DNS FQDN string.

<port>: element can be set optional and replace the default port.

<user>: username for authentication, 32 octets. Can be set as part of "address" or separately by <srvParmTag> parameter "user".

<passwd>: password for authentication, 32 octets. Can be set as part of "address" or separately by <srvParmTag> parameter "passwd".

<path>: path of file or directory.

3. HTTP Client URL

Length: 6...255

"http[s]://[<user>:<passwd>@]<server>[:<port>/<path>]"

<server>: element can be an FQDN, or an IPv4 address, or an IPv6 address

enclosed in square brackets.
 <path>: path of file or directory.
 <port>: If parameter is omitted the service connects to HTTP default port 80.
 <user>: username for authentication, 32 octets.
 <passwd>: password for authentication, 32 octets.
 "https://": Used for SSL connection.
 Refer to "IETF-RFC 2616".

4. SMTP Client URL

"smtp[s]://[<user>:<passwd>@]<host>[:<Port>]"
 "smtp://": The default TCP port 25 for smtp server is used.
 "smtps://": The default SSL port 465 for secure smtp server is used.
 <host>: element can be an IPv4 address, or an IPv6 address enclosed in square brackets, or a DNS FQDN string.
 <port>: element can be set optional and replace the default port.
 <user>: username for authentication, 32 octets. Can be set as part of "address" or separately by <srvParmTag> parameter "user".
 <passwd> is for authentication, 32 octets. Can be set as part of "address" or separately by <srvParmTag> parameter "passwd".

cmd

1. HTTP service

- "0" or "get": Send HTTP GET request to server
- "1" or "post": Send HTTP POST request to server
- "2" or "head": Send HTTP HEAD request to server

2. FTP service

- get [<OffsetString>]: get a single file from FTP server.
- put [<OffsetString>]: create and write a single file to FTP server using [AT^SISW](#).
- dir: List the directory on the FTP server and show file size.
- list: List the directory on the FTP server without showing file size.
- size: Request the size of the file element on the FTP server. The size result is output as "^SIS" URC.
- del: Delete a file specified with <srvParmTag> parameter "files" on FTP server .
- append: Append data to existing file on FTP server
- unique: Selects the FTP Store Unique command to create a file name unique to the current directory. If the file name is assigned by the server then the "^SIS" URC will appear, indicating <urcInfoId> 2100 and the file name.

<OffsetString> is an optional parameter for "get" and "put". It allows resuming a broken uplink or downlink transfer to resend data. The <OffsetString> value specifies the offset in number of octets to start the transfer from. Maximum length is 16 digits. For "get" the <OffsetString> value must be calculated from the <urcInfoId> 2100 of the "^SIS" URC requested before by using "size".

3. SMTP service

- at: send attachment(s) listed in the <srvParmTag> parameter "files". Max. 5 files are allowed. The content of the attachment(s) should be provided using [AT^SISW](#) after the service was opened with [AT^SISO](#).

ftpath

Specifies the path of the remote FTP server after login. If no path is set the default path will be used.

files	<p>Name of a file for upload from the AT command interface to a server, or download from a server to the AT command interface if the "cmd" parameter is given</p> <ul style="list-style-type: none">- with "get" or "post" in case of HTTP,- with "get", "put" or "del" in case of FTP,- with "at" in case of SMTP. <p>In case of SMTP max. 5 files can be handled, each separated by comma. In case of FTP and HTTP only a single file can be handled.</p>
hcContent	<p>HTTP "POST": Variable mode. Optional parameter if HTTP "post" is set with <code><srvParmTag></code> parameter "cmd". Length: 0...255 Can be used to transfer a small amount of data. The content of this string will only be sent if "hcContLen" = 0. To transmit a larger amount of data "hcContLen" must be set to a non-zero value. In this case the "hcContent" string will be ignored, and data transmission from the client to the server is done with <code>AT^SISW</code>. Usage example: <code>AT^SISS=x,cmd,"POST"</code></p> <p><code>AT^SISS=x,hcContent,"This text will be sent to the server now response OK"</code> OK</p> <p><code>AT^SISS=x,hcContLen,0</code></p> <p><code>AT^SISO=x</code> OK</p> <p><code>^SIS: x,0,2200,"Http connect 10.42.228.61:80"</code> <code>^SISW: x,2</code></p>
hcContLen	<p>HTTP "POST": Fixed mode. Mandatory parameter if HTTP "post" is set with <code><srvParmTag></code> parameter "cmd". Length: 0...2³¹-1 The value of this parameter indicates the amount of bytes of data to be transmitted with Http POST. If "hcContLen" = 0 then the data given in the "hcContent" string will be posted without <code>AT^SISW</code> required. If "hcContLen" > 0 then <code>AT^SISW</code> command and <code>^SISW: x, 1</code> sequences will be used to send data from the client to the server. In this case "hcContent" parameter will be ignored. Usage example, send 200 bytes: <code>AT^SISS=x,cmd,"POST"</code></p> <p><code>AT^SISS=x,hcContLen,200</code></p> <p><code>AT^SISO=x</code> OK</p> <p><code>^SIS: x,0,2200,"Http connect 10.42.228.61:80"</code> <code>^SIS: x,0,2200,"POST Bytes: 200"</code> <code>^SISW: x,1</code></p> <p><code>AT^SISW=x,200</code> <code>### 200 bytes of data ###</code></p>
hcUserAgent	<p>The user agent string must be set by the application to identify the mobile. Usually operation system and software version info is set with this browser identifier. Length: 0...63</p>

hcProp	Parameter for several HTTP settings. Length: 0...127 The general format is 'key': <space> 'value' Multiple settings can be given separated by "\0d\0a" sequences within the string, do not put them at the end. Possible 'key' values are defined at HTTP/1.1 Standard RFC 2616.
smFrom	Email sender address, i.e. "MAIL FROM" address (string). Length: 6...254 A valid address parameter consists of local part and domain name delimited by a '@' character, e.g. "john.smith@somedomain.de".
smRcpt	Recipient address of the email, i.e. "RCPT TO" address (string). Length: 6...254 If multiple recipient addresses are to be supplied the comma character is used as delimiter to separate individual address values, e.g. "john.smith@somedomain.de,tom.meier@somedomain.de". Some mail servers do not accept recipient addresses without brackets <>. It is recommended to use the "RCPT TO" variable with brackets.
smCC	CC recipient address of the email (string). Length: 6...254 If multiple CC recipient addresses are to be supplied the comma character is used as delimiter to separate individual address values, e.g. "john.smith@somedomain.de,tom.meier@somedomain.de".
smSubj	Subject content of the email (string). Length: 0...254 If no subject is supplied the email will be sent with an empty subject.
smAuth	SMTP authentication control flag (string). If "smAuth" = "0" or "none": No authentication (for test environment only, not applicable to real network) If "smAuth" = "1" or "plain" (default): Authentication with PLAIN authentication If "smAuth" = "2" or "login": Authentication with LOGIN authentication If "smAuth" = "3" or "cram": Authentication with CRAM authentication
smMsg	SMTP message body. If no attachment is defined this is only the content of the email. Length: 0...254
tcpMR	Parameter can be used to overwrite the global AT^SCFG parameter "Tcp/MaxRetransmissions" <tcpMr> for a specific Internet Service connection profile. If the parameter is not specified the value specified with AT^SCFG will be used. Supported values <srvParmValue> for this parameter are the same as described for <tcpMr>. Setting is not relevant for Internet Service "Socket" with type "UDP".
tcpOT	Parameter can be used to overwrite the global AT^SCFG parameter "Tcp/OverallTimeout" <tcpOt> for a specific Internet Service connection profile. If the parameter is not specified the value specified with AT^SCFG will be used. Supported values <srvParmValue> for this parameter are the same as described for <tcpOt>. Setting is not relevant for Internet Service "Socket" with type "UDP".
ipVer	Used IP Protocol version: This parameter limits the IP Protocol version for the Internet service when the

PDP context defined with [AT+CGDCONT](#) supports IPv4 and IPv6.

4 Values 4 (default) or 6 can be used for the following situations only:

6 An IPv4v6 PDP context is employed, and this context provides both IPv4 and IPv6 interfaces, and

- either the service acts as a listener,
- or the client address is a hostname, and the DNS server provides both IPV4 and IPV6 addresses.

In such case value 4 allows IPv4 addresses only, and value 6 allows IPv6 addresses only.

10 Value 10 can be used for TCP listener and UDP endpoint only. It is possible to use this value for every PDP context type. If an IPv4v6 PDP context is used, and this context provides both IPv4 and IPv6 interfaces, then it is possible to connect to an IPv4 client and an IPv6 client at the same time. Addresses are always shown in IPv6 format. For IPv4 connections, IPv4-mapped IPv6 address notation is used, i.e. [::ffff:10.66.90.170]. For [AT^SISO?](#), TCP listener and UDP endpoint show "[:]" as local address. Please use [AT+CGPADDR](#) to read local address information in this case.

secopt Security Option of IP service. Values:

1 (default) Check received certificates from server against local store, if local store has at least one certificate.

0 Do not check received certificates from server against the local store.

NOTE: Local store is created with [AT^SBNW,is_cert](#).

`<srvParmValue>(str)(+CSCS)`

Parameter value; type and supported content depend on related `<srvParmTag>`.

`<srvParmValue-srvType>(str)`

Supported Internet service type values in `<srvParmValue>` for `<srvParmTag>` value "srvType". Before changing the "srvType" of an existing service profile be sure that the profile is closed. To verify the connection state of the service profile enter the read command [AT^SISI](#). Only when `<srvState>=2` is returned for this specific service profile you can change its service type.

"Socket"	EMS31-X acting as client or server (listener) for TCP or UDP. "etx" subparameter in URL configures Transparent mode for Socket service.
"Ftp"	EMS31-X acting as FTP client.
"Http"	EMS31-X acting as HTTP client.
"Smtpt"	EMS31-X acting as SMTP client.
"none"	Reset Internet service profile settings. Operation is not allowed if profile is in use, i.e. it was activated via AT^SISO .

`<srvParmValue-alphabet>(str)`

Supported string parameter character set selections in `<srvParmValue>` for `<srvParmTag>` value "alphabet".

["0"]	Applicable character set is determined by current setting of AT+CSCS .
"1"	International Reference Alphabet (IRA, seven bit ASCII).

Notes

- String parameters are truncated if greater than the maximum length specified above.
- For correct input of the @ character in address parameters please refer to Section 1.6, [Supported character sets](#).

9.5 AT^SISI Internet Service Information

AT^SISI serves to monitor the status of Internet service profiles defined with AT^SISS.

The AT^SISI read command requests the current status of all defined Internet service profiles.

The AT^SISI write command requests the status of the specified Internet service profile. If the specified service profile is not defined yet, "+CME ERROR" is returned.

Syntax

Test Command

```
AT^SISI=?
```

Response(s)

```
[^SISI: (list of defined <srvProfileId>s)]  
OK
```

Read Command

```
AT^SISI?
```

Response(s)

If response is related to service profile(s) created / opened on this interface:

```
[^SISI: <srvProfileId>, <srvState>, <rxCount>, <txCount>, <ackData>, <unackData>]  
[^SISI: ...]
```

If response is related to service profile(s) created / opened on other interface(s):

```
[^SISI: <srvProfileId>, <srvParmTag>value "srvType"]  
[^SISI: ...]
```

OK

ERROR

Write Command

```
AT^SISI=<srvProfileId>
```

Response(s)

```
^SISI: <srvProfileId>, <srvState>, <rxCount>, <txCount>, <ackData>, <unackData>
```

OK

ERROR

```
+CME ERROR: <err>
```

PIN → Last

- + -

Parameter Description

`<srvProfileId>`^(num)

Internet service profile identifier as defined by `AT^SISS (<srvProfileId>)`.

0...9

`<srvState>`^(num)

Internet service state (for details see `AT^SISO` parameter `<srvState>`).

2	Allocated
3	Connecting
4	Up
5	Closing
6	Down
7	Alerting
8	Connected

`<rxCount>`^(num)

Number of bytes received via `AT^SISR` or `AT^SIST` since last successful `AT^SISO` write command. This is the same value as displayed by the `AT^SISO` read command with the parameter `<rxCount>`.

`<txCount>`^(num)

Number of bytes sent via `AT^SISW` or `AT^SIST` since last successful `AT^SISO` write command. This is the same value as displayed by the `AT^SISO` read command with the parameter `<txCount>`.

`<ackData>`^(num)

Number of data bytes already sent and acknowledged at TCP layer. Value 0 indicates that no sent data is acknowledged yet. Parameter is not applicable to FTP, HTTP, SMTP, Socket with UDP. For these services the counter is always set to 0.

`<unackData>`^(num)

Number of data bytes already sent but not yet acknowledged at TCP layer. A value 0 indicates that all sent data is already acknowledged.

This is the same value as displayed in the response of the `AT^SISW` write command with the parameter `<unackData>`.

Parameter is not applicable to FTP, HTTP, SMTP, Socket with UDP. For these services the counter is always set to 0.

`<unackData>` includes the overhead needed for encryption when TLS/SSL is used.

Note

- If a service is in state "Down" the responses for `<rxCount>`, `<txCount>`, `<ackData>` and `<unackData>` are the last known values for the service in the states "Connecting", "Up/Listening", "Connected" and "Closing".

9.6 AT^SISO Internet Service Open

The `AT^SISO` write command starts an Internet service configured with `AT^SISS`. Before you can start a service it is necessary to activate the bearer with `AT^SICA`. The command may be aborted by any character sent from the TE to the UE during execution.

Syntax

<p>Test Command</p> <pre>AT^SISO=?</pre> <p>Response(s)</p> <pre>OK</pre>
<p>Read Command</p> <pre>AT^SISO?</pre> <p>Response(s)</p> <pre>^SISO: <srvProfileId>, <srvType>[, <srvState>, <socketState>, <rxCount>, <txCount>, <locAddr>, <remAddr>, <rejCounter>] [^SISO: ...] OK</pre>
<p>Write Command</p> <pre>AT^SISO=<srvProfileId>[, <optParam>]</pre> <p>Response(s)</p> <pre>OK ERROR +CME ERROR: <err></pre>
<p>PIN → Last</p> <pre>- - -</pre>

Parameter Description

<code><srvProfileId></code> ^(num)	<code><srvProfileId></code> 0 ... 9 specified with <code>AT^SISS</code> .				
<code><srvType></code> ^(str)	The type of the internet service as specified by the <code>AT^SISS</code> parameter <code><srvParmValue-srvType></code> .				
<code><srvState></code> ^(num)	<p>Internet service state.</p> <p>Please note, that the state of an Internet service may influence the state of the serial DCD line. For details see description of value 2 for parameter <code><value></code> of command <code>AT&C</code>.</p> <table border="0"> <tr> <td style="vertical-align: top;">2</td> <td> <p>Allocated</p> <p>Service profile resources are allocated, i.e. at least the service type has been set (parameter <code><srvParmTag></code>, value "srvType" of <code>AT^SISS</code>). The service is not opened, but ready for configuration.</p> </td> </tr> <tr> <td style="vertical-align: top;">3</td> <td> <p>Connecting</p> <p>State after opening a service with <code>AT^SISO</code> where the connection is being established.</p> <p>If connection setup is successful the service proceeds to the state "4" (Up) and one of the URCs "<code>^SISW</code>" and "<code>^SISR</code>" may follow. If connection setup is not successful, the "<code>^SIS</code>" URC may appear and the service enters <code><srvState></code> 6 (Down).</p> </td> </tr> </table>	2	<p>Allocated</p> <p>Service profile resources are allocated, i.e. at least the service type has been set (parameter <code><srvParmTag></code>, value "srvType" of <code>AT^SISS</code>). The service is not opened, but ready for configuration.</p>	3	<p>Connecting</p> <p>State after opening a service with <code>AT^SISO</code> where the connection is being established.</p> <p>If connection setup is successful the service proceeds to the state "4" (Up) and one of the URCs "<code>^SISW</code>" and "<code>^SISR</code>" may follow. If connection setup is not successful, the "<code>^SIS</code>" URC may appear and the service enters <code><srvState></code> 6 (Down).</p>
2	<p>Allocated</p> <p>Service profile resources are allocated, i.e. at least the service type has been set (parameter <code><srvParmTag></code>, value "srvType" of <code>AT^SISS</code>). The service is not opened, but ready for configuration.</p>				
3	<p>Connecting</p> <p>State after opening a service with <code>AT^SISO</code> where the connection is being established.</p> <p>If connection setup is successful the service proceeds to the state "4" (Up) and one of the URCs "<code>^SISW</code>" and "<code>^SISR</code>" may follow. If connection setup is not successful, the "<code>^SIS</code>" URC may appear and the service enters <code><srvState></code> 6 (Down).</p>				

In the case of FTP, `<srvState>=3` means that the command channel is being established.

If the service profile is configured as Standard Listener, then the Listener always stays at `<srvState>=3` and `<socketState>=3` (LISTENER), while the `<srvState>` and `<socketState>` of the dynamically assigned service profile may change. See examples in Section 9.15.5.

4	<p>Up</p> <p>The service performs its purpose. The data transfer process is the major function at this state.</p> <p>FTP: Data channel is up.</p> <p>Transparent TCP Listener service: the service is listening to remote client connection requests. Not applicable to Standard Listener. See examples in Section 9.15.6.</p>
5	<p>Closing</p> <p>Internet Service is closing the network connection.</p> <p>FTP: Command channel is released.</p>
6	<p>Down</p> <p>This state is entered if</p> <ul style="list-style-type: none"> - the service has successfully finished its session (see note on Socket), - the remote peer has reset the connection or - the IP connection has been closed because of an error (see note below on service or network errors). <p>If a service in this state be sure to close it with <code>AT^SISC</code> before reopening it.</p>
7	<p>Alerting</p> <p>A client tries to connect to the Transparent TCP Listener service. Not applicable to Standard Listener.</p>
8	<p>Connected</p> <p>A client is connected with the Transparent TCP Listener service. Not applicable to Standard Listener.</p>
9	<p>Released</p> <p>The client has disconnected from the Transparent TCP Listener service but there are unread data. To go back into Up/Listening state read the pending data using <code>AT^SIST</code> or discard them by using <code>AT^SISH</code>.</p>

`<socketState>`^(num)

Socket state identifier.

1	Socket not assigned, i.e. no TCP/UDP connection active.
2	Socket assigned as CLIENT.
3	Socket assigned as LISTENER or UDP Endpoint.
4	Socket assigned as SERVER.

`<rxCount>`^(num)

Number of bytes received via `AT^SISR` or `AT^SIST` since last successful `AT^SISO` write command.

`<txCount>`^(num)

Number of bytes sent via `AT^SISW` or `AT^SIST` since last successful `AT^SISO` write command.

`<locAddr>`^(str)

Recently used local IPv4 address in dotted-four-byte format and TCP port separated by colon, e.g. "192.60.10.10:80", or recently used local IPv6 address in colon format enclosed in square brackets, e.g. "[FE80::2]" and TCP port separated by colon, e.g. "[FE80::2]:80".

<remAddr>^(str)

Remote IPv4 address in dotted-four-byte format and TCP port, separated by colon, e.g. "192.60.10.10:80", or remote IPv6 address in colon format enclosed in square brackets, e.g. "[FE80::2]" and TCP port separated by colon, e.g. "[FE80::2]:80".

If the Socket service is configured as UDP Endpoint, a remote IP address cannot be assigned, and a default value will be shown instead.

<rejCounter>^(num)

Number of automatically rejected client connect attempts to a Transparent TCP Listener service because the service is already connected with a client.

<optParam>^(num)

1 Show only parameters of service profile for given <srvProfileId>.

Notes

- If the bearer cannot be established and AT^SISO returns an error there might be a general mobile network problem. To identify the reason you can take advantage of the AT+CEER command. Using AT+CEER is especially recommended when the <infoID> parameter of the AT^SISE command equals 0.
- If a service or network error occurs during an IP session and the "^SIS" URC or the AT^SISE command display an error message, the service enters <srvState>=5 and then 6, i.e. the IP connection is closed. In this case, the service still allows reading the data stored in the buffer, but writing data is denied. After reading, close the service and open it again.
- If an FTP connection is no longer available after network loss or server shutdown a 3-minute closing timeout for each of the two used sockets takes effect, adding up to 6 minutes. The timeout is effective if the AT^SISC is not sent. Please keep in mind that this time may vary depending on the settings of <tcpMr> and <tcpOt>.
- As in polling mode no error URCs are available you are advised to integrate the commands AT^SISI and AT^SISE into the command sequences for upload and download jobs. So, the AT^SISO command may be followed by AT^SISI to check that the service has entered the <srvState>=4 before sending AT^SISR, AT^SISW or AT^SIST. This helps you to detect errors even though the "^SIS" URCs are disabled. A typical example is that the service fails to be opened because the service profile contains a wrong destination address. In such a case, after opening with AT^SISO and OK response, the service quickly enters the states <srvState>=2, 4 and 6, with an error being returned no earlier than after sending the first AT^SISR or AT^SISW command. In URC mode, an error URC, such as "Host not found" would be received in this situation, but in polling mode the only way to detect the state is using AT^SISI or, alternatively, AT^SISO.

9.7 AT^SISC Internet Service Close

The `AT^SISC` write command closes the TCP/IP connection to the remote peer which was opened with `AT^SISO`. All resources are released, all status information parameters, e.g. `<srvState>`, `<unackData>`, `<ackData>`, `<rxCount>` and `<txCount>` counters, are reset. Only the initial configuration settings are preserved. The service can be restarted any time, using the same configuration or a new one.

Syntax

Test Command

```
AT^SISC=?
```

Response(s)

```
OK
```

Write Command

```
AT^SISC=<srvProfileId>
```

Response(s)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

PIN → Last

```
± - -
```

Parameter Description

`<srvProfileId>`^(num)

0...9

`<srvProfileId>` specified with `AT^SISO`.

9.8 AT^SISR Internet Service Read Data

The `AT^SISR` command either triggers a read operation (download) or queries the number of bytes in the internal buffer.

The "`^SISR: x, 1`" URC is also used to report status changes of the transparent TCP service while the client is in AT command mode.

The `AT^SISR` write command may return the following errors:

- "+CME ERROR: operation failed" if there is a problem on application, socket, PPP or network level. The `AT^SISR` command and the "`^SIS`" URC offer additional error information.
- "+CME ERROR: operation temporary not allowed" e.g. if the service has not network resources allocated.
- "+CME ERROR: operation not allowed" e.g. if the service is not configured.

Syntax

```

Test Command
AT^SISR=?
Response(s)
OK

Write Command
AT^SISR=<srvProfileId>, <reqReadLength>
Response(s)
^SISR: <srvProfileId>, <cnfReadLength>[, <remainUdpPacketLength>[, <Udp_RemClient>]]
Number of data bytes are sent as specified by <cnfReadLength>. If peek operator was used no data bytes are sent.
OK
ERROR
+CME ERROR: <err>
    
```

PIN → Last
 - - +

Unsolicited Result Code

`^SISR: <srvProfileId>, <urcCauseId>`

Data availability status of the Internet service configured with `AT^SISR` has changed. The URC is issued when:

- data is available after opening an Internet service or
- less data was confirmed (in `<cnfReadLength>`) than requested (with `<reqReadLength>`) during the last "Read Data" operation and new data is available.

The URC is disabled in polling mode. See `AT^SCFG`, parameter "Tcp/WithURCs", `<tcpWithUrc>`.

Parameter Description

`<srvProfileId>`^(num)

`<srvProfileId>` 0 ... 9 specified with `AT^SISR`. Transparent TCP Listener services are not supported.

<reqReadLength>^(num)

- 0 Peek Operator: Query number of received bytes within internal buffers. The behaviour of the peek operator depends on the selected Internet service, i.e. it may not be supported by all IP Services. For "Socket" service configured for UDP the size of the next available UDP packet is returned.
- 1...1500 Requested number of data bytes to be read via the Internet service specified in <srvProfileId>.

<cnfReadLength>^(num)

- 2 Indicates end of data. Data transfer has been finished (all data have been read) and the service can be closed with AT^SISC.
- 1 Applies only to HTTP: Querying number of available bytes is not supported by the HTTP service.
- 0 Indicates that no further data is available at the moment.
- >0 Number of available data bytes. The range is determined by <reqReadLength>:
 If <reqReadLength> was greater than 0, then <cnfReadLength> may be less or equal to the value requested with <reqReadLength>.
 If <reqReadLength> equals 0 (peek operator) the value indicated by <cnfReadLength> may be greater than 1500.

<urcCauseId>^(num)

- Indicates whether or not data is available for reading with AT^SISR and AT^SIST.
- 1 *Meaning of value "1" for all services except Transparent TCP service:*
 Data is available and can be read by sending the AT^SISR command. The URC appears when less data was confirmed (in <cnfReadLength>) than requested (with <reqReadLength>) during the last "Read Data" operation and new data is available.

Meaning of value "1" for Transparent TCP service:
 If the Transparent TCP service is in AT command mode the "^SISR: x, 1" URC notifies the client that the server has sent new data. In this case the client shall enter the AT^SIST command to go to transparent access mode and read the data.
 - 2 End of data. Data transfer has completed (all data read). The service can be closed with AT^SISC.

<remainUdpPacketLength>^(num)

Optional third parameter of the AT^SISR write command response displayed only if the Socket service uses the UDP protocol.

The reception of each datagram must be completed before the next datagram can be received. This may be a problem if the buffer of the host application is limited and not designed to handle the maximum packet size of 1500 bytes. To compensate this, the host is advised to request, via <reqReadLength>, an amount less or equal its maximum buffer capacity and wait for the resulting AT^SISR write command response with parameter <remainUdpPacketLength>. The benefit of this approach is that the host may properly receive all parts of a UDP datagram, as after each received data part the number of remaining bytes is synchronized, until reading the datagram is finished.

If the currently read datagram is smaller than the number of bytes requested by the host the `<remainUdpPacketLength>` parameter is omitted.

Further write attempts with `AT^SISR` are denied as long as the `<remainUdpPacketLength>` is unequal 0 or is not omitted. In this case the service returns `" +CME ERROR: operation of service temporary not allowed"`.

- 0 Indicates that all bytes of the current UDP datagram are read.
- (max. data size)-1...1 Indicates that the currently read UDP datagram is not yet complete. The displayed value is the remaining number of bytes. `<remainUdpPacketLength>` is unequal 0 until reading all parts of the current datagram is finished.

`<Udp_RemClient>`^(str)

Service specific parameter of the `AT^SISR` write command response. If the Socket service is configured as UDP endpoint this parameter shows the IP address and the UDP port of the remote host that has sent the current UDP data. See example in Section 9.15.9, [UDP Scenario](#).

9.8.1 Example: Socket Host Reads Small Amounts of UDP Data Packets (URC Mode)

This section applies only to the Socket service using the UDP protocol. The example shows how to read UDP packets if the buffer of the host application can handle only a few bytes. There are two datagrams available for reading.

Buffer size: 6 bytes

Datagram A = 18 bytes (content "THIS_IS_DATAGRAM_A")

Datagram B = 3 bytes (content "NEW")

<pre>^SISR: 0,1 at^sizr=0,6 ^SISR: 0,6,12 THIS_I OK at^sizr=0,6 ^SISR: 0,6,6 S_DATA OK at^sizr=0,6 ^SISR: 0,6,0 GRAM_A OK at^sizr=0,6 ^SISR: 0,3 NEW OK</pre>	<p>Service profile 0 is configured for Socket service and UDP. The URC notifies host that data is available for reading.</p> <p>The host requests to read 6 bytes.</p> <p>The first 6 bytes of datagram A are confirmed and transmitted. Another 12 bytes are still available.</p> <p>The host requests to read the next part of 6 bytes.</p> <p>The next 6 bytes of datagram A are confirmed and transmitted. Another 6 bytes are still available.</p> <p>The host requests to read the next part of 6 bytes.</p> <p>Last part of datagram A was received, no remainder is left.</p> <p>Again, the host requests to read 6 bytes. This time, the request refers to datagram B which has only 3 bytes. As the read datagram is smaller than the size requested by the host, the response does not include the <code><remainUdpPacketLength></code>.</p> <p>3 bytes are confirmed and transmitted. Datagram B was properly received.</p>
---	---

9.9 AT^SISW Internet Service Write Data

[AT^SISW](#) triggers a write operation (upload) and queries the amount of data already sent, but not acknowledged at the TCP layer.

[AT^SISW](#) write command may return the following errors:

- "+CME ERROR: operation failed" if there is a problem on application, socket, PPP or network level. The [AT^SISE](#) command and the "[^SIS](#)" URC offer additional error information.
- "+CME ERROR: operation temporary not allowed" e.g. if the service has not network resources allocated.
- "+CME ERROR: operation not allowed" e.g. if the service is not configured.

Syntax

```

Test Command
AT^SISW=?
Response(s)
OK

Write Command
AT^SISW=<srvProfileId>, <reqWriteLength>[, <eodFlag>[, <Udp_RemClient>]]
Response(s)
^SISW: <srvProfileId>, <cnfWriteLength>, <unackData>
Number of data bytes as specified by <cnfWriteLength>.
OK
ERROR
+CME ERROR: <err>
    
```

PIN → Last
 ± - +

Unsolicited Result Code

[^SISW](#): <srvProfileId>, <urcCauseId>

The URC indicates the following status changes:

- After opening a TCP Client or UDP Client with [AT^SISO](#) the "[^SISW](#)" URC indicates that the service is ready to accept data. After this initial "[^SISW](#)" URC, the TCP Client or UDP Client can proceed in Transparent Mode or Non-Transparent Mode.
The initial "[^SISW](#)" URC is not issued after a Transparent Listener or UDP Endpoint was opened, because for listening services the "[^SIS](#)" URC will be issued.
- During [AT^SISW](#) write cycles the "[^SISW](#)" URC indicates that the service is ready to accept new data, or that data transfer has finished successfully.

The URC is disabled in polling mode. See [AT^SCFG](#), parameter "Tcp/WithURCs", <[tcpWithUrc](#)>.

Parameter Description

<srvProfileId>^(num)

<srvProfileId> 0 ... 9 specified with [AT^SISS](#). Transparent TCP Listener services are not supported.

<reqWriteLength>^(num)

0...1500

Specifies the number of bytes to be sent with [AT^SISW](#) or, if set to 0, requests the amount of data already sent with [AT^SISW](#) but not yet acknowledged:

9.9 AT^SISW

- Parameter `<reqWriteLength>` may be 1...1500 bytes to specify the amount of data to be sent with `AT^SISW`.
- If parameter `<reqWriteLength>` equals 0, `AT^SISW` does not expect any data, but a normal query is performed. This allows the application to explicitly request, in particular at the end of an upload job, the amount of unacknowledged data at the TCP layer indicated by `<unackData>`.
- If Socket service is selected with UDP protocol
 - `<reqWriteLength>=0` can be used to send an empty UDP packet;
 - it is recommended that the size of each data packet be limited to 1460 bytes. Otherwise, it is possible that the following URC occurs: "`^SIS: <id>, 0, 9, The supplied buffer was too small / large`".

`<eodFlag>`^(num)

End of data indication flag. See also Section 9.9.1.

[0]	No end of data. Other data may follow to be transmitted via the Internet service. Note for UDP Endpoint service: Value 0 must be set before <code><Udp_RemClient></code> parameter although <code><eodFlag></code> is not effective for UDP Endpoint.
1	End of data is signalled to the Internet Service. Further <code>AT^SISW</code> write commands return an error response. However, reading data may be possible. The <code><eodFlag></code> is effective only if the <code><reqWriteLength></code> equals <code><cnfWriteLength></code> , in particular if the <code><reqWriteLength></code> equals 0. End-of-data flag must be enabled for following actions: <ul style="list-style-type: none"> - FTP "cmd", "put" (sending single file to FTP server) - SMTP "cmd", "at" (sending attachment from AT command interface)

`<Udp_RemClient>`^(str)

Service specific parameter of the `AT^SISW` write command. If the Socket service is configured as UDP endpoint this parameter is mandatory and specifies the IP address (in dotted format) and the UDP port of the remote host. For each write request another IP address and UDP port may be given. See example in Section 9.15.9, [UDP Scenario](#).

`<cnfWriteLength>`^(num)

0...1500	Confirmed number of data bytes which can be transmitted via the Internet service configured in <code><srvProfileId></code> . This number may be less or equal to the value requested with <code><reqWriteLength></code> . The application has to deliver exactly the number of bytes indicated by <code><cnfWriteLength></code> . A 0 value means that no data can be written at this time, i.e. it serves as a flow control mechanism.
----------	---

`<unackData>`^(num)

Number of data bytes already sent but not yet acknowledged at the TCP layer. The value is constantly changing until the entire upload job has completed. If the value equals 0 all data sent so far is acknowledged.
`<unackData>` includes the `<cnfWriteLength>` value of the pending write operation. Therefore, the very first write operation of an upload job returns identical values for `<cnfWriteLength>` and `<unackData>`. This mechanism allows the host application to easily verify whether or not the remote host has successfully received the data.
Parameter is not applicable to HTTP, SMTP, Socket with UDP protocol. For these services the counter is always set to 0.

`<urcCauseId>`^(num)

1	The service is ready to accept new user data.
2	Data transfer has been finished successfully and Internet service may be closed without loss of data.

Note

- Do not send any characters after [AT^SISW](#) command line termination ([ATS3](#)) until "[^SISW](#)" URC is received. This is necessary to avoid that any characters related to the AT command can be interpreted as being part of the data stream to be transferred. Also refer to Section [1.4, AT Command Syntax](#).

9.9.1 Usage of parameter <eodFlag>

Service type	
Socket	<p>Parameter is optional for Socket services.</p> <p>Not applicable to Socket with UDP protocol, i.e. value is ignored. After the service accepts the end-of-data flag the service state changes to "Closing". No further user data is accepted. After releasing the TCP link the service remains in state "Down".</p>
FTP	<p>Parameter is mandatory for FTP "put" (sending single file to FTP server).</p> <p>After accepting the end-of-data flag the service state changes to "Closing" and starts to end the running FTP session. No further user data is accepted. After the FTP session is completed on FTP protocol level the service state switches to "Down". In case of successful completion the URC "^SISW: x,2" is generated.</p>
SMTP	<p>Parameter is mandatory for SMTP "cmd","at" (sending attachment from AT command interface).</p> <p>SMTP service sends some "closing" commands to the SMTP server which are necessary to mark the email as successfully sent on the server. The service enters "Closing" state and remains in it until the final protocol exchange with the SMTP server has been completed. The "OK" response following AT^SISW indicates that the SMTP service has accepted the last data - IT DOES NOT indicate the successful completion of the SMTP service. Successful completion will be indicated either by the appropriate URC "^SISW:x,2" or due to the fact that the SMTP service state changes to "Down" state without any error.</p>
HTTP	<p>Parameter is optional.</p>

9.10 AT^SIST

9.10 AT^SIST Enter Transparent Mode

AT^SIST activates / deactivates Transparent Mode.

After entering the AT^SIST command, the CONNECT response notifies that the service has entered Transparent Mode and is ready to transparently send and receive payload data over the AT command interface.

There are several ways to quit the Transparent Mode and revert to AT Command Mode:

- +++ escape sequence (also transmitted over the air)
- DTR ON-OFF transitions (see AT&D for configuring DTR line)
- "etxChar" parameter set within the server address (see AT^SISS, <srvParmTag> "address" for Socket service URLs).

Switching back and forth between both modes does not affect the underlying socket and has no influence on the service <srvState>.

If the service is in AT Command Mode the "^SISR: x, 1" URC appears once to indicate that the remote side has sent new data. In this case, the client or listener shall enter AT^SIST to go to Transparent Mode and read out the new data.

If the connection is released by the remote side the following applies:

- If the service is in Transparent Mode (CONNECT mode): UE returns to AT Command Mode, issues a specific "NO CARRIER" result code and goes to <srvState> 6 ("Down") in case of TCP or UDP Client, and to 4 ("Up/Listening") in case of Transparent Listener. The "NO CARRIER" result code starts with 0x10 (DLE) and 0x04 (EOT) and ends with the command line termination character (ATS3), followed by the response formatting character (ATS4).
- If the service is in AT Command Mode the "^SISR: x, 1" URC appears to indicate that the state of the service has changed. In this case, the client or listener shall go to Transparent Mode with AT^SIST in order to read remaining data (if any) and get the "NO CARRIER" result code. After this, the service changes to <srvState> 6 ("Down"). Otherwise, if the client or listener does not go to Transparent Mode after receiving "^SISR: x, 1" URC the service remains in <srvState> 4 ("Up") even though the remote side has shut down. In some cases, depending on the remote side and the network, it is possible that "^SIS" URCs may be reported, for example "^SIS" URCs with <urcInfoId> 15 ("Remote host has reset the connection") and 19 ("Socket has been shut down"). See Section 9.14, Internet Service URC "^SIS" for a list of possible URCs.
- In all above scenarios, the Transparent service shall be closed with AT^SISC. Trying to return to Transparent Mode with AT^SIST would only end up with "NO CARRIER" once again and is not recommended.
- Use AT^SISO and AT^SISI to check the <srvState>.

Syntax

Test Command

```
AT^SIST=?
```

Response(s)

```
OK
```

Write Command

```
AT^SIST=<srvProfileId>
```

Response(s)

```
CONNECT
```

(indicates that UE has entered Transparent Mode)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

PIN → Last

```
- - +
```

Parameter Description

<srvProfileId>^(num)

<srvProfileId> 0 ... 9 specified with AT^SISS.

9.11 AT^SISH Disconnect Remote Client

AT^SISH is intended only for a Transparent TCP Listener service. It allows to reject an incoming remote client connection request or to disconnect an established client connection from server side.

Syntax

Test Command

```
AT^SISH=?
```

Response(s)

```
OK
```

Write Command

```
AT^SISH=<srvProfileId>[, <mode>]
```

Response(s)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

PIN → Last

```
- - -
```

Parameter Description

<srvProfileId>^(num)

0...9

A Transparent TCP Listener service <srvProfileId> defined with **AT^SISS**.

<mode>^(num)

Specifies disconnect mode.

[0]

Socket is closed with graceful option

1

Socket is closed without graceful option

9.12 AT^SISX Internet Service Execution

The `AT^SISX` command can be used to send ICMP (Internet Control Message Protocol) Echo Requests to a target IP address or DNS host name (also referred to as Ping command). This command can also be used to resolve DNS host names to IP addresses (HostByName) or resolve the network time, NTP protocol, in UTC.

The `AT^SISX` command can be used any time while a connection profile (bearer) is active. If issued although no connection is active, then `AT^SISX` returns ERROR.

If the `AT^SISX` write command is executed for Ping, then the command returns one row for every ICMP Echo Request. The last Ping response line is followed by two lines to report a statistic calculated from the Echo Request responses. After starting the Ping command the AT channel is blocked until all ICMP requests are executed. When using several interfaces consider that only one Ping request can be performed at a time. To stop the periodic Ping early, send any character (user break).

Syntax

Test Command

`AT^SISX=?`

Response(s)

```
^SISX: "Ping", (list of supported <conProfileId>s), , (range of supported <request>s), (range of supported <timelimit>s)
^SISX: "HostByName", (list of supported <conProfileId>s)
^SISX: "NsLookup", (list of supported <conProfileId>s)
^SISX: "Ntp", (list of supported <conProfileId>s)
OK
```

Write Command

`AT^SISX=<service>, <conProfileId>, <address>[, <request>[, <timelimit>]]`

Response(s)

In case of `<pingInfoType>= 1`: ICMP Echo Requests (1 - 30 rows)

```
^SISX: "Ping", <pingInfoType>, <conProfileId>, <ip-address>, <roundTripTime>
[...]
```

In case of `<pingInfoType>= 2`: Packet statistic (1 row)

```
^SISX: "Ping", <pingInfoType>, <conProfileId>, <sent>, <received>, <lost>, <lostPercent>
```

In case of `<pingInfoType>= 3`: Time statistic (1 row)

```
^SISX: "Ping", <pingInfoType>, <conProfileId>, <minRTT>, <maxRTT>, <meanRTT>
```

In case of `<service>= "HostByName"`

```
^SISX: "HostByName", <ip-address>
[...]
```

In case of `<service>= "NsLookup"`

```
^SISX: "NsLookup", <ip-address>, <tTL>
[...]
```

In case of `<service>= "Ntp"`

```
^SISX: "Ntp", <ntp>
```

OK

ERROR

+CME ERROR: <err>

PIN → Last

+ - -

Parameter Description

<service>^(str)

"Ping"	Ping host.
"HostByName"	Get first address from a host.
"NsLookup"	Get all addresses including TTL from a host.
"Ntp"	Network time protocol.

<conProfileId>^(num)

The connection profile identifier as defined with [AT^SICS](#) for the connection to be used (see [<conProfileId>](#)). If the specified connection is not yet open, it will be opened implicitly.

<address>^{(str)(+CSCS)}

In case of "Ping" this is the target host as FQDN or IP address (i.e. "192.168.1.3"), in case of "HostByName" this is the FQDN to be resolved into the IP address.

<ip-address>^(str)

The IP address of the host (i.e. "192.168.1.3").

<request>^(num)

[1]...30	Number of "Ping" ICMP Echo Requests to be sent. Not supported for "HostByName".
4	IPV4 only in case of "HostByName" or "NsLookUp"
6	IPV6 only in case of "HostByName" or "NsLookUp"

<timelimit>^(num)

200...[5000]...10000 Amount of time, in milliseconds, to wait for an ICMP Echo Response message related to a previously sent Echo Request message. Parameter is not supported for "HostByName".

<pingInfoType>^(num)

Indicate the type and format of the information given in the command responses (see syntax of the [AT^SISX](#) write command above).

1	Ping status received for the ICMP Echo Request(s). Depending on parameter <request> 1 - 30 rows. Address and Round Trip Time are returned for each request.
2	one row packet statistic calculated from the ping response(s) received for <pingInfoType> =1.
3	one row time statistics calculated from the ping response(s) received for <pingInfoType> =1 (displayed only if at least one Echo response message was received).

<roundTripTime>^(num)

Round Trip Time in milliseconds. If the Echo Response message is not received within the time specified by [<timelimit>](#) the value -1 is returned (e.g. when the bearer shuts down during command execution).

<sent>^(num)

Number of sent packets.

<received>^(num)

Number of received packets.

<lost>^(num)

Number of lost packets.

<lostPercent>^(num)

Lost packets in percent.

<minRTT>^(num)

Minimum Round Trip Time in milliseconds.

<maxRTT>^(num)

Maximum Round Trip Time in milliseconds.

<meanRTT>^(num)

Average Round Trip Time in milliseconds.

<ntp>^(num)

time in extended format UTC

<tTl>^(num)

The TTL value for this address in seconds.

9.13 AT^SISE Internet Service Error Report

The [AT^SISE](#) write command returns the current error status of the specified Internet service profile. If the service profile is not defined or the value is invalid "+CME ERROR" response is returned.

The error status is identical to the content of the "[^SIS](#)" URC last issued.

If a service fails the commands [AT^SISR](#), [AT^SISW](#) or [AT^SIST](#) will return an error response. However, if the [AT^SISE](#) command returns `<infoID>=0` it is recommended to use the [AT+CEER](#) command because a general network problem might be the reason.

Syntax

Test Command
AT^SISE=?
Response(s)
OK
Write Command
AT^SISE=<srvProfileId>
Response(s)
^SISE: <srvProfileId>, <infoID>[, <info>]
OK
ERROR
+CME ERROR: <err>
PIN → Last
- - -

Parameter Description

`<srvProfileId>`^(num)

Internet service profile identifier as defined by [AT^SISS <srvProfileId>](#).

0...9

`<infoID>`^(num)

Reason for Internet service error. This is a subset of the `<urcInfoId>`s which can be found in Section 9.14, [Internet Service URC "ASIS"](#).

The value 0 indicates there is no special Internet service error. In this case the application may use [AT+CEER](#) to check for general network problems.

`<info>`^(str)

Information text related to `<infoID>`. This is a subset of the `<urcInfoText>`s which can be found in Section 9.14, [Internet Service URC "ASIS"](#).

Note

- In particular cases, the [AT^SISE](#) command may deliver information and warnings. This applies the following services:
 FTP: Information 2100
 SMTP: Warnings
 If an error occurs the information and warning messages are overwritten by error messages.

9.14 Internet Service URC "^SIS"

9.14 Internet Service URC "^SIS"

This section first describes the syntax and the parameters of the "^SIS" URC. The second part consists of tables listing the information elements delivered within the "^SIS" URC and the command response of AT^SISE.

The presentation of the "^SIS" URC containing the parameter <urcCause>=0 or <urcCause>=5 can be disabled or enabled depending on whether polling mode or URC mode is preferred. To do so, use the AT^SCFG command, parameter "Tcp/WithURCs" (refer to <tcpWithUrc>). However, if related to <urcCause>=1, 2, 3 or 4, the "^SIS" URC will always be delivered regardless of the setting made with AT^SCFG.

Unsolicited Result Code

Indicates an event, an error or an information element. The same information can be obtained via AT^SISE.

^SIS: <srvProfileId>, <urcCause>[, [<urcInfoId>][, <urcInfoText>]]

The URC may appear if an event or an error occurs, for example after opening an Internet service with AT^SISO or any time during operation. The URC also indicates a request for a mobile terminated Internet service client connection, or a failure if a mobile terminated request is rejected. Furthermore, the URC may deliver an information element resulting from a specific command given in the service profile.

A list of possible causes can be found in the tables below. The tables contain the <urcInfoId> and, if applicable, a specific <urcInfoText>. If marked with *) the precise text related to a <urcInfoId> varies greatly depending on the scenario and the implementation of the remote server. In these cases, only a brief explanation of the scenario can be found in the table column "Description".

Parameter Description

<urcCause>^(num)

URC cause identifier.

0	An event has occurred after opening or while using an Internet service. The event number is presented via <urcInfoId> and may be an error, a warning, an information element or a note. Optionally additional information may be supplied via <urcInfoText>.
1	Indicates that an opened Non-Transparent Listener service is receiving a connection request from a remote client. The incoming socket connection is dynamically assigned to the next free Internet service profile. In this case, the parameter <urcInfoId> inside the "^SIS" URC equals the <srvProfileId> of the dynamically assigned service profile. This ID shall be used to accept the connection request with AT^SISO or to reject it with AT^SISC. The connection status may be requested by using the AT^SISI read or write command or the AT^SISO read command. Among other details, the response indicates the IP address of the remote client (parameter <remAddr>). This may be helpful to decide whether to accept or reject the request.
2	Incoming Socket service client connection has failed. The client request was rejected automatically because no free Internet service profile was available.
3	Indicates that an opened Transparent TCP Listener service is receiving a connection request from a remote client. The parameter <urcInfoId> then indicates whether auto answering is active for the service (<urcInfoId>=1) or not. Parameter <urcInfoText> contains the remote IP address and the port of the connecting client. Example: "^SIS: 5,3,0,\"192.168.105.17:1712\"" means that a client from host 192.168.105.17 tries to connect from port 1712 to our listening Transparent TCP Listener with profile 5. Auto answering is disabled.

9.14 Internet Service URC "^SIS"

- 4 Indicates for a Transparent TCP Listener service, that a remote client which is allowed due to the used address filter (see option "addrfilter" for [AT^SIS](#)), was internally rejected, e.g. because the connect timeout has expired (see option "connecttimeout" for [AT^SIS](#)). The URC is not generated if the remote client is rejected because its IP address is not matching the address filters. This cause is also used if UE is not in Transparent Mode and a connected client has closed the connection remotely.
- 5 Only for TCP Listeners, Non-Transparent UDP endpoint. The service is ready to use.

`<urcInfoId>(num)`

Information identifier related to `<urcCause>`. See tables below for further detail. The `<urcInfoId>` number ranges indicate the type of information element:

0: Service is working properly.

1 - 2000: Error, service is aborted and enters `<srvState>=6` (Down). Value 1000 notifies that service profile contains invalid parameter(s).

2001 - 4000: Information related to progress of service.

4001 - 6000: Warning, but no service abort.

6001 - 8000: Notes

Additional information for Socket service: As stated above, if a Socket connection request from a remote client is received (see `<urcCause>=1`) the `<urcInfoId>` shows the `<srvProfileId>` of the dynamically assigned free service profile.

If `<urcCause>` is 3, the `<urcInfoId>` is used as auto answer indicator. If the value is 0, auto answering is disabled. If the value is 1, auto answering is enabled.

`<urcInfoText>(str)`

Information text related to `<urcCause>`. See tables below for further detail. The maximum length of an information text is 255 bytes. Any longer messages will be truncated.

If `<urcCause>` is 3, `<urcInfoText>` is used to indicate the IP address and port of the connecting client, e.g. "192.168.105.17:1712".

9.14.1 Information Elements Related to the Service Application

The following table lists the information elements which may be returned by all supported services within the "^SIS" URC and the command response of [AT^SISE](#). It should be noted that TCP/IP socket problems may occur in all Internet service connections (Socket, Transparent TCP or Transparent UDP, FTP, HTTP or SMTP).

<code><urcInfoId></code>	<code><urcInfoText></code>	Description
<i>Information Elements Returned by the TCP/IP socket</i>		
2	Invalid socket descriptor	Socket error
3	Bad address specified	Socket error
4	Invalid operation	Socket error
5	No free socket descriptors	Socket error
6	The operation would block	Socket error
7	A previous attempt at this operation is still ongoing	Socket error
8	Socket is not bound	Socket error
9	The supplied buffer is too small / large	Socket error
10	Flags not supported	Socket error
11	Operation not supported	Socket error
12	The address is already in use	Socket error

9.14 Internet Service URC "^SIS"

<urcInfoId>	<urcInfoText>	Description
13	The network is unavailable	Socket error
14	An established connection was aborted (transmission time-out or protocol error)	Socket error
15	Remote host has reset the connection	Socket error
16	No buffer space available	Socket error
17	The socket is already connected	Socket error
18	For TCP/IP sockets, the socket is not connected	Socket error
19	Socket has been shut down	Socket error
20	Connection timed out	Socket error
21	Remote host has rejected the connection	Socket error
22	Remote host is unreachable	Socket error
23	An unexpected error occurred	Socket error
24	Host not found	DNS error
25	An error occurred that may be transient; a further attempt may succeed.	DNS error
26	An unrecoverable error occurred	DNS error
<i>General Information Elements</i>		
46	Fatal: The service has detected an unknown error	
47	*)	Indicates that the remote service has closed the connection. The host shall close the service.
48	Remote peer has closed the connection	Remote peer has closed the connection unexpectedly, and no data are available. The host shall close the service. Note that the "^SIS" URC only indicates the <urcInfoId>, but the AT^SISE command indicates both the <urcInfoId> and the <urcInfoText>.
49	Fatal: No memory is available for service action	
50	Fatal: Service has detected an internal error	
51	Application Task ID is not registered	
52	Fatal: Entity not supported	
53	No free Entity available	
54	Index not supported	
55	Service is not writeable	
56	Syntax error in URL	
57	Configuration Error	
58	No more data available	
59	Peek operation rejected	
60	Service don't accept further data	
61	Fatal: Service has no socket connection	
62	Unknown internal TLS error	SSL error
63	Wrong format of certificate data	SSL error

9.14 Internet Service URC "^SIS"

<urcInfoId>	<urcInfoText>	Description
64	Certificate validity period is in future	SSL error
65	Certificate validity period expired	SSL error
66	Peer certificate is not confirmed	SSL error
67	Wrong signature key format	SSL error
68	Unsupported signature key type	SSL error
69	Wrong protocol data format	SSL error
70	Wrong protocol data format	SSL error
71	No memory available for TLS	SSL error
72	Buffer error in TLS	SSL error
73	Wrong input data for RSA operation	SSL error
74	TLS/SSL protocol error	SSL error
75	Internat error in TLS	SSL error
76	Certificate format error	SSL error
77	The certificate does not exist	SSL error
78	Unknown TLS error code!	SSL error
80		Connection profile not defined.
84	PPP LCP FAILED	PPP error
85	PAP Authentication failed	PPP error
86	CHAP Authentication failed	PPP error
87	IPCP failed	PPP error
89	PDP: can not obtain controlling task	
90	PDP: internal error 1	
91	PDP: internal error 2	
92	PDP: no authentication req	
93	PDP: internal error 3	
94	PDP: conection failed	
95	PDP: internal error 4	
96	PDP: no IP assigned	
97	PDP: no network	
98	PDP: network is not up	
99	PDP: internal error 5	
119	PDP: no DNS received	
120	DNS: no data	
121	DNS: timeout	
122	DNS: connection refused	
123	DNS: terminated lookup	
124	DNS: domain name is too long	
125	DNS: invalid server	
126	DNS: undefined error	

General Information Elements

9.14 Internet Service URC "^^SIS"

<urcInfoId>	<urcInfoText>	Description
1000	PARA-ERR: <Info>	Notifies that service profile contains a wrong parameter. <Info> text indicates the service profile parameter that contains an error.
4062	TLS: empty certstore	Notifies that certificate store is empty when AT^^sis=0,sec-opt,0 as an explicit non-usage of certificate check is not used.
6001		General progress information for connection setup.

*) Text varies depending on scenario.

9.14.2 Information Elements Related to FTP Service

<urcInfoId>	<urcInfoText>	Description
<i>Error URCs</i>		
100	FTP-ERR: <FTP Response Str>	<FTP Response Str> text depends on FTP server implementation
<i>Info URCs</i>		
2100	<info>	<info> text depends on FTP server implementation

9.14.3 Information Elements Related to HTTP Service

<urcInfoId>	<urcInfoText>	Description
<i>Error URCs</i>		
200	HTTP-ERR: Not connected - cannot send request HTTP-ERR: failed on sending request	
201	<HTTP Response Str>	Client error
202	<HTTP Response Str> HTTP-ERR: Service unavailable	Server error
203	HTTP-ERR: Redirect failed - too many redirects HTTP-ERR: Redirect failed - not allowed HTTP-ERR: Redirect failed - location missing	Max. number of allowed redirects: 6
204	HTTP-ERR: auth failed - user name or password missing HTTP-ERR: auth failed - user name or password wrong HTTP-ERR: Authority required for this URL HTTP-ERR: No access to this URL allowed	
<i>Info URCs</i>		
2200	HTTP Redirect to: <Host>:<Port> <Path>	
2201	HTTP Response <Response code> Example: ^^SIS: 2,3,2201, "HTTP Response: HTTP/1.1 200 OK"	

9.14.4 Information Elements Related to SMTP Service

<urcInfoId>	<urcInfoText>	Description
<i>Errors</i>		
400	***)	Indicates that the SMTP service could not be executed successfully.
<i>Warnings</i>		
4400	***)	SMTP specific warning

***) Text varies depending on scenario.

9.15 Examples of how to Configure and Use Internet Service Profiles

9.15 Examples of how to Configure and Use Internet Service Profiles

Below you can find selective examples of how to configure and use Internet service profiles. To visualize the difference between URC mode and polling mode the operation of services (after opening with `AT^SISO`) is explained in separate examples for either mode.

9.15.1 Selecting URC Mode or Polling Mode

To enable or disable the presentation of URCs for the Internet services use the `AT^SCFG` command, type "TcpIp/WithURCs" and select "on" or "off" for parameter `<tcpWithUrc>`.

<code>at^scfg=tcp/withurcs</code>	Query the current setting.
<code>^SCFG: "Tcp/WithURCs", "on"</code>	URC mode is enabled (delivery default).
OK	
<code>at^scfg=tcp/withurcs,off</code>	Select polling mode (by switching off URC mode).
<code>^SCFG: "Tcp/WithURCs", "off"</code>	Polling mode is accepted.
OK	

9.15.2 Configuring an Internet Connection Profile

<code>AT+COPS?</code>	Checking network registration.
<code>+COPS: 0,0,"E-Plus",0</code>	ME is registered to German provider E-Plus.
OK	
<code>AT+CGATT=1</code>	Attaching to Packet Domain (optional).
OK	
<code>AT+CGDCONT=1,"IP","internet.eplus.de"</code>	Specifying PDP context 1 with APN for E-Plus.
OK	
<code>AT^SICS=1,"dns1","198.023.097.002"</code>	Specifying primary DNS address (optional).
OK	
<code>AT^SICS=1,"dns2","212.023.097.003"</code>	Specifying secondary DNS address (optional).
OK	
<code>AT^SICA=1,1</code>	Activating PDP context 1.
OK	
<code>AT+CGPADDR=1</code>	Requesting dynamic IP address assigned to local client for context 1.
<code>+CGPADDR: 1,"10.129.137.217"</code>	Response returns currently assigned IP address.
OK	

9.15.3 Configuring Non-Transparent Listener

Keep in mind that if the host is configured as Non-Transparent Listener another service profile must be left free to be dynamically assigned as Server when the Non-Transparent Listener receives a connection request from a remote client.

Configure the service profile 4 for use as Non-Transparent Listener:

<code>AT^SISS=4, srvType, "Socket"</code>	Select service type Socket.
OK	
<code>AT^SISS=4, conId, "1"</code>	Select connection profile.
OK	

9.15 Examples of how to Configure and Use Internet Service Profiles

```
AT^SISS=4,address,"socktcp://lis-
tener:65534"
```

The host specifies its local port 65534 to be used for the Socket listener service. The local IP address will be dynamically assigned when the service is opened with [AT^SISO](#).

```
OK
```

Open the Listener service and query the IP address dynamically assigned to the Listener:

```
AT^SISO=4
```

Open the Listener service.

```
OK
```

```
AT^SISO?
```

Query the current status of services. All service profiles are unused, except for service profile 4 which is running in listener mode, where `<srvState>=3` (listening) and `<socketState>=3` (LISTENER). The response also indicates the IP address dynamically assigned to the listener.

```
^SISO: 0,""
```

```
^SISO: 1,""
```

```
^SISO: 2,""
```

```
^SISO: 3,""
```

```
^SISO: 4,"Socket",3,3,0,0,"10.10.0.187:65534","0.0.0.0:0"
```

```
^SISO: 6,""
```

```
^SISO: 7,""
```

```
^SISO: 8,""
```

```
^SISO: 9,""
```

```
OK
```

9.15.4 Configuring TCP Client for Calling a TCP Listener

Configure the client's service profile for calling a TCP Listener on another host:

```
AT^SISS=1,srvType,"Socket"
```

Select service type Socket.

```
OK
```

```
AT^SISS=1,conId,"1"
```

Select connection profile.

```
OK
```

```
AT^SISS=1,address,"socktcp://
10.10.0.187:65534"
```

Add the IP address and the TCP port of the remote host (from example in Section 9.15.3, [Configuring Non-Transparent Listener](#)).

```
OK
```

9.15.5 Transparent TCP Listener: Accepting / Rejecting Incoming Remote Client

Host 1: Configure Transparent TCP Listener with Autoconnect disabled:

```
AT^SISS=1,"srvType","Socket"
```

Select service type Socket.

```
OK
```

```
AT^SISS=1,conId,"1"
```

Select connection profile.

```
OK
```

```
AT^SISS=1,"address","socktcp://lis-
tener:2000;etx=26;autoconnect=0"
```

"etx" configures Transparent mode. Autoconnect disabled.

```
OK
```

```
AT^SISS=1,"tcpMR","3"
```

```
OK
```

```
AT^SISS=1,"tcpOT","5555"
```

```
OK
```

Host 1: Open Transparent TCP Listener and query IP address dynamically assigned to Listener:

9.15 Examples of how to Configure and Use Internet Service Profiles

```

AT^SISO=1
OK
^SIS: 1,5           Listener ready, listening (value 5).
AT^SISO=1,1       Query status of profile 1.
^SISO:           Profile is running in listener mode, where
1, "Socket", 4, 3, 0, 0, "10.10.0.187:65534", "0.0
.0.0:0"          <srvState>=4 (listening) and <socketState>=3
                 (LISTENER). Dynamic IP address is shown.

OK

```

Host 2: Configure TCP Client:

```

AT^SISS=0, srvType, "Socket "      Select service type Socket.
OK
AT^SISS=0, conId, "1"             Select connection profile.
OK
AT^SISS=0, "address", "socktcp://  Set Listener's IP address.
"10.10.0.187:65534"
OK
AT^SISS=0, "tcpMR", "3"
OK
AT^SISS=0, "tcpOT", "5555"
OK

```

Host 2: Start TCP Client

```

AT^SISO=0
OK
^SISW: 0,1           URC indicates that sending data is possible.

```

Host 1: Listener rejects incoming connection request from host 2:

```

^SIS: 1,3,0, "10.66.90.165:46723"  URC indicates incoming connection request.
AT^SISH=1                          Listener rejects connection request.
OK
AT^SISO=1,1                          Query status of profile 1.
1, "Socket", 4, 3, 0, 0, "10.10.0.187:65534", "0.0  Listener is listening again.
.0.0:0"
OK

```

Host 1: Listener accepts incoming connection request from host 2:

```

^SIS: 1,3,0, "10.66.90.165:46723"  URC indicates incoming connection request.
AT^SISO=1                          Listener accepts connection request, profile
                                     changes to Server mode.
OK
^SISW: 1,1                          URC indicates that data transmission is possible.
AT^SISO=1,1                          Query status of profile 1.
1, "Socket", 8, 4, 0, 0, "10.10.0.187:65534", "10.  Service connected (value 8) and in Server mode /
66.90.165:46723", 0                  value 4).
OK
AT^SIST=0                            Change to transparent access mode.
CONNECT                             Service enters transparent access mode.
Hello ....                          For further handling see examples below, e.g. Sec-
                                     tion 9.15.11, Opening and Closing Transparent TCP
                                     Service, Section 9.15.12, Transparent TCP Client
                                     Receives Data While in AT Command Mode

```


9.15 Examples of how to Configure and Use Internet Service Profiles

9.15.6 Transparent TCP Listener: Autoanswering Incoming Remote Client

Host 1: Configure Transparent TCP Listener with Autoconnect enabled.

```
AT^SISS=1,"srvType","Socket"           Select service type Socket.
OK
AT^SISS=1,conId,"1"                     Select connection profile.
OK
AT^SISS=1,"address","socktcp://lis-    "etx" configures Transparent mode. Autoconnect
tener:2000;etx=26;autoconnect=1"       enabled.
OK
AT^SISS=1,"tcpMR","3"
OK
AT^SISS=1,"tcpOT","5555"
OK
```

Host 1: Open Transparent TCP Listener and query IP address dynamically assigned to Listener:

```
AT^SISO=1
OK
^SIS: 1,5                               Listener ready, listening (value 5).
AT^SISO=1,1                             Query status of Listener profile.
^SISO:                                   Listener ready, listening (value 4). Dynamic IP
1,"Socket",4,3,0,0,"10.10.0.187:2000", address is shown.
"0.0:0"
OK
^SISW: 1,1
```

Host 2: Configure TCP Client.

```
AT^SISS=0,srvType,"Socket"             Select service type Socket.
OK
AT^SISS=0,conId,"1"                     Select connection profile.
OK
AT^SISS=0,"address","socktcp://        Set Listener's IP address.
10.10.0.187:2000"
OK
AT^SISS=0,"tcpMR","3"
OK
AT^SISS=0,"tcpOT","5555"
OK
```

Host 2: Start TCP Client

```
AT^SISO=0
OK
^SISW: 0,1
```

Host 1: Transparent TCP Listener automatically accepts connection request from host 2:

```
^SIS: 1,3,1,"10.66.90.165:46723"       URC indicates incoming connection request.
CONNECT                                  Service autoconnects to client and enters Transpar-
                                           ent Mode.
Hello ....                               For further handling see examples below, e.g. Sec-
                                           tion 9.15.11, Opening and Closing Transparent TCP Service, Section 9.15.12, Transparent TCP Client Receives Data While in AT Command Mode
                                           Type +++ to return to AT command mode (+++ not
                                           visible in example).
OK
AT^SISO=1,1                             Query status of profile 1.
```

9.15 Examples of how to Configure and Use Internet Service Profiles

```

^SISO: Transparent TCP Listener connected to client (value
1, "Socket", 8, 4, 0, 0, "10.10.0.187:2000", "10.6 8) and in Server mode (value 4).
6.90.165:46723", 0
OK

```

9.15.7 Socket Client Sends Data via TCP Connection (Polling Mode)

The example uses service profile 0 configured for Socket service and TCP.

```

AT^SISO=0
OK

AT^SISI=0
^SISI: 0,3,0,0,0,0
OK
AT^SISI=0
^SISI: 0,4,0,0,0,0
OK
AT^SISW=0,10
^SISW: 0,10,10
0123456789
OK
AT^SISW=0,10,1
^SISW: 0,0,10
OK
AT^SISW=0,10,1
^SISW: 0,10,20
0123456789
OK
AT^SISW=0,0,0
^SISW: 0,0,10
OK
AT^SISI=0
^SISI: 0,5,0,20,10,10
OK
AT^SISI=0
^SISI: 0,6,0,20,20,0
OK
AT^SISC=0
OK

```

The host opens service profile 0.
Note: URC ^SISW:0,1 does not appear! The host must poll the service state by means of AT^SISI until the service is in <srvState> "Up".

The service is still in <srvState> "Connecting".

The service is now in <srvState> "Up" and is ready to accept data.

The host requests to write 10 bytes.
Response that 10 bytes can be sent and are unacknowledged.

The host requests to write next 10 bytes and enables the <eodFlag>.
But the service refuses the request, even the end-of-data flag remains without effect.

Next try (polling).
Response that the service accepts 10 bytes and this data and the previously sent data are unacknowledged.

Polling to request unacknowledged data.
There are 10 bytes still unacknowledged.

Polling for <srvState> change ("Closing" -> "Down").
20 bytes are transferred via serial interface, 10 bytes are acknowledged by remote peer, 10 bytes are on the way.

Polling for <srvState> change ("Closing" -> "Down").
The Service is in state "Down" and all data is confirmed by the remote peer.

Closing the Socket service.

9.15.8 Socket Client Sends Data via TCP Connection with URCS

The example uses service profile 0 configured for Socket service and TCP.

9.15 Examples of how to Configure and Use Internet Service Profiles

AT^SISO=0	The host opens service profile 0.
OK	
^SISW: 0,1	Socket service is ready for upload.
AT^SISW=0,10	The host requests to write 10 bytes.
^SISW: 0,10,10	Response that 10 bytes can be sent and are unacknowledged.
0123456789	
OK	
^SISW: 0,1	The URC indicates that the Socket service is ready to transfer more data. Data of the last AT^SISW command are transferred to the remote host.
AT^SISW=0,10,1	The host requests to write next 10 bytes and enables the <eodFlag> to notify that these are the last 10 bytes of the session.
^SISW: 0,10,20	Response that the service accepts 10 bytes and this data and the previously sent data are unacknowledged.
0123456789	
OK	
-----	Waiting for URC.
^SISW: 0,2	Data transfer has been finished.
AT^SISC=0	Closing the Socket service.
OK	

9.15.9 UDP Scenario

The following example shows a communication between a UDP endpoint (host 1) and a UDP client (host 2). Part 1 of the example refers to the UDP endpoint and shows the configuration which allows the UDP endpoint to communicate with any UDP client. Part 2 shows the settings of a UDP client. Part 3 and 4 are running in parallel: Part 3 shows the procedures on the UDP endpoint side done when communicating with a UDP client. Part 4 shows the equivalent steps done by the UDP client when communicating with the UDP endpoint.

Part 1 - host 1 is configured for use as UDP endpoint:

AT^SISS=0,svrtype,socket	Select service type Socket.
OK	
AT^SISS=0,conid,1	Select connection profile 1.
OK	
AT^SISS=0,alphabet,1	Choose ASCII alphabet.
OK	
AT^SISS=0,address,"sockudp://:6666"	Specify the local UDP port.
OK	

Part 2 - host 2 is configured for use as UDP client:

AT^SISS=1,svrtype,socket	Select service type Socket.
OK	
AT^SISS=1,conid,1	Select connection profile 1.
OK	
AT^SISS=1,alphabet,1	Choose ASCII alphabet.
OK	
AT^SISS=1,address,"sockudp://10.10.0.219:6666"	Specify the address of host 1.
OK	

9.15 Examples of how to Configure and Use Internet Service Profiles

Part 3 - host 1 opens the service and communicates with host 2:

AT^SISO=0	Open the service.
OK	
^SIS: 0,5	URC indicates that host 1 is waiting (on UDP port 6666).
AT^SISO=0,1	
^SISO:	Request connection status.
0,"Socket",4,3,0,0,"10.10.0.219:6666","0.0.0.0:0"	
OK	
^SISR: 0,1	URC indicates that host 2 has opened the connection to host 1 and has sent some data.
AT^SISR=0,100	Host 1 requests to read 100 bytes.
OK	
^SISR: 0,22,"10.10.0.222:6561"	Host 1 is reading the text string received from host 2 (see part 4 of the example) and gets information about the remote client, i.e. the address of host 2.
Hello, I'm the client!	
OK	
AT^SISW=0,25,0,"10.10.0.222:6561"	Host 1 starts sending 25 bytes to host 2.
^SISW: 0,25,0	Host 1 is sending the message "Hi, I'm the UDP endpoint!" (25 bytes) to host 2. As a result, host 2 is receiving the URC "^SISR: 1,1" shown below in part 4 of the example.
OK	
^SISW: 0,1	URC confirms that host 1 can send data again.
AT^SISC=0	Close the service.
OK	

Part 4 - host 2 opens the service and communicates with host 1:

AT^SISO=1	Open the service.
OK	
^SISW: 1,1	URC indicates that host 2 can send data.
AT^SISO=1,1	
^SISO:	Request connection status.
1,"Socket",4,2,0,0,"10.10.0.222:6561","10.10.0.219:6666"	
OK	
AT^SISW=1,22	Host 2 starts to write 22 bytes.
^SISW: 1,22,0	Host 2 is writing the message "Hello, I'm the client!" (22 bytes). As a result, host 1 is receiving the URC "^SISR: 0,1" shown above in part 3 of this example.
OK	
^SISW: 1,1	URC confirms that host 2 could send data.
^SISR: 1,1	URC indicates that host 2 has received data from host 1.
AT^SISR=1,100	Host 2 requests to read 100 bytes.
^SISR: 1,25	Response indicates that host 2 has received 25 characters from host 1.
Hi, I'm the UDP endpoint!	
OK	
AT^SISC=1	Close the service.
OK	

9.15 Examples of how to Configure and Use Internet Service Profiles

9.15.10 Creating Transparent TCP Socket Client

AT^SISS=1, srvType, "Socket "	Select service type "Socket".
OK	
AT^SISS=1, conId, 1	Select connection profile 1.
OK	
AT^SISS=1, address, "socktcp:// 10.10.0.110:9996;etx;timer=200"	Specify server address. Add "etx" parameter to set Transparent mode.
OK	

9.15.11 Opening and Closing Transparent TCP Service

AT^SISO=1	Open Transparent TCP service.
OK	
^SISW: 1,1	URC indicates that Transparent TCP service is ready.
at^sist=1	Open transparent access mode.
CONNECT	Service is ready to send or receive data. Client is sending data, e.g Good Morning (not visible in example).
	Client types +++ to return to AT command mode (+++ not visible in example).
OK	
at^sisi=1	Check the service state of service profile 1.
^SISI: 1,4,0,16,16,0	Service is in state "Up" (4). 0 bytes received, 16 bytes sent and acknowledged.
OK	
AT^SISO?	Check the service state of service profile 1.
^SISO: 0, ""	
^SISO:	Service is in state "Up" (4). Socket is assigned. 0 bytes received, 16 bytes sent. Local and remote IP address are assigned.
1, "Socket", 4, 2, 0, 16, "10.10.0.200:1024", "10. 10.0.108:65532"	
^SISO: 2, ""	
^SISO: 3, ""	
^SISO: 4, ""	
^SISO: 5, ""	
^SISO: 6, ""	
^SISO: 7, ""	
^SISO: 8, ""	
^SISO: 9, ""	
OK	
AT^SISC=1	Close the service.
OK	
at^sisi=1	Check the service state of service profile 1.
^SISI: 1,2,0,0,0,0	Service profile 1 is in state "Allocated" (2).
OK	
AT^SISO?	Check the service state of service profile 1.
^SISO: 0, ""	
^SISO:	Service is in state "Allocated" (2). Socket not assigned.
1, "Socket", 2, 1, 0, 0, "0.0.0.0:0", "0.0.0.0:0"	
^SISO: 2, ""	
^SISO: 3, ""	
^SISO: 4, ""	
^SISO: 5, ""	
^SISO: 6, ""	

9.15 Examples of how to Configure and Use Internet Service Profiles

```

^SISO: 7, ""
^SISO: 8, ""
^SISO: 9, ""
OK

```

9.15.12 Transparent TCP Client Receives Data While in AT Command Mode

AT^SISO=1	Open Transparent TCP service.
OK	
^SISW: 1,1	URC indicates that Transparent TCP service is ready.
at^sist=1	Open transparent access mode.
CONNECT	Service is ready to send or receive data.
Hello	Client is reading received data.
	Client types +++ to return to AT command mode (+++ not visible in example).
OK	
^SISR: 1,1	URC indicates that new data is available for the client.
at^sist=1	Return to transparent access mode.
CONNECT	Service is ready to send or receive data.
Goodbye	Client is reading received data.
	Client types +++ to return to AT command mode (not visible in example).
OK	
at^sisi=1	Check the service state of service profile 1.
^SISI: 1,4,12,6,6,0	Service is in state "Up" (4). 12 bytes received, 6 bytes sent and acknowledged.
OK	
AT^SISO?	Check the service state of service profile 1.
^SISO: 0, ""	
^SISO:	Service is in state "Up" (4). Socket is assigned. 12 bytes received, 6 bytes sent. Local and remote IP address are assigned.
1, "Socket", 4, 2, 12, 6, "10.10.0.200:1025", "10.10.0.108:65532"	
^SISO: 2, ""	
^SISO: 3, ""	
^SISO: 4, ""	
^SISO: 5, ""	
^SISO: 6, ""	
^SISO: 7, ""	
^SISO: 8, ""	
^SISO: 9, ""	
OK	
AT^SISC=1	Close the service.
OK	
at^sisi=1	Check the service state of service profile 1.
^SISI: 1,2,0,0,0,0	Service profile 1 is in state "Allocated" (2).
OK	
AT^SISO?	Check the service state of service profile 1.
^SISO: 0, ""	
^SISO:	Service is in state "Allocated" (2). Socket not assigned.
1, "Socket", 2, 1, 0, 0, "0.0.0.0:0", "0.0.0.0:0"	
^SISO: 2, ""	
^SISO: 3, ""	

9.15 Examples of how to Configure and Use Internet Service Profiles

```

^SISO: 4, ""
^SISO: 5, ""
^SISO: 6, ""
^SISO: 7, ""
^SISO: 8, ""
^SISO: 9, ""
OK

```

9.15.13 Remote Server Disconnects While Transparent TCP Service is in Transparent Access Mode

AT^SISO=1	Open Transparent TCP service.
OK	
^SISW: 1,1	URC indicates that Transparent TCP service is ready.
at^sist=1	Open transparent access mode.
CONNECT	Service is ready to send or receive data.
Good Morning	Remote server has sent data and disconnected. Client reads data. Then client gets NO CARRIER in AT command mode.
NO CARRIER	
at^sisi=1	Check the service state of service profile 1.
^SISI: 1,6,12,0,0,0	Service is in state "Down" (6). 12 bytes received.
OK	
AT^SISO?	Check the service state of service profile 1.
^SISO: 0, ""	
^SISO:	Service is in state "Down" (6). Socket is assigned. 6 bytes received. 12 bytes sent. Local and remote IP address are assigned.
1, "Socket", 6, 2, 12, 0, "10.10.0.200:1026", "10.10.0.108:65532"	
^SISO: 2, ""	
^SISO: 3, ""	
^SISO: 4, ""	
^SISO: 5, ""	
^SISO: 6, ""	
^SISO: 7, ""	
^SISO: 8, ""	
^SISO: 9, ""	
OK	
AT^SISC=1	Close the service.
OK	
at^sisi=1	Check the service state of service profile 1.
^SISI: 1,2,0,0,0,0	Service profile 1 is in state "Allocated" (2).
OK	

9.15.14 Server Disconnects While Transparent TCP Service is in AT Command Mode and Data is Pending

AT^SISO=1	Open Transparent TCP service.
OK	
^SISW: 1,1	URC indicates that Transparent TCP service is ready.
at^sist=1	Open transparent access mode.
CONNECT	Service is ready to send or receive data.
Good Morning	Client is reading data.

9.15 Examples of how to Configure and Use Internet Service Profiles

<pre> OK ^SISR: 1,1 at^sisi=1 OK ^SISI: 1,4,12,3,3,0 OK AT^SISO? ^SISO: 0, "" ^SISO: 1, "Socket", 4, 2, 12, 3, "10.10.0.200:1027", "10. 10.0.108:65532" ^SISO: 2, "" ^SISO: 3, "" ^SISO: 4, "" ^SISO: 5, "" ^SISO: 6, "" ^SISO: 7, "" ^SISO: 8, "" ^SISO: 9, "" OK at^sist=1 CONNECT Good bye NO CARRIER at^sisi? ^SISI: 1,6,20,3,3,0 OK AT^SISO? ^SISO: 0, "" ^SISO: 1, "Socket", 20, 3, "10.10.0.200:1027", "10.10.0. 108:65532" ^SISO: 2, "" ^SISO: 3, "" ^SISO: 4, "" ^SISO: 5, "" ^SISO: 6, "" ^SISO: 7, "" ^SISO: 8, "" ^SISO: 9, "" OK AT^SISC=1 OK at^sisi=1 ^SISI: 1,2,0,0,0,0 OK AT^SISO? ^SISO: 0, "" ^SISO: 1, "Socket", 2, 1, 0, 0, "0.0.0.0:0", "0.0.0.0:0" ^SISO: 2, "" </pre>	<p>Client types +++ to return to AT command mode (not visible in example).</p> <p>Remote server has sent data and closed the connection (not visualized in this example). URC indicates that remaining data is available for reading. Check service state of service profile 1.</p> <p>Service profile 1 is in state "Up" (4). 12 bytes received. 3 bytes sent and acknowledged.</p> <p>Check the service state of service profile 1.</p> <p>Service is in state "Up" (4). Socket is assigned. 12 bytes received. 3 bytes sent. Local and remote IP address are assigned.</p> <p>Return to transparent access mode. Service is ready to send or receive data. Client reads remaining data. Then client gets NO CARRIER in AT command mode. Check service state of service profile 1. Service is in service "Down" state (6). 20 bytes received. 3 bytes sent and acknowledged.</p> <p>Check the service state of service profile 1.</p> <p>Service is in state "Down" (6). Socket is assigned. 20 bytes received. 3 bytes sent. Local and remote IP address are assigned.</p> <p>Close the service.</p> <p>Check service state of service profile 1. Service profile 1 is in state "Allocated" (2).</p> <p>Check the service state of service profile 1.</p> <p>Service is in state "Allocated" (2). Socket is not assigned. Local and remote IP address not assigned.</p>
--	--

9.15 Examples of how to Configure and Use Internet Service Profiles

```

^SISO: 3, ""
^SISO: 4, ""
^SISO: 5, ""
^SISO: 6, ""
^SISO: 7, ""
^SISO: 8, ""
^SISO: 9, ""
OK

```

9.15.15 FTP Upload Single File (URC Mode)

Configure the service profile 2 for FTP:

AT^SISS=2, "srvType", "Ftp"	Select service type FTP.
OK	
AT^SISS=2, conId, "1"	Select connection profile 1.
OK	
AT^SISS=2, "address", "ftp:// myname:mypasswd@testnetwork/upload"	Specify FTP address with individual user name and password.
OK	
AT^SISS=2, "cmd", "put"	Select command type upload for single file.
OK	
AT^SISS=2, "files", "newdata.txt"	File "newdata.txt" shall be put on FFTP server.
OK	

Make an FTP connection:

AT^SISO=2	Open the service.
OK	Bearer is established, service is getting started.
^SIS: 2,0,2100,"Ftp open(testnetwork:21)"	"^SIS" URC with <urcInfoId> 2100 (FTP) status information from FTP server.
^SIS: 2,0,2100,"220 FTP server (Version 6.4/OpenBSD/Linux-ftpd-0.17) ready."	
^SIS: 2,0,2100,"FTP Login OK"	
^SIS: 2,0,2100,"put newdata.txt"	
^SISW: 2,1	URC indicates that FTP service is ready for upload.
AT^SISW=2,40	Client requests to send 40 bytes.
^SISW: 2,40,0	The write command response confirms that 40 bytes must be transferred now.
01234567890123456789012345678901234567890	User data is transferred.
OK	
^SISW: 2,1	URC indicates that the FTP service is ready to transfer more data.
AT^SISW=2,40	Client requests to send 40 bytes.
^SISW: 2,40,0	The write command response confirms that 40 bytes must be transferred now.
01234567890123456789012345678901234567890	User data is transferred.
OK	
^SISW: 2,1	URC indicates that the FTP service is ready to transfer more data.
AT^SISW=2,0,1	No more data available. <eodFlag> set. File "newdata.txt" shall be closed on FTP server.
^SISW: 2,0,0	
OK	
^SIS: 2,0,2100,"226 Transfer complete."	
^SISW: 2,2	URC indicates that data transfer finished successfully. Connection to the FTP server closes.

9.15 Examples of how to Configure and Use Internet Service Profiles

AT^SISC=2	Close the FTP service.
OK	

9.15.16 HTTP Download Using TLS

Configure the service profile 4 for HTTPS:

AT^SISS=4, srvType, "Http"	Select service type HTTP.
OK	
AT^SISS=4, conId, "1"	Select connection profile 1.
OK	
AT^SISS=4, address, "https://www.facebook.com"	Specify access to Facebook website (always secured).
OK	
AT^SISS=4, cmd, "get"	Select command type download.
OK	

Opening connection:

AT^SISO=4	Open the service.
OK	
^SISS: 4,0,2200,"Http www.facebook.com:443"	
^SISR: 4,1	URC indicates that the HTTP service is ready to read data.
AT^SISR=4,1000	Read 1000 bytes.
^SISR: 4,1000	
<?xml version="1.0" encoding="utf-8"?> <!DOCTYPE html PUBLIC "-//WAPFORUM//DTD XHTML Mobile 1.0//EN" "http://www.wapforum.org	
OK	
AT^SISR=4,1000	Repeat reading data n times.
^SISR: 4,1000	
....	
^SISR: 4,2	URC indicates that data transfer finished successfully. Connection to the HTTP server closes.
AT^SISC=4	Close the HTTP service.
OK	

9.15.17 HTTP Post

Configure the service profile 6 for HTTP:

AT^SISS=6, srvType, "Http"	Select service type HTTP.
OK	
AT^SISS=6, conId, "1"	Select connection profile 1.
OK	
AT^SISS=6, "address", "http://testnetwork/cgi/first.pl"	Specify URL.
OK	
AT^SISS=6, "user", "myuser"	Specify user name.
OK	
AT^SISS=6, "passwd", "mypasswd"	Specify password.
OK	
AT^SISS=6, cmd, "post"	Select command type download.

9.15 Examples of how to Configure and Use Internet Service Profiles

```

OK
AT^SISS=6,"hcContent", " "      Parameter is ignored.
OK
AT^SISS=6,"hcContLen", "2"     "hcContlen" greater than "0". Data wil be sent from
                                AT command interface.
OK

```

Opening connection:

```

AT^SISO=6                        Open the service.
OK
^SISS: 6,0,2200,"Http pegasus.testnetz.sw5:80"

^SISW: 6,1                      URC indicates that the HTTP service is ready to
                                send data.
AT^SISW=6,30                    Send 30 bytes.
^SISW: 6,30,0

OK
^SISW: 6,1                      URC indicates that the HTTP service is ready to
                                send data.
AT^SISW=6,30                    Send 30 bytes.
^SISW: 6,30,0

OK
^SISW: 6,1                      URC indicates that the HTTP service is ready to
                                send data.
AT^SISW=6,0,1                  Finish input by setting <eodFlag> and start HTTP
                                POST request.
^SISW: 6,0,0

OK
^SISW: 6,2                      URC confirms: all data sent to server.
OK
^SIS: 6,0,2200,"HTTP POST: http://testnetwork/cgi/first.pl"

6,0,2200,"HTTP POST Response: 200"
^SISR: 6,1                      Read response from server.
^SISR: 6,500                    Read 500 bytes.
^SISR: 6,197                    Reading 197 bytes.
Hello ..... Goodbye
OK
^SISR: 6,1                      All data read.
AT^SISC=6                       Close the HTTP service.
OK

```

9.15.18 Ping

This example shows a Ping output. The example uses the Internet connection profile shown in Section [9.15.2](#).

```

AT^SISX=Ping,1,"74.125.39.99",5,5000
^SISX: "Ping",1,1,"74.125.39.99",1696
^SISX: "Ping",1,1,"74.125.39.99",175
^SISX: "Ping",1,1,"74.125.39.99",174
^SISX: "Ping",1,1,"74.125.39.99",174
^SISX: "Ping",1,1,"74.125.39.99",2111
^SISX: "Ping",2,1,5,5,0,0
^SISX: "Ping",3,1,174,2111,865
OK

```

9.15.19 Resolving DNS Host Name to IP Address

This example uses the Internet connection profile shown in Section [9.15.2](#).

```
AT^SISX=HostByName,1,"www.google.de"  
^SISX: "HostByName", "74.125.39.99"  
OK
```

10. Packet Domain Related Commands

The AT commands described in this chapter allow the Customer Application to control packet switched services in networks.

10.1 AT+CGACT PDP context activate or deactivate

The **AT+CGACT** write command is used to activate or deactivate the specified PDP context(s). After the command has completed, the MT remains in V.250 command state. If any PDP context is already in the requested state, the state for that context remains unchanged. If the MT is not PS attached when the activation form of the command is executed, the MT first performs a PS attach and then attempts to activate the specified contexts.

If no **<cid>**s are specified the activation/deactivation form of the command activates/deactivates all defined contexts.

For EPS, if an attempt is made to disconnect the last PDN connection, then the MT responds with ERROR or, if extended error responses are enabled, a +CME ERROR. For EPS, the activation request for an EPS bearer resource will be answered by the network by either an EPS dedicated bearer activation or EPS bearer modification request. The request must be accepted by the MT before the PDP context can be set into established state.

The **AT+CGACT** read command returns the current activation states for all the defined PDP contexts.

The **AT+CGACT** test command is used for requesting information on the supported PDP context activation states.

Syntax

Test Command

AT+CGACT=?

Response(s)

+CGACT: (list of supported **<state>**s)

OK

Read Command

AT+CGACT?

Response(s)

+CGACT: [**<cid>**, **<state>**]

[+CGACT: **<cid>**, **<state>**]

...

OK

Write Command

AT+CGACT=**<state>**[, **<cid>**[, **<cid>**]]

Response(s)

+CGACT: [**<cid>**, **<state>**]

[+CGACT: **<cid>**, **<state>**]

...

OK

ERROR

+CME ERROR: **<err>**

PIN → Last

+ ± -

Reference(s)

3GPP TS 27.007 [43]

Parameter Description

`<state>`^(num)

Indicates the state of PDP context activation.

0	Detached
[1]	Attached

`<cid>`^(num)

Parameter specifies a particular PDP context definition (see [AT+CGDCONT](#) parameter `<cid>`). The parameter is used in other PDP context-related commands.

Notes

- A maximum of 8 contexts can be activated at the same time, no matter on which interface. Note that, depending on the provider, the number of activated contexts may be further restricted. In particular, `<cid>=8` is reserved for emergency PDN and cannot be used.
- On Verizon Wireless network, there are only four PDN defined by default.
 - PDP context 1: `<PDP_type>="IPV4V6"`, `<APN>="VZWIMS"`.
 - PDP context 2: `<PDP_type>="IPV4V6"`, `<APN>="VZWADMIN"`.
 - PDP context 3: `<PDP_type>="IPV4V6"`, `<APN>="VZWINTERNET"`.
 - PDP context 4: `<PDP_type>="IPV4V6"`, `<APN>="VZWAPP"`.Therefore, it is only possible to activate `<cid>` 1 to 4, and it is not possible to activate `<cid>` 5 to 8.
- On AT&T network, there are only three PDN defined by default.
 - PDP context 1: `<PDP_type>="IPV4V6"`, `<APN>="broadband"`.
 - PDP context 2: `<PDP_type>="IPV4V6"`, `<APN>="lwaactivate"`.
 - PDP context 3: `<PDP_type>="IPV4V6"`, `<APN>="custom"`.Therefore, it is only possible to activate `<cid>` 1 to 3, and it is not possible to activate `<cid>` 4 to 8.
- If activation or deactivation of a context fails, then [AT+CEER](#) may provide further informations about the reason.

10.2 AT+CGATT PS attach or detach

The [AT+CGATT](#) write command is used to attach the MT to, or detach the MT from the Packet Domain service. After the command has completed, the MT remains in V.250 command state. If the MT is already in the requested state, the command is ignored and the OK response is returned. Any active PDP contexts will be automatically deactivated when the attachment state changes to detached.

The [AT+CGATT](#) read command returns the current Packet Domain service state.

The [AT+CGATT](#) test command is used for requesting information on the supported Packet Domain service states.

Syntax

Test Command	
AT+CGATT=?	
Response(s)	
+CGATT: (list of supported <state>s)	
OK	
Read Command	
AT+CGATT?	
Response(s)	
+CGATT: <state>	
OK	
Write Command	
AT+CGATT=<state>	
Response(s)	
OK	
ERROR	
+CME ERROR: <err>	
PIN → Last	Reference(s)
+ ± -	3GPP TS 27.007 [43]

Parameter Description

<state> ^(num)	
Indicates the state of Packet Domain attachment. The parameter is global for all interfaces.	
0 ^(P)	Detached
1	Attached

10.3 AT+CGDCONT Define PDP Context

The `AT+CGDCONT` write command specifies the parameters for a PDP context identified by the context identifier `<cid>`. The number of contexts that may be in a defined state at the same time is given by the range indicated in the test command response. A special form of the write command (`AT+CGDCONT=<cid>`) causes the values for context `<cid>` to become undefined.

The `AT+CGDCONT` read command returns the current settings for each defined PDP context.

The `AT+CGDCONT` test command returns supported values as a compound value.

NOTE: According to Verizon Wireless requirements, it is not allowed to change the definition of any PDN. The only exception is the Internet PDN for which the APN can be changed. See `AT+CGACT` for details on Verizon Wireless requirements for dedicated PDP contexts.

Syntax

Test Command

AT+CGDCONT=?

Response(s)

```
+CGDCONT: (range of supported <cid>s), "IP", , , , (list of supported <IPv4AddrAlloc>s), (list of supported <emergency_indication>s), (list of supported <P-CSCF_discovery>s), (list of supported <IM_CN_Signalling_Flag_Ind>s), (list of supported <NSLPI>s)
+CGDCONT: (range of supported <cid>s), "IPV6", , , , (list of supported <emergency_indication>s), (list of supported <P-CSCF_discovery>s), (list of supported <IM_CN_Signalling_Flag_Ind>s), (list of supported <NSLPI>s)
+CGDCONT: (range of supported <cid>s), "IPV4V6", , , , (list of supported <IPv4AddrAlloc>s), (list of supported <emergency_indication>s), (list of supported <P-CSCF_discovery>s), (list of supported <IM_CN_Signalling_Flag_Ind>s), (list of supported <NSLPI>s)
OK
ERROR
+CME ERROR: <err>
```

Read Command

AT+CGDCONT?

Response(s)

```
[+CGDCONT: <cid>, "IP", <APN>, <PDP_addr>, , [, <IPv4AddrAlloc>[, <emergency_indication>[, <P-CSCF_discovery>[, <IM_CN_Signalling_Flag_Ind>[, <NSLPI>]]]]]]
[+CGDCONT: <cid>, "IPV6", <APN>, <PDP_addr>, , [, [, <emergency_indication>[, <P-CSCF_discovery>[, <IM_CN_Signalling_Flag_Ind>[, <NSLPI>]]]]]]
[+CGDCONT: <cid>, "IPV4V6", <APN>, <PDP_addr>, , [, <IPv4AddrAlloc>[, <emergency_indication>[, <P-CSCF_discovery>[, <IM_CN_Signalling_Flag_Ind>[, <NSLPI>]]]]]]
[+CGDCONT: ...]
OK
ERROR
+CME ERROR: <err>
```

Write Command

AT+CGDCONT=<cid>[, <PDP_type>[, <APN>[, <PDP_addr>[, <d_comp>[, <h_comp>[, <IPv4AddrAlloc>[, <emergency_indication>[, <P-CSCF_discovery>[, <IM_CN_Signalling_Flag_Ind>[, <NSLPI>]]]]]]]]]]

Response(s)

```
OK
ERROR
+CME ERROR: <err>
```

PIN → Last

- + -

Reference(s)

3GPP TS 27.007 [43]

Parameter Description

<cid>^{(num)(NV)}

PDP Context Identifier

Parameter specifies a particular PDP context definition. The parameter is used in other PDP context-related commands. The range of the permitted values for <cid> is given by the [AT+CGDCONT](#) test command. <cid>=8 is reserved for emergency PDN and cannot be used.

1...8

<PDP_type>^{(str)(NV)}

Packet Data Protocol type

Specifies the type of the packet data protocol.

"IP"	Internet Protocol (IETF STD 5)
"IPV6"	Internet Protocol, version 6 (see RFC 2460)
"IPV4V6"	Virtual <PDP_type> introduced to handle dual IP stack UE capability. (See 3GPP TS 24.301).

<APN>^{(str)(NV)}

Access Point Name

The logical name that is used to select the GGSN or the external packet data network. Maximum length: 99 characters.

An Access Point Name has to follow the syntax rules specified in 3GPP TS 23.003 in section 9.1.

If the value is null or omitted, then the subscription value will be requested.

<PDP_addr>^{(str)(NV)}

Packet Data Protocol address

Identifies the MT in the address space applicable to PDP (e.g. IP V4 address for PDP type IP). If the value is null or omitted, then a value may be provided by the TE during the PDP startup procedure or, failing that, a dynamic address will be requested. The read command will continue to return the null string even if an address has been allocated during the PDP startup procedure. The allocated address may be read using [AT+CGPADDR](#).

<d_comp>^{(num)(NV)}

Data Compression

Controls the PDP data compression (applicable for Subnetwork Dependent Convergence Protocol (SNDCP) only); see 3GPP TS 44.065 for details.

Note: This parameter is not supported.

<h_comp>^{(num)(NV)}

Header Compression

Controls the PDP header compression; see 3GPP TS 44.065, 3GPP TS 25.323 for details.

Note: This parameter is not supported.

<IPv4AddrAlloc>^(num)

Numeric parameter that controls how the MT/TA requests to get the IPv4 address information.

0	IPv4 Address Allocation through NAS Signalling
1	IPv4 Address Allocated through DHCP

<emergency_indication>^(num)

Numeric parameter used to indicate whether the PDP context is for emergency bearer services or not.

0	PDP context is not for emergency bearer services
1	PDP context is for emergency bearer services

<P-CSCF_discovery>^(num)

Numeric parameter influences how the MT/TA requests to get the P-CSCF address, see 3GPP TS 24.229 [89] annex B and annex L.

0	Preference of P-CSCF address discovery not influenced by +CGDCONT
1	Preference of P-CSCF address discovery through NAS Signalling
2	Preference of P-CSCF address discovery through DHCP

<IM_CN_Signalling_Flag_Ind>^(num)

Numeric parameter used to indicate to the network whether the PDP context is for IM CN subsystem-related signalling only or not.

0	UE indicates that the PDP context is not for IM CN subsystem-related signaling only
1	UE indicates that the PDP context is for IM CN subsystem-related signaling only

<NSLPI>^(num)

Numeric parameter used to indicate the NAS signalling priority requested for this PDP context.

0	Indicates that this PDP context is to be activated with the value for the low priority indicator configured in the MT.
1	Indicates that this PDP context is to be activated with the value for the low priority indicator set to "MS is not configured for NAS signalling low priority".

10.3.1 Attaching to LTE Networks

To allow access to the PS domain, the UE has to perform the attach and context activation procedure. During the context activation procedure, the access point name (APN) specifies the selected packet data network to which the context will be established.

In contrast to 2G (GSM) and 3G (UMTS) where attach and context activation are performed separately, the LTE attach procedure always includes the automatic activation of one context (either using the default bearer or the APN specified for <cid> 1). This means, you have two methods to trigger an LTE attach:

- auto attach procedure if **AT+SCFG** subcommand "GPRS/AutoAttach" is set to "enabled"
- manual attach procedure by using **AT+CGATT**.

Please consider that one of the two methods shall be employed, otherwise the UE never attaches to LTE.

When PS Domain auto attach is enabled and the UE automatically tries to attach to LTE after the SIM PIN1 is unlocked, the application shall ensure that the correct APN is specified *before* the UE attaches to LTE.

LTE attach with no APN

If no APN is specified for <cid> 1 when the UE attaches to LTE, the network will automatically select the so called default APN, specified in the HSS, to establish the initial context (PDN connection/default bearer). Although the LTE attach procedure will be successful in that case, the context for the default APN might be configured with restrictions concerning the transmission of data, depending on the operator settings.

LTE attach with wrong APN

If a wrong APN is configured for <cid> 1 during the LTE attach procedure, e.g. if an application allows the user

to change SIM cards and the APN was not set correctly after the SIM change, the LTE attach will be rejected by the network. As result, the RAT type LTE will be disabled by the UE for a limited amount of time and the UE will only use 2G and 3G RAT types for PS access. The duration while RAT type LTE is disabled depends on network configuration (timer T3402, default 12 minutes).

10.4 AT+CGDSCONT Define Secondary PDP Context

The [AT+CGDSCONT](#) write command specifies PDP context parameter values for a Secondary PDP context identified by the (local) context identification parameter `<cid>`. The number of PDP contexts that may be in a defined state at the same time is given by the range returned by the test command.

A special form of the write command, [AT+CGDSCONT=<cid>](#) causes the values for context number `<cid>` to become undefined. The [AT+CGDSCONT](#) read command returns the current settings for each defined secondary context.

The [AT+CGDSCONT](#) test command returns values supported as a compound value.

Syntax

<p>Test Command</p> <pre>AT+CGDSCONT=?</pre> <p>Response(s)</p> <pre>+CGDSCONT: (range of supported <cid>s), (list of <pcid>s for defined primary contexts), (list of supported <d_comp>s), (list of supported <h_comp>s), (list of supported <IM_CN_Signalling_Flag_Ind>s) OK ERROR +CME ERROR: <err></pre>	
<p>Read Command</p> <pre>AT+CGDSCONT?</pre> <p>Response(s)</p> <pre>+CGDSCONT: [<cid>, <pcid>, <d_comp>, <h_comp>], <IM_CN_Signalling_Flag_Ind> [+CGDSCONT: <cid>, <pcid>, <d_comp>, <h_comp>, <IM_CN_Signalling_Flag_Ind>] [+CGDSCONT: ...] OK ERROR +CME ERROR: <err></pre>	
<p>Write Command</p> <pre>AT+CGDSCONT=<cid>[, <pcid>[, <d_comp>[, <h_comp>, <IM_CN_Signalling_Flag_Ind>]]]</pre> <p>Response(s)</p> <pre>OK ERROR +CME ERROR: <err></pre>	
<p>PIN → Last</p> <p>- + -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

`<cid>`^{(num)(NV)}

PDP Context Identifier

Parameter specifies a particular PDP context definition and is used in other PDP context-related commands.

1...8

`<pcid>`^{(num)(NV)}

Primary PDP Context Identifier

Parameter specifies a particular PDP context definition which has been specified by use of the [AT+CGDSCONT](#) command. The list of permitted values is returned by the test form of the command.

1...8

<d_comp>^{(num)(NV)}

Data Compression

Controls the PDP data compression (applicable for Subnetwork Dependent Convergence Protocol (SNDCP) only) 3GPP TS 44.065

[0] off

<h_comp>^{(num)(NV)}

Header Compression

Controls the PDP header compression 3GPP TS 44.065, 3GPP TS 25.323

[0] off

<IM_CN_Signalling_Flag_Ind>^{(num)(NV)}

IM CN Signalling Flag

Indicates to the network whether the PDP context is for IM CN subsystem-related signalling only or not.

0 PDP context is not for IM CN subsystem-related signalling only.

1 PDP context is for IM CN subsystem-related signalling only.

Note

- According to Verizon Wireless requirements, EMS31-X is forbidden to open any dedicated bearer.

10.5 AT+CGCMOD PDP Context Modify

The [AT+CGCMOD](#) write command can be used to modify the specified PDP context(s) with respect to QoS profiles and TFTs. If no [<cid>](#)s are specified then all active contexts will be modified, provided the used mobile network supports that form of context modification.

If modification of a context fails, then [AT+CEER](#) may provide further informations about the reason.

The [AT+CGCMOD](#) test command returns a list of [<cid>](#)s associated with active contexts which could be modified.

NOTE: According to Verizon Wireless requirements, it is not allowed to change any PDP context with respect to QoS profile and TFTs. Therefore, the [AT+CGCMOD](#) write command is dummy and always returns OK.

Syntax

Test Command	
AT+CGCMOD=?	
Response(s)	
+CGCMOD: (list of <cid> s associated with active contexts)	
OK	
ERROR	
+CME ERROR: <err>	
Write Command	
AT+CGCMOD=[<cid> [, <cid>]]	
Response(s)	
OK	
ERROR	
+CME ERROR: <err>	
PIN → Last	Reference(s)
+ ± -	3GPP TS 27.007 [43]

Parameter Description

[<cid>](#)^(num)

Parameter specifies a particular PDP context definition (see [AT+CGDCONT](#) parameter [<cid>](#)).

10.6 AT+CEREG EPS Network Registration Status

AT+CEREG write command enables presentation of URC "+CEREG: <stat>" when <n>=1 and UE's EPS network registration status in LTE changes, or URC "+CEREG: <stat>[, <tac>][, <ci>][, <Act>]" when <n>=2 and the current network cell in LTE changes.

AT+CEREG read command queries the current URC presentation status and <stat> which shows whether the network has currently indicated the registration of the ME. Location information elements <tac> and <ci> are returned only if <n>=2 and ME is registered to the network.

Syntax

<p>Test Command</p> <p>AT+CEREG=?</p> <p>Response(s)</p> <p>+CEREG: (list of supported <n>s)</p> <p>OK</p>	
<p>Read Command</p> <p>AT+CEREG?</p> <p>Response(s)</p> <p>+CEREG: <n>, <stat>[, <tac>][, <ci>][, <Act>][, , [, [, <ActiveTime>[, <PeriodicTAU>]]]]</p> <p>OK</p>	
<p>Write Command</p> <p>AT+CEREG=<n></p> <p>Response(s)</p> <p>OK</p> <p>ERROR</p> <p>+CME ERROR: <err></p>	
<p>PIN → Last</p> <p>- + -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Unsolicited Result Codes

URC 1

+CEREG: <stat>

Indicates a change in the UE's EPS network registration status.

URC 2

+CEREG: <stat>[, <tac>][, <ci>][, <Act>]

Indicates a change in the UE's EPS network registration status or a change of the network cell including location information.

URC 3

+CEREG: <stat>[, <tac>][, <ci>][, <Act>][, , [, [, <ActiveTime>[, <PeriodicTAU>]]]]

Indicates a change in the UE's EPS network registration status or a change of the network cell including location information, active time or requested TAU.

Parameter Description

<n> ^{(num)(&V)(&W)}	
0 ^{(&F)(D)}	Disable network registration unsolicited result code

- 1 Enable network registration URC "+CEREG: <stat>"
- 2 Enable network registration URC "+CEREG: <stat>[, <tac>][, <ci>][, <AcT>]"
- 4 Enable network registration URC "+CEREG: <stat>[, <tac>][, <ci>][, <AcT>][, , [, [, <ActiveTime>[, <PeriodicTAU>]]]]"

<stat>^(num)

- 0 Not registered, ME is not currently searching an operator to register to.
- 1 Registered, home network.
- 2 Not registered, but ME is currently trying to attach or searching an operator to register to.
- 3 Registration denied.
- 4 Unknown, e.g. out of LTE coverage
- 5 Registered, roaming.

<tac>^(str)

Two byte tracking area code in hexadecimal format (e.g. "00C3" equals 195 in decimal)

<ci>^(str)

Four byte LTE cell ID in hexadecimal format.

<AcT>^(num)

Radio access technology

- 0 GSM (not applicable)
- 2 UTRAN (not applicable)
- 3 GSM w/EGPRS (not applicable)
- 4 UTRAN w/HSDPA (not applicable)
- 5 UTRAN w/HSUPA (not applicable)
- 6 UTRAN w/HSDPA and w/HSUPA (not applicable)
- 7 E-UTRAN

<ActiveTime>^(str)

One byte in an 8 bit format.

Active time value to be allocated to the UE. The Active Time value is coded as one byte (octet 3) of the GPRS Timer 2 information element coded as bit format (e.g. "00100100" equals 4 minutes). For more information on coding and value range, see 3GPP TS 24.008 [37], table 10.5.163).

<PeriodicTAU>^(str)

One byte in an 8 bit format.

Extended periodic TAU value to be allocated to the UE in E-UTRAN. The extended periodic TAU value is coded as one byte (octet 3) of the GPRS Timer 3 information element coded as bit format (e.g. "01000111" equals 70 hours). For more information on coding and value range, see 3GPP TS 24.008 [37], table 10.5.163a).

10.7 AT+CGEREP Packet Domain Event Reporting

The `AT+CGEREP` write command enables or disables sending of unsolicited result codes, +CGEV URCs from MT to TE in the case of certain events occurring in the Packet Domain MT or the network.

Parameter `<mode>` controls the processing of unsolicited result codes specified within this command. `<bfr>` controls the effect on buffered codes when `<mode>` 1 or 2 is entered. If a setting is not supported by the MT, ERROR or +CME ERROR: is returned.

The `AT+CGEREP` read command returns the current `<mode>` and buffer settings.

The `AT+CGEREP` test command returns the modes and buffer settings supported by the MT as compound values.

Syntax

<p>Test Command</p> <pre>AT+CGEREP=?</pre> <p>Response(s)</p> <pre>+CGEREP: (list of supported <mode>s), (list of supported <bfr>s) OK</pre>	
<p>Read Command</p> <pre>AT+CGEREP?</pre> <p>Response(s)</p> <pre>+CGEREP: <mode>, <bfr> OK</pre>	
<p>Write Command</p> <pre>AT+CGEREP=[<mode>[, <bfr>]]</pre> <p>Response(s)</p> <pre>OK ERROR +CME ERROR: <err></pre>	
<p>PIN → Last</p> <pre>+ + -</pre>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Unsolicited Result Codes

URC 1

```
+CGEV: NW DEACT <pcid>, <cid>, <event-type>
```

The network has deactivated a context. The `<cid>` for this context is provided to the TE in addition to the associated primary `<pcid>`. The formats of the parameters `<pcid>` and `<cid>` are found in commands `AT+CGDCONT` and `AT+CGDSCONT`.

URC 2

```
+CGEV: ME DEACT <pcid>, <cid>, <event-type>
```

The network has responded to an ME initiated context deactivation request. The associated `<cid>` is provided to the TE in addition to the associated primary `<pcid>`. The format of the parameters `<pcid>` and `<cid>` are found in command `AT+CGDSCONT`.

URC 3

```
+CGEV: NW DETACH
```

The network has forced a PS detach.

URC 4

+CGEV: ME DETACH

The mobile equipment has forced a PS detach.

URC 5

+CGEV: PDN DEACT <cid>

A context deactivation has been forced. The <cid> that was used to activate the context is provided if known to the MT. The context represents a PDN connection in LTE.

URC 6

+CGEV: ME ACT <pcid>, <cid>, <event-type>

The network has responded to an ME initiated context activation. The <cid> for this context is provided to the TE in addition to the associated primary <pcid>.

URC 7

+CGEV: NW MODIFY <cid>, <change-reason>, <event-type>

The network has modified a context. The associated <cid> is provided to the TE in addition to the <change-reason> and <event-type>. The format of the parameter <cid> is found in command AT+CGDCONT or AT+CGDSCONT.

URC 8

+CGEV: NW PDN ACT <cid>

The network has activated a context. The context represents a Primary PDP context in. The <cid> for this context is provided to the TE. The format of the parameter <cid> is found in command AT+CGDCONT.

URC 9

+CGEV: NW PDN DEACT <cid>

The network has deactivated a context. The context represents a PDN connection in LTE or a Primary PDP context in. The associated <cid> for this context is provided to the TE. The format of the parameter <cid> is found in command AT+CGDCONT.

URC 10

+CGEV: ME PDN DEACT <cid>

The mobile termination has deactivated a context. The context represents a PDN connection in LTE or a Primary PDP context in. The <cid> for this context is provided to the TE. The format of the parameter <cid> is found in command AT+CGDCONT.

URC 11

+CGEV: NW ACT <pcid>, <cid>, <event-type>

The network has activated a context. The <cid> for this context is provided to the TE in addition to the associated primary <pcid>. The format of the parameters <pcid> and <cid> are found in command AT+CGDSCONT.

URC 12

+CGEV: ME MODIFY <cid>, <change-reason>, <event-type>

The mobile termination has modified a context. The associated <cid> is provided to the TE in addition to the <change-reason> and <event-type>.

URC 13

+CGEV: ME PDN ACT <cid>[, <reason>]

The UE has activated a context. The context represents a Primary PDP context in LTE. The <cid> for this context is provided to the TE. This event is sent either in result of explicit context activation request (AT+CGACT), or in result of implicit context activation request associated to attach request (AT+CGATT=1).

Parameter Description

<mode>^(num)

0 ^(P)	Buffer unsolicited result codes in the MT. Currently 3 +CGEV URCs can be buffered. If MT result code buffer is full, the oldest ones will be discarded. No codes are forwarded to the TE.
1	Discard unsolicited result codes when MT TE link is reserved (e.g. in on line data mode); otherwise forward them directly to the TE.
2	Buffer unsolicited result codes in the MT when MT TE link is reserved (e.g. in on line data mode) and flush them to the TE when MT TE link becomes available; otherwise forward them directly to the TE. Currently 3 +CGEV URCs can be buffered. If MT result code buffer is full, the oldest URCs will be discarded.

<bfr>^(num)

0 ^(P)	MT buffer of unsolicited result codes defined within this command is cleared when <mode> 1 or 2 is entered
1	MT buffer of unsolicited result codes defined within this command is flushed to the TE when <mode> 1 or 2 is entered (OK response will be given before flushing the codes). Buffer is empty afterwards.

<reason>^(num)

Indicates the reason why the context activation request for PDP type IPv4v6 was not granted. This parameter is only included if the requested PDP type associated with <cid> is IPv4v6, and the PDP type assigned by the network for <cid> is either IPv4 or IPv6.

0	IPV4 only allowed
1	IPV6 only allowed
2	Single address bearers only allowed
3	Single address bearers only allowed and MT initiated context activation for a second address type bearer was not successful.

<change-reason>^(num)

Integer type parameter indicates what kind of change occurred.

0	Not available
1	TFT only changed
2	Qos only changed
3	Both TFT and QoS changed

<event-type>^(num)

Integer type parameter indicates whether this is an informational event or whether the TE has to acknowledge it.

0	Informational event
---	---------------------

10.8 AT+CGPADDR Show PDP Address

The [AT+CGPADDR](#) exec command returns a list of PDP addresses for all defined contexts.

The [AT+CGPADDR](#) write command returns a list of PDP addresses for the specified context identifiers. If a context is not defined, then no output line is generated for it. If no `<cid>` is specified, the addresses for all defined contexts are returned.

The [AT+CGPADDR](#) test command returns a list of defined `<cid>`s.

Syntax

<p>Test Command</p> <pre>AT+CGPADDR=?</pre> <p>Response(s)</p> <pre>[+CGPADDR: (list of defined <cid>s)] OK</pre>	
<p>Exec Command</p> <pre>AT+CGPADDR</pre> <p>Response(s)</p> <pre>[+CGPADDR: <cid>[, <PDP_address_1>[, <PDP_address_2>]]] [+CGPADDR: ...] OK ERROR +CME ERROR: <err></pre>	
<p>Write Command</p> <pre>AT+CGPADDR=[<cid>[,<cid>[, ...]]]</pre> <p>Response(s)</p> <pre>[+CGPADDR: <cid>[, <PDP_address_1>[, <PDP_address_2>]]] [+CGPADDR: ...] OK ERROR +CME ERROR: <err></pre>	
<p>PIN → Last</p> <pre>+ + -</pre>	<p>Reference(s)</p> <p>3GPP 27.007</p>

Parameter Description

`<cid>`^(num)

Parameter specifies a particular PDP context definition (see [AT+CGDCONT](#) parameter `<cid>`).

`<PDP_address_1>`^(str)

A string that identifies the MT in the address space applicable to the PDP. The address may be static or dynamic. If address is not available parameter is omitted.

Parameter specifies the assigned address as a dot-separated numeric (0-255) parameter of the form "a1.a2.a3.a4" for IPv4 and "a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16" for IPv6.

The settings of [AT+CGPIAF](#) can influence the format of the IPv6 address.

<PDP_address_2>^(str)

A string that identifies the MT in the address space applicable to the PDP. The address may be static or dynamic. Parameter is displayed only when both IPv4 and IPv6 addresses are assigned, with <PDP_address_1> containing the IPv4 address and this parameter the IPv6 address.

Parameter specifies the assigned IPv6 address as a dot-separated numeric (0-255) parameter of the form "a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16".

The settings of [AT+CGPIAF](#) can influence the format of this parameter.

10.9 AT+CGPIAF Select Printing IP address format

AT+CGPIAF specifies the format to print IPV6 address parameters of other AT commands. See RFC 4291 for details of the IPv6 address format. The +CGPIAF parameters `<format>`, `<subnet>`, `<lzeros>` and `<czeros>` affect the following commands and parameters:

- in **AT+CGTFT** and **AT+CGTFTRDP**, the `<rem_addr_subnet_mask>`;
- in **AT+CGDCONT**, the `<PDP_addr>`;
- in **AT+CGPADDR**, the `<PDP_address_1>` and `<PDP_address_2>`;
- in **AT+CGCONTRDP**, the `<LocalAddr and SubNetMask>`, `<DNS_prim_addr>` and `<DNS_sec_addr>`.

The read command returns the current command parameter settings.
The test command returns supported parameter values.

Syntax

<p>Test Command</p> <pre>AT+CGPIAF=?</pre> <p>Response(s)</p> <pre>+CGPIAF: (list of supported <format>s), (list of supported <subnet>s), (list of supported <lzeros>s), (list of supported <czeros>s) OK</pre>	
<p>Read Command</p> <pre>AT+CGPIAF?</pre> <p>Response(s)</p> <pre>+CGPIAF: <format>, <subnet>, <lzeros>, <czeros> OK</pre>	
<p>Write Command</p> <pre>AT+CGPIAF=[<format>[, <subnet>[, <lzeros>[, <czeros>]]]]</pre> <p>Response(s)</p> <pre>OK ERROR +CME ERROR: <err></pre>	
<p>PIN → Last</p> <pre>+ + -</pre>	<p>Reference(s)</p> <pre>3GPP 27.007</pre>

Parameter Description

<code><format></code> ^(num)	
A numeric parameter which decides the IPv6 address format. Relevant for all AT command parameters that can hold an IPv6 address.	
0 ^(P)	Use IPv4-like dot-notation. IP address, and subnetwork mask if applicable, are dot-separated, e.g. "32.1.13.184.0.0.205.48.0.0.0.0.0.0.0.0.255.255.255.255.255.255.240.0.0.0.0.0.0" for parameters holding address and subnet mask and "32.1.13.184.0.0.205.48.0.0.0.0.0.0.0" for other IP address parameters.

1 Use IPv6-like colon-notation. IP address, and subnetwork mask if applicable and when given explicitly, are separated by a space, e.g.
"2001:0DB8:0000:CD30:0000:0000:0000:0000
FFFF:FFFF:FFFF:FFF0:0000:0000:0000:0000"
for parameters holding address and subnet mask and
"2001:0DB8:0000:CD30:0000:0000:0000:0000"
for other IP address parameters.

<subnet>^(num)

A numeric parameter which decides the subnet-notation for parameters that hold remote address and subnet mask, e.g. <rem_addr_subnet_mask>. Setting does not apply if <format>= 0.

0^(P) Both IP Address and subnet mask are stated explicitly, separated by a space, e.g.
"2001:0DB8:0000:CD30:0000:0000:0000:0000
FFFF:FFFF:FFFF:FFF0:0000:0000:0000:0000".
1 The printout format is applying / (forward slash) subnet-prefix Classless Inter-Domain Routing (CIDR) notation, e.g.
":0DB8:0000:CD30:0000:0000:0000:0000/60"

<lzeros>^(num)

A numeric parameter which decides whether leading zeros are omitted or not. Setting does not apply if <format>= 0.

0^(P) Leading zeros are omitted, e.g. "2001:DB8:0:CD30:0:0:0:0".
1 Leading zeros are included, e.g.
"2001:0DB8:0000:CD30:0000:0000:0000:0000".

<czeros>^(num)

A numeric parameter which decides whether 1-n instances of 16-bit zero-values are replaced by only '::'. This applies only once. Setting does not apply if <format>= 0.

0^(P) No zero compression, e.g. "2001:DB8:0:CD30:0:0:0:0".
1 Use zero compression, e.g. "2001:DB8:0:CD30::".

10.10 AT+CGEQOSRDP EPS Quality of Service Read Dynamic Parameters

The write command returns Quality of Service parameters of the active PDP context associated to the provided context identifier `<cid>`.

If the parameter `<cid>` is omitted, the Quality of Service parameters for all secondary and non-secondary active PDP contexts are returned.

The test command returns a list of `<cid>`s associated with active PDP contexts. Parameters of both network and MT/TA initiated PDP contexts will be returned.

Syntax

<p>Test Command</p> <pre>AT+CGEQOSRDP=?</pre> <p>Response(s)</p> <pre>+CGEQOSRDP: (list of <cid>s associated with active contexts) OK</pre>	
<p>Exec Command</p> <pre>AT+CGEQOSRDP</pre> <p>Response(s)</p> <pre>[+CGEQOSRDP: <cid>, <QCI>, [<DL_GBR>, <UL_GBR>], [<DL_MBR>, <UL_MBR>][, <DL_AMBR>, <UL_AMBR>]] [+CGEQOSRDP: ...] OK ERROR +CME ERROR: <err></pre>	
<p>Write Command</p> <pre>AT+CGEQOSRDP=<cid></pre> <p>Response(s)</p> <pre>[+CGEQOSRDP: <cid>, <QCI>, [<DL_GBR>, <UL_GBR>], [<DL_MBR>, <UL_MBR>][, <DL_AMBR>, <UL_AMBR>]] [+CGEQOSRDP: ...] OK ERROR +CME ERROR: <err></pre>	
<p>PIN → Last</p> <pre>+ - -</pre>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

<code><cid></code> ^(str)	Specifies a particular EPS Traffic Flows definition in EPS and a PDP Context definition in UMTS/GPRS (see AT+CGDCONT and AT+CGDSCONT).
<code><QCI></code> ^(num)	Specifies a class of EPS QoS.
0	QCI is selected by network
1...4	Value range for guaranteed bit rate Traffic Flows
5...9	Value range for non-guaranteed bit rate Traffic Flows
128...254	Value range for for Operator-specific QCIs

<DL_GBR>^(num)

Indicates DL GBR in case of GBR QCI. The value is in kbit/s. This parameter is omitted for a non-GBR QCI.

<UL_GBR>^(num)

Indicates UL GBR in case of GBR QCI. The value is in kbit/s. This parameter is omitted for a non-GBR QCI.

<DL_MBR>^(num)

Indicates DL MBR in case of GBR QCI. The value is in kbit/s. This parameter is omitted for a non-GBR QCI.

<UL_MBR>^(num)

Indicates UL MBR in case of GBR QCI. The value is in kbit/s. This parameter is omitted for a non-GBR QCI.

<DL_AMBR>^(num)

Indicates DL APN aggregate MBR. The value is in kbit/s.

<UL_AMBR>^(num)

Indicates UL APN aggregate MBR. The value is in kbit/s.

Note

- If multiple lines in a response belong to the same PDN connection they contain the same <DL_AMBR> <UL_AMBR> values.

10.11 AT+CGCONTRDP PDP context read dynamic parameters

The [AT+CGCONTRDP](#) write command returns dynamic parameters for the active non-secondary PDP context specified with `<cid>`.

The [AT+CGCONTRDP](#) execute command returns dynamic parameters for all active non-secondary PDP contexts. For contexts of `<PDP_type>` "IPV4V6" the response of exec and write command will have two lines per `<cid>`. First line describes the IPV4 dynamic parameters followed by another line with the IPV6 dynamic parameters.

Syntax

<p>Test Command</p> <pre>AT+CGCONTRDP=?</pre> <p>Response(s)</p> <pre>+CGCONTRDP: (list of supported <cid>s) associated with active contexts OK</pre>	
<p>Exec Command</p> <pre>AT+CGCONTRDP</pre> <p>Response(s)</p> <pre>+CGCONTRDP: <cid>, <Bearer_ID>, <APN>[, <LocalAddr and SubNetMask>[, <GwAddr>[, <DNS_prim_addr>[, <DNS_sec_addr>[, <P_CSCF_prim_addr>[, <P_CSCF_sec_addr>[, <IM_CN_Signalling_Flag>]]]]]]] +CGCONTRDP: <cid>, <Bearer_ID>, <APN>[, <LocalAddr and SubNetMask>[, <GwAddr>[, <DNS_prim_addr>[, <DNS_sec_addr>[, <P_CSCF_prim_addr>[, <P_CSCF_sec_addr>[, <IM_CN_Signalling_Flag>]]]]]]] [+CGCONTRDP: ...] OK ERROR +CME ERROR: <err></pre>	
<p>Write Command</p> <pre>AT+CGCONTRDP=<cid></pre> <p>Response(s)</p> <pre>+CGCONTRDP: <cid>, <Bearer_ID>, <APN>[, <LocalAddr and SubNetMask>[, <GwAddr>[, <DNS_prim_addr>[, <DNS_sec_addr>[, <P_CSCF_prim_addr>[, <P_CSCF_sec_addr>[, <IM_CN_Signalling_Flag>]]]]]]] OK ERROR +CME ERROR: <err></pre>	
<p>PIN  Last</p> <p>+ - -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

- `<cid>`^(num)
 Specifies a particular non-secondary PDP context definition. The parameter is local to the TE-MT interface and is used in other PDP context-related commands. See [AT+CGDCONT](#).
- `<Bearer_ID>`^(num)
 Identifies the bearer, EPS Bearer in EPS and NSAPI in UMTS/GPRS.

<APN>^(str)

Access Point Name

Logical name used to select the GGSN or the external packet data network.

<LocalAddr and SubNetMask>^(str)

Shows the IP address and subnet mask of the UE in the format specified by [AT+CGPIAF](#).

<GwAddr>^(str)

Shows the Gateway Address of the UE in the format specified by [AT+CGPIAF](#).

<DNS_prim_addr>^(str)

Shows the IP address of the primary DNS server.

The settings of [AT+CGPIAF](#) influences the format of this parameter.

<DNS_sec_addr>^(str)

Shows the IP address of the secondary DNS server.

The settings of [AT+CGPIAF](#) influences the format of this parameter.

<P_CSCF_prim_addr>^(str)

Shows the IP address of the primary P-CSCF server.

The settings of [AT+CGPIAF](#) influences the format of this parameter.

<P_CSCF_sec_addr>^(str)

Shows the IP address of the secondary P-CSCF server.

The settings of [AT+CGPIAF](#) influences the format of this parameter.

<IM_CN_Signalling_Flag>^(num)

Shows whether the PDP context is for IM CN subsystem-related signalling only or not.

10.12 AT+CGSCONTRDP Secondary PDP Context Read Dynamic Parameters

The write command returns `<p_cid>` and `<bearer_ID>` and `<IM_CN_Signalling_Flag>` for an active secondary PDP context with the context identifier `<cid>`.

If the parameter `<cid>` is omitted, the `<cid>`, `<p_cid>` and `<bearer_ID>` and `<IM_CN_Signalling_Flag>` are returned for all active secondary PDP contexts. In EPS, the Traffic Flow parameters are returned.

The test command returns a list of `<cid>`s associated with active secondary PDP contexts.

Syntax

<p>Test Command</p> <pre>AT+CGSCONTRDP=?</pre> <p>Response(s)</p> <pre>+CGSCONTRDP: (list of <cid>s associated with active contexts) OK</pre>	
<p>Write Command</p> <pre>AT+CGSCONTRDP=[<cid>]</pre> <p>Response(s)</p> <pre>[+CGSCONTRDP: <cid>, <p_cid>, <bearer_ID>[, <IM_CN_Signalling_Flag>]] [+CGSCONTRDP: <cid>, <p_cid>, <bearer_ID>[, <IM_CN_Signalling_Flag>]] [+CGSCONTRDP: ...] OK ERROR +CME ERROR: <err></pre>	
<p>PIN → Last</p> <pre>+ - -</pre>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

`<cid>`^(num)

Specifies a particular active secondary PDP context or Traffic Flows definition. The parameter is used in other PDP context-related commands (see the [AT+CGDCONT](#) and [AT+CGDSCONT](#)).

`<p_cid>`^(num)

Specifies a particular PDP context definition or default EPS context Identifier which has been specified by use of the [AT+CGDSCONT](#) command (see the [AT+CGDSCONT](#) command).

`<bearer_ID>`^(num)

Identifies the bearer, EPS Bearer in EPS and NSAPI in UMTS/GPRS.

`<IM_CN_Signalling_Flag>`^(num)

IM CN Signalling Flag

Shows whether the PDP context is for IM CN subsystem-related signalling only or not.

- | | |
|---|---|
| 0 | PDP context is not for IM CN subsystem-related signalling only. |
| 1 | PDP context is for IM CN subsystem-related signalling only. |

10.13 AT+CGTFT Traffic Flow Template

The [AT+CGTFT](#) test command returns values supported as a compound value. If the MT supports several PDP types, the parameter value ranges for each PDP type are returned on a separate line. TFTs shall be used for PDP-type IP and PPP only. For PDP-type PPP a TFT is applicable only when IP traffic is carried over PPP. If PPP carries header-compressed IP packets, then a TFT cannot be used.

The write command allows the TE to specify a Packet Filter - PF for a Traffic Flow Template - TFT that is used in the GGSN for routing of down-link packets onto different QoS flows towards the TE. The concept is further described in the 3GPP TS 23.060. A TFT consists of from one and up to 16 Packet Filters, each identified by a unique [<filterid>](#). A Packet Filter also has an [<precedence>](#) that is unique within all TFTs associated with all PDP contexts that are associated with the same PDP address.

The [AT+CGTFT](#) write command specifies a Packet Filter that is to be added to the TFT stored in the MT and used for the context identified by the context identification parameter, [<cid>](#). The specified TFT will be stored in the GGSN only at activation or MS-initiated modification of the related context. Since this is the same parameter that is used in the [AT+CGDCONT](#) and [AT+CGDSCONT](#) commands, the [AT+CGTFT](#) command is effectively an extension to these commands. The Packet Filters consist of a number of parameters, each of which may be set to a separate value.

A special form of the write command, [AT+CGTFT=<cid>](#) causes all of the Packet Filters in the TFT for context number [<cid>](#) to become undefined. At any time there may exist only one PDP context with no associated TFT amongst all PDP contexts associated to one PDP address. At an attempt to delete a TFT, which would violate this rule, an ERROR or +CME ERROR response is returned. Extended error responses are enabled by the [AT+CMEE](#) command.

The [AT+CGTFT](#) read command returns the current settings for all Packet Filters for each defined context.

Syntax

Test Command

AT+CGTFT=?

Response(s)

+CGTFT: [<pdpdtype>](#), (list of supported [<filterid>](#)s), (list of supported [<precedence>](#)s), (list of supported [<rem_addr_subnet_mask>](#)s), (list of supported [<protocolno>](#)s), (list of supported [<destportrange>](#)s), (list of supported [<srcportrange>](#)s), (list of supported [<ipsecidx>](#)s), (list of supported [<tos>](#)s), (list of supported [<flowlabel>](#)s), (list of supported [<direction>](#)s)

OK

ERROR

+CME ERROR: [<err>](#)

Read Command

AT+CGTFT?

Response(s)

[+CGTFT: [<cid>](#), [<filterid>](#), [<precedence>](#), [<rem_addr_subnet_mask>](#), [<protocolno>](#), [<destportrange>](#), [<srcportrange>](#), [<ipsecidx>](#), [<tos>](#), [<flowlabel>](#), [<direction>](#)]

[+CGTFT: ...]

OK

ERROR

+CME ERROR: [<err>](#)

Write Command

AT+CGTFT=[<cid>](#)[, [<filterid>](#), [<precedence>](#)[, [<rem_addr_subnet_mask>](#)[, [<protocolno>](#)[, [<destportrange>](#)[, [<srcportrange>](#)[, [<ipsecidx>](#)[, [<tos>](#)[, [<flowlabel>](#)[, [<direction>](#)]]]]]]]]]

Response(s)

OK

ERROR

+CME ERROR: [<err>](#)

PIN → Last

- + -

Reference(s)

3GPP TS 27.007 [43]

Parameter Description

`<cid>`^(num)

Parameter specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is used in other PDP context-related commands.

1...8

`<filterid>`^(num)

Packet filter identifier

Parameter specifies a packet filter identifier.

1...16

`<precedence>`^(num)

Evaluation Precedence Index

Parameter specifies a evaluation precedence index.

0...255

`<rem_addr_subnet_mask>`^(str)

Remote address and subnet mask

The string is given as dot-separated numeric (0-255) parameters on the form:

for IPv4: "a1.a2.a3.a4.m1.m2.m3.m4"

for IPv6:

"a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16.m1.m2.m3.m4.m5.m6.m7.m8.m9.m10.m11.m12.m13.m14.m15.m16".

The settings of [AT+CGPIAF](#) can influence the format of this parameter.

`<protocolno>`^(num)

Protocol number

Parameter specifies the protocol number (ipv4) / next header (ipv6).

0...255

`<destportrange>`^(str)

Destination port range

Parameter specifies the destination port range.

"0.0"..."65535.65535"

`<srcportrange>`^(str)

Source port range

Parameter specifies the source port range.

"0.0"..."65535.65535"

`<ipsecidx>`^(num)

IPsec security parameter index

Parameter specifies the IPsec security parameter index (spi).

00000000...FFFFFFFF

<tos>^(str)

Type of service and mask/traffic class

Parameter specifies the type of service (tos)(ipv4) and mask/traffic class (ipv6).

"0.0"... "255.255"

<flowlabel>^(num)

Flow label

Parameter specifies the flow label (ipv6).

00000...FFFFFF

<direction>^(num)

Parameter specifies the transmission direction in which the packet filter shall be applied.

0	Pre-Release 7 TFT filter (see 3GPP TS 24.008 [8], table 10.5.162)
1	Uplink
2	Downlink
3	Bidirectional (Up and Downlink) (default if omitted)

<pdptype>^(str)

PDP type

Parameter specifies the PDP type.

"IP"	Internet Protocol (IETF STD 5)
"IPV6"	Internet Protocol, version 6 (see RFC 2460)
"IPV4V6"	Virtual <pdptype> introduced to handle dual IP stack UE capability. (See 3GPP TS 24.301)

Note

- Some of the above listed attributes may coexist in a Packet Filter while others mutually exclude each other, the possible combinations are shown in 3GPP TS 23.060.

10.14 AT+CGTFTRDP Traffic Flow Template Read Dynamic Parameters

The write command returns the relevant information about Traffic Flow Template for an active secondary or non-secondary PDP context specified by `<cid>` together with the additional network assigned values when established by the network.

The exec command returns the relevant information about the Traffic Flow Templates for all active secondary and non-secondary PDP contexts.

Parameters of both network and MT/TA initiated PDP contexts will be returned.

The test command returns a list of `<cid>`s associated with active secondary and non-secondary contexts.

Syntax

<p>Test Command</p> <pre>AT+CGTFTRDP=?</pre> <p>Response(s)</p> <pre>+CGTFTRDP: (list of <cid>s associated with active contexts) OK</pre>	
<p>Exec Command</p> <pre>AT+CGTFTRDP</pre> <p>Response(s)</p> <pre>[+CGTFTRDP: <cid>, <filterid>, <precedence>, <rem_addr_subnet_mask>, <protocolno>, <local-portrange>, <remote-portrange>, <ipsecidx>, <tos>, <flowlabel>, <direction>, <NW-filterID>] [+CGTFTRDP: ...] OK ERROR +CME ERROR: <err></pre>	
<p>Write Command</p> <pre>AT+CGTFTRDP=<cid></pre> <p>Response(s)</p> <pre>[+CGTFTRDP: <cid>, <filterid>, <precedence>, <rem_addr_subnet_mask>, <protocolno>, <local-portrange>, <remote-portrange>, <ipsecidx>, <tos>, <flowlabel>, <direction>, <NW-filterID>] [+CGTFTRDP: ...] OK ERROR +CME ERROR: <err></pre>	
<p>PIN → Last</p> <pre>+ - -</pre>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

`<cid>`^(num)

Specifies a particular secondary or non secondary PDP context definition or Traffic Flows definition (see [AT+CGDCONT](#) and [AT+CGDSCONT](#) commands). (see notes for network initiated PDP context)

1...8

<filterid>^(num)

Packet filter identifier

Specifies a packet filter identifier. (see notes for network initiated PDP context)

1...16

<precedence>^(num)

Evaluation Precedence Index

Specifies a evaluation precedence index.

0...255

<rem_addr_subnet_mask>^(str)

Remote address and subnet mask

The string is given as dot-separated numeric (0-255) parameters on the form:

"a1.a2.a3.a4.m1.m2.m3.m4" for IPv4 or

"a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16.m1.m2.m3.m4.m5.m6.m7.m8.m9.m10.m11.m12.m13.m14.m15.m16" for IPv6.

The settings of [AT+CGPIAF](#) can influence the format of this parameter.

<protocolno>^(num)

Protocol number

Specifies the protocol number (ipv4) / next header (ipv6).

0...255

<local-portrange>^(str)

Local port range

The string is given as dot-separated numeric (0-65535) parameters on the form "f.t".

<remote-portrange>^(str)

Remote port range

The string is given as dot-separated numeric (0-65535) parameters on the form "f.t".

<ipsecidx>^(num)

IPsec security parameter index

Specifies the IPsec security parameter index (spi) in hexadecimal format.

00000000...FFFFFFFF

<tos>^(str)

Type of service and mask/traffic class

Specifies the type of service (tos)(ipv4) and mask/traffic class (ipv6) and mask. The string is given as dot-separated numeric (0-255) parameters on the form "f.t".

<flowlabel>^(num)

Flow label

Parameter specifies the flow label in hexadecimal format (valid for ipv6 only).

00000...FFFFFF

<direction>^(num)

Specifies the transmission direction in which the Packet Filter will be applied.

0	Pre Release 7 TFT Filter
1	Uplink
2	Downlink
3	Bidirectional (Used for Uplink and Downlink)

<NW-filterID>^(num)

NW Packet filter identifier

Parameter specifies a packet filter identifier. In EPS the value is assigned by the network when established.

1...16

Notes

- Some of the listed attributes can coexist in a Packet Filter while others mutually exclude each other. The possible combinations are shown in 3GPP TS 23.060 [25].
- <cid> values for network initiated PDP contexts will have values outside the ranges indicated.
- <filterid> values for network initiated PDP contexts can have values outside the ranges indicated.

10.15 AT+CGAUTH Define PDP Context Authentication Parameters

The [AT+CGAUTH](#) write command specifies the type of authentication protocol for the specified PDP context. The [AT+CGAUTH](#) read command returns the current settings for each defined PDP context. If no PDP context is defined the read command returns only OK result code.

Syntax

<p>Test Command</p> <pre>AT+CGAUTH=?</pre> <p>Response(s)</p> <pre>+CGAUTH: (range of supported<cid>s), (list of supported <auth_prot>s), (max. string length of <userId>s), (max. string length of <password>s) OK ERROR +CME ERROR: <err></pre>	
<p>Read Command</p> <pre>AT+CGAUTH?</pre> <p>Response(s)</p> <pre>[+CGAUTH: <cid>, <auth_prot>, <userId>, <password>] [+CGAUTH: <cid>, <auth_prot>, <userId>, <password>] [+CGAUTH: ...] OK ERROR +CME ERROR: <err></pre>	
<p>Write Command</p> <pre>AT+CGAUTH=<cid>[, <auth_prot>[, <userId>, <password>]]</pre> <p>Response(s)</p> <pre>OK ERROR +CME ERROR: <err></pre>	
<p>PIN → Last</p> <p>- + -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

<cid>^{(num)(NV)}

Specifies a particular PDP context definition (see [AT+CGDCONT](#) parameter **<cid>**).

1...8

<auth_prot>^{(num)(NV)}

Types of authentication to be used for specified PDP context.

[0]	none Used to indicate that no authentication protocol is used for this PDP context. Username and password are removed if previously specified.
1	PAP
2	CHAP

<userId>^{(str)(NV)}

Specifies the user name used for authentication.

<password>^{(str)(NV)}

Specifies the password used for authentication.

10.16 AT+CGDATA Enter data state

The [AT+CGDATA](#) write command causes the MT to perform all actions which are necessary to establish communication between the TE and the network using one or more PDP types. This may include performing a PS attach and one or more PDP context activations. Commands following the [AT+CGDATA](#) command in the AT command line will not be processed by the MT.

If no [<cid>](#) is given or if there is no matching context definition, the MT will attempt to activate the context with PDP type IP and all other context parameters set to their default values (see [AT+CGDCONT](#)).

If the [<L2P>](#) parameter is omitted, the layer 2 protocol is unspecified and PPP will be used.

If the write command is successful, the MT issues the intermediate result code CONNECT and enters V.250 online data state.

After data transfer is complete, and the layer 2 protocol termination procedure has completed successfully, the command state is reentered and the MT returns the final result code OK.

If the [<L2P>](#) parameter value is unacceptable to the MT, the MT returns ERROR or +CME ERROR.

In the event of erroneous termination or a failure to start up, the command state is reentered and the MT returns NO CARRIER, or if enabled +CME ERROR.

The [AT+CGDATA](#) test command is used for requesting information on the supported layer 2 protocols to be used between the TE and MT.

Syntax

Test Command AT+CGDATA=? Response(s) +CGDATA: (list of supported <L2P> s) OK	
Exec Command AT+CGDATA Response(s) CONNECT NO CARRIER ERROR +CME ERROR: <err>	
Write Command AT+CGDATA= <L2P> [, <cid> [, <cid>]] Response(s) CONNECT NO CARRIER ERROR +CME ERROR: <err>	
PIN  Last + ± +	Reference(s) 3GPP TS 27.007 [43]

Parameter Description

<L2P> ^(str)	
Layer 2 protocol to be used between the TE and MT.	
["PPP"]	Layer 2 protocol PPP

<cid>^(num)

Parameter specifies a particular PDP context definition (see [AT+CGDCONT](#) parameter <cid>). The parameter is used in other PDP context-related commands.

10.16.1 Automatic deactivation of PDP context during dial-up PPP

When using the [AT+CGDATA](#) write command or [ATD*99#](#) the MT issues the intermediate result code CONNECT and enters V.250ter online data state. In V.250 online data state, first some LCP protocol exchange between MT and TE is performed to set up the PPP link. After successfully establishing the PPP link, the MT performs the PDP context activation procedure if the context is not already activated. As a result, the MT is in a "PDP context activated" state within the PLMN, the PPP link is established on the mobile side and the mobile is ready for IP data transfer.

If the TE wants to close the LCP link the MT may perform an LCP termination request procedure on PPP level. After this LCP termination procedure the MT deactivates the PDP context automatically and the MT returns to V.250 command mode and issues the final result code NO CARRIER.

During the implicit PDP context deactivation procedure after LCP termination the TE may change into V.250 command state (e.g. by using [+++](#) or by toggling DTR if [AT&D](#) is set to 1) before the result NO CARRIER occurs. In this case the application should not try to deactivate the PDP context by using the commands [AT+CGACT](#) or [ATH](#). If DTR is configured to disconnect data connections ([AT&D2](#)), then the application should not toggle DTR during the implicit PDP context deactivation and before "NO CARRIER" is received.

10.17 AT+CGSMS Select Service for MO Short messages

[AT+CGSMS](#) specifies the service or service preference that the MT will use to send MO (mobile originated) short messages.

Syntax

<p>Test Command</p> <pre>AT+CGSMS=?</pre> <p>Response(s)</p> <pre>+CGSMS: (list of supported <service>s) OK</pre>	
<p>Read Command</p> <pre>AT+CGSMS?</pre> <p>Response(s)</p> <pre>+CGSMS: <service> OK</pre>	
<p>Write Command</p> <pre>AT+CGSMS=[<service>]</pre> <p>Response(s)</p> <pre>OK ERROR +CME ERROR: <err></pre>	
<p>PIN → Last</p> <pre>+ + -</pre>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43]</p>

Parameter Description

<service> ^{(num)&V}	
A numeric parameter which indicates the service or service preference to be used. Parameter is global for all interfaces and volatile.	
0 ^(P)	Packet Domain
1	Circuit switched
2	Packet Domain preferred (use circuit switched SMS transfer if mobile is not PS attached)
3	Circuit switched preferred (use Packet Domain if circuit switched is not available)

Notes

- Sending SMS via Packet Domain is only possible when mobile is attached using [AT+CGATT](#).
- The command has been added only for compatibility reasons, and has no effect.

10.18 ATD*99# Request Packet Domain Service

ATD*99# causes the MT to perform whatever actions are necessary to establish a communication between the TE and the external PDN.

The V.250 'D' (Dial) command causes the MT to enter the V.250 online data state and, with the TE, to start the specified layer 2 protocol. No further commands may follow on the AT command line. Packet Domain attachment and PDP context activation procedures may take place prior to or during the PDP startup if they have not already been performed using the [AT+CGATT](#) and [AT+CGACT](#) commands.

To confirm acceptance of the command before entering the V.250 online data state command will return CONNECT.

When the layer 2 protocol has terminated, either as a result of an orderly shutdown of the PDP or an error, the MT enters V.250 command state and returns NO CARRIER (for details refer to Section 10.16.1, [Automatic deactivation of PDP context during dial-up PPP](#)).

Syntax

```
Exec Command
ATD*99[* [<called_address>][* [<L2P>][* [<cid>]]]]#

Response(s)
CONNECT
NO CARRIER
ERROR
+CME ERROR: <err>
```

PIN	→	Last
+	-	+

Reference(s)
3GPP TS 27.007 [43]

Parameter Description

<called_address>^(str)

IP V4 address in the form w.x.y.z, which identifies the called party; if it is provided, the MT will automatically set up a virtual call to the specified address after the context has been activated. This parameter is currently not used and needs not to be specified.

<L2P>^(str)

Layer 2 protocol to be used between the TE and MT.

["PPP"] Layer 2 protocol PPP

"1" Layer 2 protocol PPP

<cid>^(num)

Parameter specifies a particular PDP context definition (see [AT+CGDCONT](#) command). If this parameter is not specified **<cid>** 3 (Internet PDN) is the default value.

11. Short Message Service (SMS) Commands

The AT Commands described in this chapter allow an external application to use the Short Message Service with the EMS31-X.

11.1 SMS Parameters

Parameter Description

`<ackpdu>`^(num)

Format is same for `<pdu>` in case of SMS, but without 3GPP TS 24.011 [36] SC address field and parameter shall be bounded by double quote characters like a normal string type parameter

`<alpha>`^{(str)(+CSCS)}

String type alphanumeric representation of `<da>` or `<oa>` corresponding to the entry found in phonebook. This feature is not supported.

`<cdata>`^(num)

Command Data

3GPP TS 23.040 [33] TP-Command-Data in text mode responses; UE converts each 8-bit octet into two IRA character long hexadecimal numbers, e.g. octet with integer value 42 is represented as two characters "2A", IRA 50 and 65 (decimal).

`<ct>`^(num)

Command Type

3GPP TS 23.040 [33] TP-Command-Type in integer format

0...255

`<da>`^{(str)(+CSCS)}

Destination Address

3GPP TS 23.040 [33] TP- Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by `<toda>`

`<data>`^{(num)(+CSCS)}

User Data

In case of SMS: 3GPP TS 23.040 [33] TP-User-Data in text mode responses; format:

- If `<dcs>` indicates that 3GPP TS 23.038 [32] GSM 7 bit default alphabet is used and `<fo>` indicates that 3GPP TS 23.040 [33] TP-User-Data-Header-Indication is not set: UE converts GSM alphabet into current TE character set according to rules covered in Annex A.
- If `<dcs>` indicates that 8-bit or UCS2 data coding scheme is used, or `<fo>` indicates that 3GPP TS 23.040 [33] TP-User-Data-Header-Indication is set: UE converts each 8-bit octet into hexadecimal numbers containing two IRA characters, e.g. octet with integer value 42 is represented as two characters "2A", IRA 50 and 65 (decimal).

11.1 SMS Parameters

<dt>^(num)

Discharge Time

3GPP TS 23.040 [33] TP-Discharge-Time in time-string format: "yy/MM/dd,hh:mm:ss+zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone. For example, 6th of May 1994, 22:10:00 GMT+2 hours equals "94/05/06,22:10:00+08"

<index>^(num)

Integer type; value in the range of location numbers supported by the associated memory

<length>^(num)

Message Length

Integer type value indicating in the text mode (**AT+CMGF=1**) the length of the message body **<data>** (or **<cdata>**) in characters; or in PDU mode (**AT+CMGF=0**), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length) In text mode, the maximum length of an SMS depends on the used coding scheme: It is 160 characters if the 7 bit GSM coding scheme is used, and 140 characters according to the 8 bit GSM coding scheme.

If the SMS message format is "text mode" (**AT+CMGF=1**) and the character set is set to "UCS2" with **AT+CSCS** and the SMS is also coded as "UCS2" (see **<dcs>** of **AT+CSMP**), then the length is in octets instead of characters.

<mem1>^(str)

Memory to be used when listing, reading and deleting messages:

"SM"	SIM message storage (not available for 3GPP2 SMS)
"ME" ^(P)	Mobile Equipment message storage
"SR"	Status report message storage

<mem2>^(str)

Memory to be used when writing and sending messages:

"SM"	SIM message storage (not available for 3GPP2 SMS)
"ME" ^(P)	Mobile Equipment message storage

<mem3>^(str)

Received messages will be placed in this memory storage if routing to TE is not set. See command **AT+CNMI** with parameter **<mt>=2**.

Received status reports are always stored in "SR" unless directly forwarded to TE.

"SM"	SIM message storage (not available for 3GPP2 SMS)
"ME" ^(P)	Mobile Equipment message storage
"SR"	Status report message storage (not available for 3GPP2 SMS)

<mn>^(num)

Message Number

3GPP TS 23.040 [33] TP-Message-Number in integer format

<mr>^(num)

Message Reference

3GPP TS 23.040 [33] TP-Message-Reference in integer format

11.1 SMS Parameters

`<oa>(str)(+CSCS)`

Originating Address

3GPP TS 23.040 [33] TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by `<toa>`

`<pdu>(num)`

In the case of SMS: 3GPP TS 24.011 [36] SC address followed by 3GPP TS 23.040 [33] TPDU in hexadecimal format: UE converts each octet of TP data unit into hexadecimal numbers containing two IRA characters, e.g. octet with integer value 42 is represented as two characters "2A", IRA 50 and 65 (decimal). In the case of CBS: `<ra>` 3GPP TS 23.040 [33] TP-Recipient-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by `<tora>`

`<ra>(str)(+CSCS)`

Recipient Address

3GPP TS 23.040 [33] TP-Recipient-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (refer to command `AT+CSCS`.); type of address given by `<tora>`

`<sca>(str)(+CSCS)`

Service Center Address

3GPP TS 24.011 [36] RP SC address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (`AT+CSCS`); type of address given by `<tosca>`

`<scts>(num)`

Service Centre Time Stamp

3GPP TS 23.040 [33] TP-Service-Centre-Time-Stamp in time-string format (refer `<dt>`)

`<st>(num)`

Status

3GPP TS 23.040 [33] TP-Status in integer format

0...255

`<stat>(str)`

Message status

3GPP TS 27.005 [42] Interface of SMS and CB. Indicates the status of message in memory.

Description	text mode (<code><mode>=1</code>)	PDU mode (<code><mode>=0</code>)	Default
Received unread messages	"REC UNREAD"	0	for SMS reading commands
Received read messages	"REC READ"	1	
Stored unsent messages	"STO UNSENT"	2	for SMS writing commands
Stored sent messages	"STO SENT"	3	
All messages	"ALL"	4	

11.1 SMS Parameters

<todo>^(num)

Type of Destination Address

3GPP TS 24.011 [36] TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129)

0...255

<tooa>^(num)

Type of Originating Address

3GPP TS 24.011 [36] TP-Originating-Address Type-of-Address octet in integer format (default refer <todo>)

<tora>^(num)

Type of Recipient Address

3GPP TS 24.011 [36] TP-Recipient-Address Type-of-Address octet in integer format (default refer <todo>)

<tosca>^(num)

Type of Service Center Address

3GPP TS 24.011 [36] RP SC address Type-of-Address octet in integer format (default refer <todo>)

11.2 AT+CMGC Send SMS Command

Syntax

Test Command

AT+CMGC=?

Response(s)

OK

Write Command

If text mode (see [AT+CMGF=1](#))

AT+CMGC=<fo>, <ct>[, <pid>[, <mn>[, <da>[, <toda>]]]]<CR> Text can be entered <CTRL-Z>/<ESC>

Response(s)

+CMGC: <mr>[, <scts>]

If sending fails

ERROR

+CMS ERROR: <err>

Write Command

If PDU mode (see [AT+CMGF=0](#))

AT+CMGC=<length><CR> PDU can be entered <CTRL-Z>/<ESC>

Response(s)

+CMGC: <mr>[, <ackpdu>]

OK

If sending fails

ERROR

+CMS ERROR: <err>

PIN → Last

+ - -

Reference(s)

3GPP TS 27.005 [\[42\]](#)

Notes

- After invoking the commands [AT+CMGW](#), [AT+CMGS](#) or [AT+CMGC](#) it is necessary to wait for the prompt ">" before entering text or PDU.
- In general but especially at baudrates below 19200 it is recommended to only use the command line termination character ([ATS3](#)) before starting text or PDU input. Use of line termination character followed by an additional response formatting character ([ATS4](#)) may cause the problem that the latter will become part of the input data.

11.3 AT+CMGD Delete short message

The AT+CMGD write command deletes a short message from the preferred message storage <mem1> location <index>. If <delflag> is present and not set to 0 then the UE shall ignore <index> and follow the rules for <delflag> shown below. If deleting fails, final result code +CMS ERROR is returned.

The AT+CMGD test command returns the valid <index> locations of the preferred <mem1> and the supported <delflag> values.

Syntax

<p>Test Command</p> <p>AT+CMGD=?</p> <p>Response(s)</p> <p>+CMGD: (list of supported <index>s), (list of supported <delflag>es)</p> <p>OK</p>	
<p>Write Command</p> <p>AT+CMGD=<index>[, <delflag>]</p> <p>Response(s)</p> <p>OK</p> <p>ERROR</p> <p>+CMS ERROR: <err></p>	
<p>PIN → Last</p> <p>+ + -</p>	<p>Reference(s)</p> <p>3GPP TS 27.005 [42]</p>

Parameter Description

<index>^(num)

Integer type; value in the range of location numbers supported by the associated memory. See <index>.

<delflag>^(num)

0	(Or omitted) delete the message specified in <index>.
1	Delete all read messages from preferred message storage, leaving unread messages and stored mobile originated messages (whether sent or not) untouched.
2	Delete all read messages from preferred message storage and sent mobile originated messages, leaving unread messages and unsent mobile originated messages untouched.
3	Delete all read messages from preferred message storage, sent and unsent mobile originated messages leaving unread messages untouched.
4	Delete all messages from preferred message storage including unread messages.

Note

- If there is no short message stored at the selected index, the response is "+CMS ERROR: invalid memory index".

11.4 AT+CMGF Select SMS message format

The [AT+CMGF](#) command specifies the input and output format of the short messages.

Syntax

Test Command	
AT+CMGF=?	
Response(s)	
+CMGF: (list of supported<mode>s)	
OK	
Read Command	
AT+CMGF?	
Response(s)	
+CMGF: <mode>	
OK	
ERROR	
+CMS ERROR: <err>	
Write Command	
AT+CMGF=[<mode>]	
Response(s)	
OK	
ERROR	
+CMS ERROR: <err>	
PIN → Last	Reference(s)
- + -	3GPP TS 27.005 [42]

Parameter Description

<mode>	(num)(&V)(&W)	
[0]	(&F)(D)	PDU mode (default when implemented)
1		Text mode

11.5 AT+CMGL List SMS messages from preferred store

The write command returns messages with status value `<stat>` from message storage `<mem1>` to the TE. If the status of the message is 'received unread', the status in the storage changes to 'received read'. The execute command is the same as the write command with the given default for `<stat>`.

Syntax

Test Command

AT+CMGL=?

Response(s)

+CMGL: (list of supported `<stat>`s)

OK

Exec Command

AT+CMGL

Response(s)

+CMGL: (see write command for default of `<stat>`)

OK

Write Command

AT+CMGL=`<stat>`

Response(s)

Output if text mode (`AT+CMGF=1`) and command successful:

For SMS-SUBMITs and/or SMS-DELIVERs

+CMGL: `<index>`, `<stat>`, `<oa>/<da>`, [`<alpha>`], [`<scts>`]], `<toa>/<tda>`,
`<length>`]-<CR><LF><data><CR><LF>

[...]

OK

For SMS-STATUS-REPORTs

+CMGL: `<index>`, `<stat>`, `<fo>`, `<mr>`, [`<ra>`], [`<tora>`], `<scts>`, `<dt>`, `<st>`<CR><LF>

[...]

OK

For SMS-Commands

+CMGL: `<index>`, `<stat>`, `<fo>`, `<ct>`<CR><LF>

[...]

OK

Output if PDU mode `AT+CMGF=0` and command successful:

For SMS-SUBMITs and/or SMS-DELIVERs

+CMGL: `<index>`, `<stat>`, [`<alpha>`], `<length>`<CR><LF><pdu><CR><LF>

[...]

OK

If error is related to ME functionality

ERROR

+CMS ERROR: `<err>`

PIN → Last

+ + -

Reference(s)

3GPP TS 27.005 [42]

Notes

- The selected `<mem1>` can contain different types of SMs (e.g. SMS-DELIVERs, SMS-SUBMITs, SMS-STATUS-REPORTs and SMS-COMMANDs), the response may be a mix of the responses of different SM types. TE application can recognize the response format by examining the third response parameter.
- Users should be aware that when using this AT command quickly after SIM PIN authentication the SIM data may not yet be accessible, resulting in a short delay before the requested AT command response is returned.

11.6 AT+CMGR Read SMS messages

The write command returns SMS message with location value `<index>` from message storage `<mem1>` to the TE. If status of the message is 'received unread', status in the storage changes to 'received read'.

When using Text mode it is recommended to set `AT+CSDH=1`. In this case the `AT+CMGR` write command responses will include detailed header information. See `AT+CSDH` for details.

Syntax

<p>Test Command</p> <p>AT+CMGR=?</p> <p>Response(s)</p> <p>OK</p>	
<p>Write Command</p> <p>AT+CMGR=<index></p> <p>Response(s)</p> <p>Output if text mode (<code>AT+CMGF=1</code>) and command successful:</p> <p>For SMS-DELIVER</p> <p>+CMGR: <stat>, <oa>, [<alpha>], <scts>[, <tooa>, <fo>, <pid>, <dcsc>, <sca>, <tosca>, <length>]<CR><LF><data></p> <p>[...]</p> <p>OK</p> <p>For SMS-SUBMIT</p> <p>+CMGR: <stat>, <da>, [<alpha>][, <toda>, <fo>, <pid>, <dcsc>, [<vp>], <sca>, <tosca>, <length>]<CR><LF><data></p> <p>[...]</p> <p>OK</p> <p>For SMS-STATUS-REPORT</p> <p>+CMGR: <stat>, <fo>, <mr>, [<ra>], [<tora>], <scts>, <dt>, <st> <data></p> <p>[...]</p> <p>OK</p> <p>For SMS-Commands</p> <p>+CMGR: <stat>, <fo>, <ct>[, <pid>, [<mn>], [<da>], [<toda>], <length>]<CR><LF><data></p> <p>[...]</p> <p>OK</p> <p>Output if PDU mode (<code>AT+CMGF=0</code>) and command successful:</p> <p>For SMS-SUBMITs and/or SMS-DELIVERs</p> <p>+CMGR: <stat>, [<alpha>], <length><CR><LF><pdu></p> <p>[...]</p> <p>OK</p> <p>ERROR</p> <p>+CMS ERROR: <err></p>	
<p>PIN → Last</p> <p>+ + -</p>	<p>Reference(s)</p> <p>3GPP TS 27.005 [42]</p>

Notes

- Response if [AT+CMGR](#) is used to read an empty record index: +CMGR: 0,,0
- Response if [AT+CMGR](#) is used to read a non-existent record index: +CMS ERROR: invalid memory index

11.7 AT+CMGS Send SMS

[AT+CMGS](#) write command transmits a short message to network (SMS-SUBMIT).

After invoking the write command wait for the prompt ">" and then start to write the message. To send the message simply enter <CTRL-Z>.

To abort sending use <ESC>. Abortion is acknowledged with "OK", though the message will not be sent.

The message reference <mr> is returned by the UE on successful message delivery. The value can be used to identify the message in a delivery status report provided as an unsolicited result code.

Syntax

<p>Test Command</p> <p>AT+CMGS=?</p> <p>Response(s)</p> <p>OK</p>	
<p>Write Command</p> <p>If text mode (see AT+CMGF=1)</p> <p>AT+CMGS=<da>[, <toda>]<CR> Text can be entered. <CTRL-Z>/<ESC></p> <p>Response(s)</p> <p>+CMGS: <mr>[, <scts>]</p> <p>OK</p> <p>If sending fails see notes below.</p>	
<p>Write Command</p> <p>If PDU mode (see AT+CMGF=0)</p> <p>AT+CMGS=<length><CR> PDU can be entered. <CTRL-Z>/<ESC></p> <p>Response(s)</p> <p>+CMGS: <mr>[, <ackpdu>]</p> <p>OK</p> <p>If sending fails see notes below.</p>	
<p>PIN → Last</p> <p>+ - -</p>	<p>Reference(s)</p> <p>3GPP TS 27.005 [42]</p>

Notes

- Note that some providers do not recognize an @ symbol used in a short message. A widely used alternative is typing "*" as defined in 3GPP TS 23.040 [\[33\]](#).
- All characters entered behind the prompt ">" will be recognized as GSM characters. For example, "Backspace" (ASCII character 8) does not delete a character, but will be inserted into the short message as an additional physical character. As a result, the character you wanted to delete still appears in the text, plus the GSM code equivalent of the Backspace key.
- Message Length in Text Mode
 The maximum length of a short message depends on the used coding scheme: It is 160 characters if the 7 bit GSM coding scheme is used, and 140 characters according to the 8 bit GSM coding scheme.
 In case UCS2 character set selected it is highly recommended to set Data Coding Scheme (<dcs> of [AT+CSMP](#)) to 16-bit data, otherwise the length of sms user data is restricted to 88 octets. Even better for messages with UCS2 character set is the PDU Mode.
- In general but especially at baudrates below 19200 it is recommended to only use the command line termination character ([ATS3](#)) before starting text or PDU input. Use of line termination character followed by an additional response formatting character ([ATS4](#)) may cause the problem that the latter will become part of the input data.

11.8 AT+CMGW Write Short Messages to Memory

AT+CMGW execute and write commands transmit a short message (either SMS-DELIVER or SMS-SUBMIT) from TE to memory storage `<mem2>`. Memory location `<index>` of the stored message is returned. Message status will be set to 'stored unsent' unless otherwise given in parameter `<stat>`.

After invoking the execute or write command wait for the prompt ">" and then start to write the message. To save the message simply enter `<CTRL-Z>`. To abort writing use `<ESC>`. Abortion is acknowledged with "OK", though the message will not be saved.

Message Length in Text Mode: The maximum length of a short message depends on the used coding scheme configured with `<dc>` of **AT+CSMP**:

7 bit GSM coding scheme: 160 characters

8 bit GSM coding scheme: 140 characters

16 bit GSM coding scheme: 70 characters.

The length of 8-bit data coded short messages has to be greater than 0.

Syntax

Test Command

AT+CMGW=?

Response(s)

OK

Exec Command

If text mode (see [AT+CMGF=1](#)):

AT+CMGW

Response(s)

<CR> Text can be entered. <CTRL-Z>/<ESC>

+CMGW: `<index>`

OK

If writing fails

ERROR

+CMS ERROR: `<err>`

Write Command

If text mode (see [AT+CMGF=1](#)):

AT+CMGW=`<oa>/<da>`[, [`<toa>/<toda>`]], `<stat>`]`<CR>` Text can be entered. <CTRL-Z>/<ESC>

Response(s)

+CMGW: `<index>`

OK

If writing fails see notes below.

Write Command

If PDU mode (see [AT+CMGF=0](#)):

AT+CMGW=`<length>`[, `<stat>`]`<CR>` PDU can be entered. <CTRL-Z>/<ESC>

Response(s)

+CMGW: `<index>`

OK

If writing fails see notes below.

PIN → Last

+ + -

Reference(s)

3GPP TS 27.005 [42], 3GPP TS 23.038 [32]

Notes

- Note that some providers do not recognize an @ symbol used in a short message. A widely used alternative is typing "*" as defined in 3GPP TS 23.040 [33].
- In general but especially at baudrates below 19200 it is recommended to only use the command line termination character (ATS3) before starting text or PDU input. Use of line termination character followed by an additional response formatting character (ATS4) may cause the problem that the latter will become part of the input data.
- SMS-COMMANDS and SMS-STATUS-REPORTs cannot be stored in text mode.
- All characters entered behind the ">" prompt will be recognized as GSM characters. For example, "Backspace" (ASCII character 8) does not delete a character, but will be inserted into the short message as an additional physical character. As a result, the character you wanted to delete still appears in the text, plus the GSM code equivalent of the Backspace key.

11.9 AT+CMSS Send short messages from storage

The write command sends message with location value `<index>` from message storage `<mem2>` to the network (SMS-SUBMIT or SMS-COMMAND). If new recipient address `<da>` is given for SMS-SUBMIT, it shall be used instead of the one stored with the message. Reference value `<mr>` is returned to the TE on successful message delivery. Value can be used to identify message upon unsolicited delivery status report result code. If the optional parameter `<da>` is given, the old status of the short message at `<index>` remains unchanged (see `<stat>`).

Syntax

Test Command AT+CMSS=? Response(s) OK	
Write Command If text mode (<code>AT+CMGF=1</code>): AT+CMSS= <code><index></code> [, <code><da></code> [, <code><toda></code>]] Response(s) +CMSS: <code><mr></code> [, <code><scts></code>] OK If sending fails ERROR +CMS ERROR: <code><err></code>	
Write Command If PDU mode (<code>AT+CMGF=0</code>): AT+CMSS= <code><index></code> [, <code><da></code> [, <code><toda></code>]] Response(s) +CMSS: <code><mr></code> [, <code><ackpdu></code>] OK If sending fails ERROR +CMS ERROR: <code><err></code>	
PIN → Last + - -	Reference(s) 3GPP TS 27.005 [42]

11.10 AT+CNMA New Message Acknowledgement to UE/TE

In SMS text mode ([AT+CMGF=1](#)) execute command confirms reception of a new message (SMS-DELIVER or SMS-STATUS-REPORT) which is routed directly to the TE. In PDU mode ([AT+CMGF=0](#)) write command is used to send either positive (RP-ACK) or negative (RP-ERROR) acknowledgement to the network. Parameter [<n>](#) defines which one will be sent.

EMS31-X will not send another "+CMT" or "+CDS" URC to the TE until previous one is acknowledged with this command. If the UE does not receive acknowledgement within required time (network timeout), it sends an "RP-ERROR" message to the network. The UE will automatically disable routing to the TE by setting both [<mt>](#) and [<ds>](#) values of [AT+CNMI](#) to zero.

Syntax

Test Command AT+CNMA=? Response(s) +CNMA: (list of supported <n>s) OK	
Exec Command AT+CNMA Response(s) OK ERROR +CMS ERROR: <err>	
Write Command AT+CNMA= <n> Response(s) OK ERROR +CMS ERROR: <err>	
PIN → Last + - -	Reference(s) 3GPP TS 27.005 [42]

Parameter Description

<n> ^(num)	
Parameter required only for PDU mode.	
0	Command operates similarly as in text mode.
1	Send positive (RP-ACK) acknowledgement to the network. Accepted only in PDU mode.
2	Send negative (RP-ERROR) acknowledgement to the network. Accepted only in PDU mode.

Notes

- Execute and write command shall only be used when `AT+CSMS` parameter `<service>` equals 1 (= phase 2+) and an appropriate URC has been issued by the module, i.e.:
 - `<+CMT>` for `<mt>=2` incoming message classes 0,1,3 and none;
 - `<+CMT>` for `<mt>=3` incoming message classes 0 and 3;
 - `<+CDS>` for `<ds>=1`.
- Execute command can be used no matter whether text mode or PDU mode is activated. Write command is designed for the PDU mode only.

11.11 AT+CNMI SMS Event Reporting Configuration

AT+CNMI selects the procedure how the receipt of a new SMS from the network is indicated to the TE when TE is active. Please also consider general rules for URC signaling explained in Section 1.7, [Unsolicited Result Code Presentation](#) and in Section 2.11, [Extended Configuration Settings](#).

Changing **AT+CNMI** parameters on one of the UE's interfaces will automatically restore **AT+CNMI** default settings on all other interfaces. This ensures that incoming short messages are always indicated on the interface from which the **AT+CNMI** command was most recently issued.

The rules **<mt>=2** and **<mt>=3** for storing received messages are possible only if phase 2+ compatibility is activated with **AT+CSMS=1**. The parameter **<ds>=1** is only available in phase 2+.

Syntax

<p>Test Command</p> <pre>AT+CNMI=?</pre> <p>Response(s)</p> <pre>+CNMI: (list of supported<mode>s), (list of supported <mt>s), (list of supported <bm>s), (list of supported <ds>s), (list of supported <bfr>s)</pre> <pre>OK</pre>	
<p>Read Command</p> <pre>AT+CNMI?</pre> <p>Response(s)</p> <pre>+CNMI: <mode>, <mt>, <bm>, <ds>, <bfr></pre> <pre>OK</pre>	
<p>Write Command</p> <pre>AT+CNMI=<mode>[, <mt>[, <bm>[, <ds>[, <bfr>]]]]</pre> <p>Response(s)</p> <pre>OK</pre> <pre>ERROR</pre> <pre>+CMS ERROR: <err></pre>	
<p>PIN → Last</p> <pre>+ + -</pre>	<p>Reference(s)</p> <p>3GPP TS 27.005 [42]</p>

Unsolicited Result Codes

URC 1

<mt>=1,2 or 3 - indication only (text and PDU mode):

```
+CMTI: <mem3>, <index>
```

Indicates that new message has been received

URC 2

<mt>=1,2 or 3 - directly routed message (PDU mode enabled):

```
+CMT: , <length><CR><LF><pdu>
```

Indicates that new message has been received

URC 3

<mt>=1,2 or 3 - directly routed message (text mode enabled):

```
+CMT: <oa>, , <scts>[, <toa>, <fo>, <pid>, <dcs>, <sca>, <tosca>, <length>] <CR><LF><data>
```

Indicates that new message has been received

URC 4

<ds>=1 (PDU mode enabled):

+CDS: <length><CR><LF><pdu>

Indicates that new SMS status report has been received

URC 5

<ds>=1 (text mode enabled):

+CDS: <fo>, <mr>[, <ra>][, <tora>], <scts>, <dt>, <st>

Indicates that new SMS status report has been received

URC 6

<ds>=2:

+CDSI: <mem3>, <index>

Indicates that new SMS status report has been received

Parameter Description

<mode> ^{(num)(&V)(&W)}	
0	SMS related URCs are always buffered in the UE. If the buffer is full, the oldest indications are discarded and replaced with newly received indications.
1 (&F)(D)	SMS related URCs are forwarded directly to the TE. However, if this is not possible because UE-TE link is reserved, e.g. during a data call, these URCs are discarded.
2	SMS related URCs are forwarded directly to the TE. However, if this is not possible because UE-TE link is reserved these URCs are buffered and flushed to the TE afterwards. Additionally, while UE-TE link is reserved, buffered URCs can be signaled to the TE by activating the RING line, according to parameters AT^SCFG "URC/Ringline" <urcRinglineCfg> and AT^SCFG "URC/Ringline/ActiveTime" <urcRinglineDuration>.
<mt> ^{(num)(&V)(&W)}	
Rules for storing received short messages depend on the relevant data coding method (refer to 3GPP TS 23.038 [32]), preferred memory storage setting (AT+CPMS) and this value.	
0 (&F)(D)	No SMS-DELIVER indications are routed to the TE.
1	Class 0 SMS-DELIVERS are routed directly to the TE via URC. For all other messages the following applies: If SMS-DELIVER is stored in the UE, indication of the memory location is routed to the TE via URC.
2	SMS-DELIVERS, except class 2 messages and messages in the message waiting indication group (store message) are routed directly to the TE via URC.
3	Class 0 and 3 SMS-DELIVERS are routed directly to the TE via URCs defined for <mt>=2. Messages of other data coding schemes result in indication as defined for <mt>=1.
<bm> ^{(num)(&V)(&W)}	
Rules for handling of CBM. Feature not applicable to EMS31-X.	
0 (&F)(D)	No CBM indications are routed to the TE.
<ds> ^{(num)(&V)(&W)}	
0 (&F)(D)	No SMS-STATUS-REPORTs are routed to the TE.

-
- | | |
|---|--|
| 1 | SMS-STATUS-REPORTs are routed to the TE via URC. |
| 2 | If SMS-STATUS-REPORT is routed into UE, indication of the memory location is routed to the TE via URC. |

`<bfr>`^{(num)(&V)(&W)}

- | | |
|---------------------------------------|---|
| <code>0</code> ^{(&F)(D)} | UE's buffer of SMS related URCs is flushed to the TE when <code><mode></code> changes from 0 to 1, 2. |
| 1 | UE's buffer of SMS related URCs is cleared when <code><mode></code> changes from 0 to 1, 2. |

`<index>`^(num)

Integer type; value in the range of location numbers supported by the associated memory

Note

- Parameters `<mt>=2,3` and `<ds>=1` are only available with GSM phase 2+ (see `AT+CSMS=1`). Incoming SMS or Status Reports have to be acknowledged with `AT+CNMA=0` when using these phase 2+ parameters. If either a SM or a Status Report is not acknowledged, `AT+CNMI` parameters `<mt>=2,3` and `<ds>=1` will be set to zero as specified for `AT+CNMA`.

11.12 AT+CPMS Preferred SMS message storage

The [AT+CPMS](#) write command selects memory storages [<mem1>](#), [<mem2>](#), [<mem3>](#) to be used for reading, writing, etc.

The [AT+CPMS](#) test command lists the supported memory storages.

The [AT+CPMS](#) read command indicates the currently selected memory storages incl. the numbers of used and total entries.

Syntax

Test Command

AT+CPMS=?

Response(s)

+CPMS: (list of supported [<mem1>s](#)), (list of supported [<mem2>s](#)), (list of supported [<mem3>s](#))

OK

Read Command

AT+CPMS?

Response(s)

+CPMS: [<mem1>](#), [<used1>](#), [<total1>](#), [<mem2>](#), [<used2>](#), [<total2>](#), [<mem3>](#), [<used3>](#), [<total3>](#)

OK

ERROR

+CMS ERROR: [<err>](#)

Write Command

AT+CPMS=[<mem1>](#)[, [<mem2>](#)[, [<mem3>](#)]]

Response(s)

+CPMS: [<used1>](#), [<total1>](#), [<used2>](#), [<total2>](#), [<used3>](#), [<total3>](#)

OK

ERROR

+CMS ERROR: [<err>](#)

PIN → Last

+ + -

Reference(s)

3GPP TS 27.005 [\[42\]](#)

Parameter Description

[<used1>](#)^(num)

Number of messages currently in [<mem1>](#)

[<used2>](#)^(num)

Number of messages currently in [<mem2>](#)

[<used3>](#)^(num)

Number of messages currently in [<mem3>](#)

[<total1>](#)^(num)

Number of messages storable in [<mem1>](#)

[<total2>](#)^(num)

Number of messages storable in [<mem2>](#)

<total3>^(num)

Number of messages storable in <mem3>

Note

- The "ME" memory offers space for 10 short messages, see <mem1>.

11.13 AT+CSCA SMS Service Center Address

The [AT+CSCA](#) write command updates the SMSC address, through which mobile originated SMS are transmitted. In text mode, setting is used by send and write commands. In PDU mode, setting is used by the same commands, but only when the length of the SMSC address coded into the [<pdu>](#) parameter equals zero.

Syntax

Test Command	
AT+CSCA=?	
Response(s)	
OK	
Read Command	
AT+CSCA?	
Response(s)	
+CSCA: <sca> , <tosca>	
OK	
Write Command	
AT+CSCA= <sca> [, <tosca>]	
Response(s)	
OK	
PIN → Last	Reference(s)
+ + -	3GPP TS 27.005 [42]

Notes

- This command writes the service center address to non-volatile memory.
- The SMS service center address should be entered as specified by the service provider.

11.14 AT+CSDH Show SMS text mode parameters

The write command sets whether or not detailed header information is shown in text mode result codes.

Syntax

Test Command AT+CSDH=? Response(s) +CSDH: (list of supported <show>s) OK	
Read Command AT+CSDH? Response(s) +CSDH: <show> OK	
Write Command AT+CSDH=<show> Response(s) OK	
PIN → Last - + -	Reference(s) 3GPP TS 27.005 [42]

Parameter Description

<show> ^{(num)(&V)(&W)}	
[0] ^{(&F)(D)}	Do not show header values defined in commands AT+CSCA and AT+CSMP (<sca>, <tosca>, <fo>, <vp>, <pid> and <dcs>) nor <length>, <toda> or <tooa> in "+CMT", AT+CMGL , AT+CMGR result codes for SMS-DELIVERs and SMS-SUBMITs in text mode; for SMS-COMMANDs in +CMGR result code, do not show <pid>, <mn>, <da>, <toda>, <length> or <cdata>
1	Show the values in result codes

11.15 AT+CSMP Set SMS Text Mode Parameters

AT+CSMP controls additional parameters needed when a short message is sent to the network or placed in a storage if text format message mode is selected.

It is possible to set the validity period starting from the time when the short message is received by the SMSC (**<vp>** is in the range 0... 255) or define an absolute time for validity period termination (**<vp>** is a string). The format of **<vp>** is given by **<fo>**. The enhanced validity period format is given as hexadecimal coded string (e.g. **<pdu>**) with quotes.

Syntax

<p>Test Command</p> <pre>AT+CSMP=?</pre> <p>Response(s)</p> <pre>OK</pre>	
<p>Read Command</p> <pre>AT+CSMP?</pre> <p>Response(s)</p> <pre>+CSMP: <fo>, <vp>/ <scts>, <pid>, <dc></pre> <pre>OK</pre>	
<p>Write Command</p> <pre>AT+CSMP=<fo>[, <vp>/<scts>[, <pid>[, <dc>]]]</pre> <p>Response(s)</p> <pre>OK</pre> <pre>ERROR</pre> <pre>+CMS ERROR: <err></pre>	
<p>PIN → Last</p> <pre>+ + -</pre>	<p>Reference(s)</p> <pre>3GPP TS 27.005 [42]</pre>

Parameter Description

<p><fo>^(num)</p> <p>First Octet</p> <p>Depending on the command or result code: First octet of 3GPP TS 23.040 [33] SMS-DELIVER, SMS-SUBMIT, SMS-STATUS-REPORT, or SMS-COMMAND in integer format.</p> <p>0...17^(D)...255</p>
<p><vp>^{(num)(NV)}</p> <p>Validity Period</p> <p>Depending on SMS-SUBMIT <fo> setting: 3GPP TS 23.040 [33] TP-Validity-Period either in integer format or in time-string format (refer <dt>).</p> <p>0...167^(D)...255</p>
<p><pid>^(num)</p> <p>Protocol Identifier</p> <p>3GPP TS 23.040 [33] TP-Protocol-Identifier in integer format.</p> <p>0^(D)...255</p>

<dcS>^(num)

Data Coding Scheme

3GPP TS 23.038 [32] SMS Data Coding Scheme, or Cell Broadcast Data Coding Scheme in integer format.

0^(D)...247

Notes

- When storing a SMS DELIVER from the TE to the preferred memory storage in text mode (using the [AT+CMGW](#) write command), <vp> field can be used for <scts>.
-

11.16 AT+CSMS Select Message Service

Syntax

<p>Test Command</p> <pre>AT+CSMS=?</pre> <p>Response(s)</p> <pre>+CSMS: (list of supported<service>s) OK</pre>	
<p>Read Command</p> <pre>AT+CSMS?</pre> <p>Response(s)</p> <pre>+CSMS: <service>, <mt>, <mo>, <bm> OK</pre>	
<p>Write Command</p> <pre>AT+CSMS=<service></pre> <p>Response(s)</p> <pre>+CSMS: <mt>, <mo>, <bm> OK ERROR +CMS ERROR: <err></pre>	
<p>PIN → Last</p> <pre>+ + -</pre>	<p>Reference(s)</p> <p>3GPP TS 27.005 [42]</p>

Parameter Description

<service> ^{(num)(&V)(&W)}	
0(&F)(D)	3GPP TS 23.040 [33] and 3GPP TS 23.041 [34] (the syntax of SMS AT commands is compatible with 3GPP TS 27.005 [42] Phase 2 version 4.7.0; Phase 2+ features which do not require new command syntax may be supported, e.g. correct routing of messages with new Phase 2+ data coding schemes)
1	3GPP TS 23.040 [33] and 3GPP TS 23.041 [34] (the syntax of SMS AT commands is compatible with 3GPP TS 27.005 [42] Phase 2+ version; the requirement of <service> setting 1 is mentioned under corresponding command descriptions).
<mt> ^{(num)(&V)}	
Mobile Terminated Messages:	
0	Type not supported
1(P)	Type supported
<mo> ^{(num)(&V)}	
Mobile Originated Messages:	
0	Type not supported
1(P)	Type supported

<bm>^{(num)&V}

Broadcast Type Messages:

Feature not applicable to EMS31-X.

0 Type not supported

Notes

- If CSMS mode is switched from Phase 2+ to Phase 2 and one or more [AT+CNMI](#) Parameter are Phase 2+ specific a "+CMS ERROR: unknown error" will appear. It is recommended to switch the [AT+CNMI](#) Parameters to Phase 2 specific values before entering Phase 2.
- Phase 2+ (<service>=1) must be set before the following features can be used:
 - Configuring procedures for indicating received short messages with the [AT+CNMI](#) parameters <mt>=2 or <mt>=3 and <ds>=1.
 - Acknowledging incoming short messages with [AT+CNMA](#).
 - Receiving Status Reports and acknowledging them with [AT+CNMA](#).

11.17 AT^SMGL List Short Messages from preferred store without setting status to REC READ

The write command allows to select a status type and lists, from the message storage `<mem1>`, all messages that currently have the specified `<stat>`. The major difference over the standard command `AT+CMGL` is that the status of the listed messages remains `unread` (unread remains unread). The execute command is the same as the write command, but uses the given default of `<stat>`.

Syntax

Test Command

```
AT^SMGL=?
```

Response(s)

same as [AT+CMGL](#)

Exec Command

```
AT^SMGL
```

Response(s)

```
^SMGL: (For default values of <stat>, see "Section 11.1, SMS Parameters.")
```

```
OK
```

Write Command

```
AT^SMGL=<stat>
```

Response(s)

same as [AT+CMGL](#)

PIN → Last

```
+ + -
```

Notes

- The selected `<mem1>` can contain different types of SMS (e.g. SMS-DELIVERs, SMS-SUBMITs and SMS-COMMANDs), the response may be a mix of the responses of different SM types. TE application can recognize the response format by examining the third response parameter.
- Users should be aware that when using this AT command quickly after SIM PIN authentication the SIM data may not yet be accessible, resulting in an error or a short delay before the requested AT command response is returned.

11.18 AT^SMGR Read short message without setting status to REC READ

The [AT^SMGR](#) command is a proprietary command which has the same syntax as [AT+CMGR](#). The only functional difference is that the status "REC UNREAD" of a short message is not overwritten to "REC READ".

Syntax

Test Command
AT^SMGR=?
Response(s)
OK
Write Command
AT^SMGR=<index>
Response(s)
see AT+CMGR
PIN → Last
+ + -

Note

- Users should be aware that when using this AT command quickly after SIM PIN authentication the SIM data may not yet be accessible, resulting in a short delay before the requested AT command response is returned.

11.19 AT+CSAS Save SMS Settings

The [AT+CSAS](#) command saves active message service settings to a non-volatile memory. UE can contain several profiles of settings. Settings specified in commands Service Centre Address [AT+CSCA](#), Set Message Parameters [AT+CSMP](#) are saved. Certain settings may not be supported by the storage (e.g. (U)SIM SMS parameters) and therefore cannot be saved.

Syntax

Test Command

```
AT+CSAS=?
```

Response(s)

```
+CSAS: (list of supported<profile>s)  
OK
```

Read Command

```
AT+CSAS?
```

Response(s)

```
+CSAS: <profile>  
OK  
ERROR  
+CMS ERROR: <err>
```

Write Command

```
AT+CSAS=[<profile>]
```

Response(s)

```
OK  
ERROR  
+CMS ERROR: <err>
```

PIN → Last

```
- + -
```

Reference(s)

3GPP TS 27.005 [\[42\]](#)

Parameter Description

<profile>^(num)

0...255

Manufacturer specific profile number where settings are to be stored.

11.20 AT+CRES Restore SMS Settings

The [AT+CRES](#) command restores message service settings from non-volatile memory to active memory. UE can contain several profiles of settings. Settings specified in commands Service Centre Address [AT+CSCA](#), Set Message Parameters [AT+CSMP](#) are restored. Certain settings may not be supported by the storage (e.g. (U)SIM SMS parameters) and therefore cannot be restored.

Syntax

<p>Test Command</p> <pre>AT+CRES=?</pre> <p>Response(s)</p> <pre>+CRES: (list of supported<profile>s) OK</pre>	
<p>Read Command</p> <pre>AT+CRES?</pre> <p>Response(s)</p> <pre>+CRES: <profile> OK ERROR +CMS ERROR: <err></pre>	
<p>Write Command</p> <pre>AT+CRES=[<profile>]</pre> <p>Response(s)</p> <pre>OK ERROR +CMS ERROR: <err></pre>	
<p>PIN → Last</p> <p>- + -</p>	<p>Reference(s)</p> <p>3GPP TS 27.005 [42]</p>

Parameter Description

<profile> ^(num)	
0...255	Manufacturer specific profile number from where settings are to be restored.

12. (U)SIM related Commands

12. (U)SIM related Commands

AT commands described in this chapter are related to the Subscriber Identity Module ((U)SIM) connected to the EMS31-X.

12.1 AT+CCID (U)SIM Card Identification Number

AT+CCID serves to query the (U)SIM card identification number. This information is retrieved from (U)SIM Elementary File EF_{ICCID} and the Elementary File EF_{eUICCID}. For details refer to 3GPP TS 11.11 [14], 3GPP TS 31.101 [15], 3GPP TS 31.102 [16].

Syntax

Test Command	AT+CCID=?	Response(s)	OK
Read Command	AT+CCID?	Response(s)	+CCID: <ICCID>, <eUICCID> OK ERROR +CME ERROR: <err>
Exec Command	AT+CCID	Response(s)	+CCID: <ICCID>, <eUICCID> OK ERROR +CME ERROR: <err>
	PIN → Last		- + -

Parameter Description

<ICCID>^(str)

ICCID (Integrated Circuit Card ID) of the (U)SIM card

<eUICCID>^(str)

eUICCID (Embedded Universal Integrated Circuit Card ID) of the (U)SIM card

The UE reads the eUICCID in the following order:

1. eUICC ID represented as the concatenation of the SIN (Security Domain Provider Identification Number) and SDIN (Security Domain Image Number) as defined in the "GlobalPlatform Card Specification".
2. If method 1 is not available, and especially for older (U)SIM cards the eUICC ID is possibly contained in the following Elementary Files which are checked in the order:

-
- (U)SIM Elementary File EF_{eUICCID} (residing in master file directory, file ID 0x2FC8)
 - (U)SIM Elementary File EF_{eUICCID} (residing in master file directory, file ID 0x0099)

If no eUICCID is available or the SIM card is removed (physically or logically) [AT+CCID](#) returns an empty string "".

12.2 AT+CRSM Restricted SIM Access

AT+CRSM offers easy access of the Elementary Files on the (U)SIM. Access to the (U)SIM database is restricted to the commands which are listed at [<command>](#).

All parameters of AT+CRSM are used as specified by 3GPP TS 11.11 [\[14\]](#), 3GPP TS 31.101 [\[15\]](#), 3GPP TS 31.102 [\[16\]](#). EMS31-X handles internally all required (U)SIM interface locking and file selection routines.

As response to the command, the EMS31-X sends the actual (U)SIM information parameters and response data. Error result code "+CME ERROR" may be returned if the command cannot be passed to the (U)SIM, e.g. if the (U)SIM is not inserted. However, failure in the execution of the command in the (U)SIM is reported in [<sw1>](#) and [<sw2>](#) parameters.

Syntax

<p>Test Command</p> <pre>AT+CRSM=?</pre> <p>Response(s)</p> <pre>OK</pre>	<p>Write Command</p> <pre>AT+CRSM=<command>[, <fileID>[, <P1>, <P2>, <P3>[, <data>][, <pathId>]]]</pre> <p>Response(s)</p> <pre>+CRSM: <sw1>,<sw2>[,<response>] OK ERROR +CME ERROR: <err></pre>
<p>PIN → Last</p> <pre>- + -</pre>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43], 3GPP TS 11.11 [14], 3GPP TS 31.101 [15], 3GPP TS 31.102 [16]</p>

Parameter Description

<command>^(num)	
(U)SIM command number.	
176	READ BINARY
178	READ RECORD
192	GET RESPONSE
214	UPDATE BINARY
220	UPDATE RECORD
242	STATUS
<fileID>^(num)	
Identifier for an elementary data file on (U)SIM, if used by <command> . Mandatory for every command except STATUS.	
<P1>^(num)	
Parameter to be passed on by the EMS31-X to the (U)SIM.	
0...255	

<P2>^(num)

Parameter to be passed on by the EMS31-X to the (U)SIM.

0...255

<P3>^(num)

Parameter to be passed on by the EMS31-X to the (U)SIM.

0...255

<data>^(str)

Information which shall be written to the (U)SIM (hexadecimal character format).

<pathId>^(str)

Contains the directory path of an elementary file on the UICC in hexadecimal format (e.g. "7F105F50").

<sw1>^(num)

Status information from the (U)SIM about the execution of the actual command. It is returned in both cases, on successful or failed execution of the command.

0...255

<sw2>^(num)

Status information from the (U)SIM about the execution of the actual command. It is returned in both cases, on successful or failed execution of the command.

0...255

<response>^(str)

Response data in case of a successful completion of the previously issued command.

"STATUS" and "GET RESPONSE" commands return data, which gives information about the currently selected elementary data field. This information includes the type of file and its size.

After "READ BINARY" or "READ RECORD" commands the requested data will be returned.

<response> is empty after "UPDATE BINARY" or "UPDATE RECORD" commands.

12.3 AT+CSIM Generic (U)SIM Access

AT+CSIM allows direct control of the (U)SIM.

Compared to Restricted (U)SIM Access command **AT+CRSM**, the definition of **AT+CSIM** allows the UE to take more control over the (U)SIM interface.

For parameter and (U)SIM result coding please refer to 3GPP TS 11.11 [14], 3GPP TS 31.101 [15], 3GPP TS 31.102 [16].

However, only the following (U)SIM commands are fully supported by **AT+CSIM**: SELECT, STATUS, READ BINARY, UPDATE BINARY, READ RECORD, UPDATE RECORD, SEEK, INCREASE and GET RESPONSE. Other (U)SIM commands will work in conjunction with the (U)SIM but the correct interaction of the (U)SIM with the EMS31-X is not guaranteed.

Syntax

Test Command	
AT+CSIM=?	
Response(s)	
OK	
Write Command	
AT+CSIM=<length>, <command>	
Response(s)	
+CSIM: <length>,<response>	
OK	
ERROR	
+CME ERROR: <err>	
PIN → Last	Reference(s)
- + -	3GPP TS 27.007 [43], 3GPP TS 11.11 [14], 3GPP TS 31.101 [15], 3GPP TS 31.102 [16]

Parameter Description

<length> ^(num)
Number of characters of <command> or <response> string.
<command> ^(str)
Command passed on by the UE to the (U)SIM.
<response> ^(str)
Response data of the command returned by the (U)SIM.

12.4 AT+CCHO Open logical channel

AT+CCHO asks the UE to open a communication session with (U)SIM. The UICC will open a new logical channel for the selected application identified by `<dfname>` and the UE shall return `<sessionid>` as response. The UE shall restrict the communication between the TE and the UICC to this logical channel.

The `<sessionid>` shall be used when sending commands with the Generic Logical Channel access **AT+CGLA** command. It will also be used with **AT+CCHC** to close the channel.

Syntax

Test Command

```
AT+CCHO=?
```

Response(s)

```
OK
```

Write Command

```
AT+CCHO=<dfname>
```

Response(s)

```
+CCHO: <sessionid>
```

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

PIN → Last

- + -

Reference(s)

3GPP TS 27.007 [43],
3GPP TS 11.11 [14], 3GPP TS
31.101 [15], 3GPP TS 31.102 [16]

Parameter Description

`<dfname>`^(str)

All selectable applications in (U)SIM are referenced by DF name coded on 1 to 16 bytes.

`<sessionid>`^(num)

A session Id to be used in order to target a specific application on (U)SIM using logical channels mechanism.

12.5 AT+CCHC Close logical channel

AT+CCHC asks the UE to close a communication session with the (U)SIM. The UE shall close the previously opened logical channel, and no more commands can be sent on this logical channel. The UICC will close the logical channel when receiving this command.

Syntax

Test Command	
AT+CCHC=?	
Response(s)	
OK	
Write Command	
AT+CCHC=<sessionid>	
Response(s)	
OK	
ERROR	
+CME ERROR: <err>	
PIN → Last	Reference(s)
- + -	3GPP TS 27.007 [43], 3GPP TS 11.11 [14], 3GPP TS 31.101 [15], 3GPP TS 31.102 [16]


Parameter Description

<sessionid>^(num)
Session Id to be used in order to target a specific application on the (U)SIM using the logical channels mechanism. The number is the <sessionid> returned by the channel open command **AT+CCHO**.

12.6 AT+CGLA Generic logical channel access

AT+CGLA allows direct control of the (U)SIM by a remote application on the TE. The UE manages the channel relevant bits of the class byte depending on the `<sessionid>` and then sends the `<command>` as it is to the (U)SIM. The UE takes care of processing (U)SIM information within the frame specified by GSM/UMTS. For parameter and (U)SIM result coding please refer to 3GPP TS 11.11 [14], 3GPP TS 31.101 [15], 3GPP TS 31.102 [16].

Syntax

<p>Test Command</p> <pre>AT+CGLA=?</pre> <p>Response(s)</p> <pre>OK</pre>	
<p>Write Command</p> <pre>AT+CGLA=<sessionid>, <length>, <command></pre> <p>Response(s)</p> <pre>+CGLA: <length>,<response></pre> <pre>OK</pre> <pre>ERROR</pre> <pre>+CME ERROR: <err></pre>	
<p>PIN  Last</p> <p>- + -</p>	<p>Reference(s)</p> <p>3GPP TS 27.007 [43], 3GPP TS 11.11 [14], 3GPP TS 31.101 [15], 3GPP TS 31.102 [16]</p>

Parameter Description

`<sessionid>`^(num)

Identifier of the session to be used in order to send the APDU commands to the (U)SIM. The number is the `<sessionid>` returned by the channel open command `AT+CCHO`.

`<length>`^(num)

Number of characters of `<command>` or `<response>` string.

`<command>`^(str)

Command passed on by the UE to the (U)SIM.

`<response>`^(str)

Response data of the command returned by the (U)SIM.

13. (U)SIM Application Toolkit (SAT) Commands

This chapter describes AT commands and responses related to the EMS31-X's [SIM Application Toolkit \(SAT\)](#) implementation.

[SAT](#) is a technology that allows an application running on the (U)SIM to control the LTE Engine (UE); it is specified in 3GPP TS 11.14 [18], 3GPP TS 31.111 [19], ETSI TS 102 223 [20].

[Remote SIM Application Toolkit](#), or short [Remote-SAT](#), provides a link between an application running on the (U)SIM and the Customer Application (TE). The purpose of [Remote-SAT](#) is to allow the TE to send AT commands to the [SAT](#) interface and to display dedicated [SAT](#) activity on the user interface of the TE. The overall scenario is illustrated in the context diagram below.

Following types of data are exchanged between the EMS31-X and the application running on the (U)SIM:

- Proactive commands (PACs) are sent from the (U)SIM application to the UE. Some PAC types are executed by the UE itself, comparable with AT commands. Other PAC types are immediately forwarded to the TE, e.g. "DISPLAY TEXT".
- Terminal Response is the UE's answer to the last PAC, sometimes to be provided by the TE.
- Envelope commands are sent from the UE or TE to the (U)SIM Application, such as "MENU SELECTION".

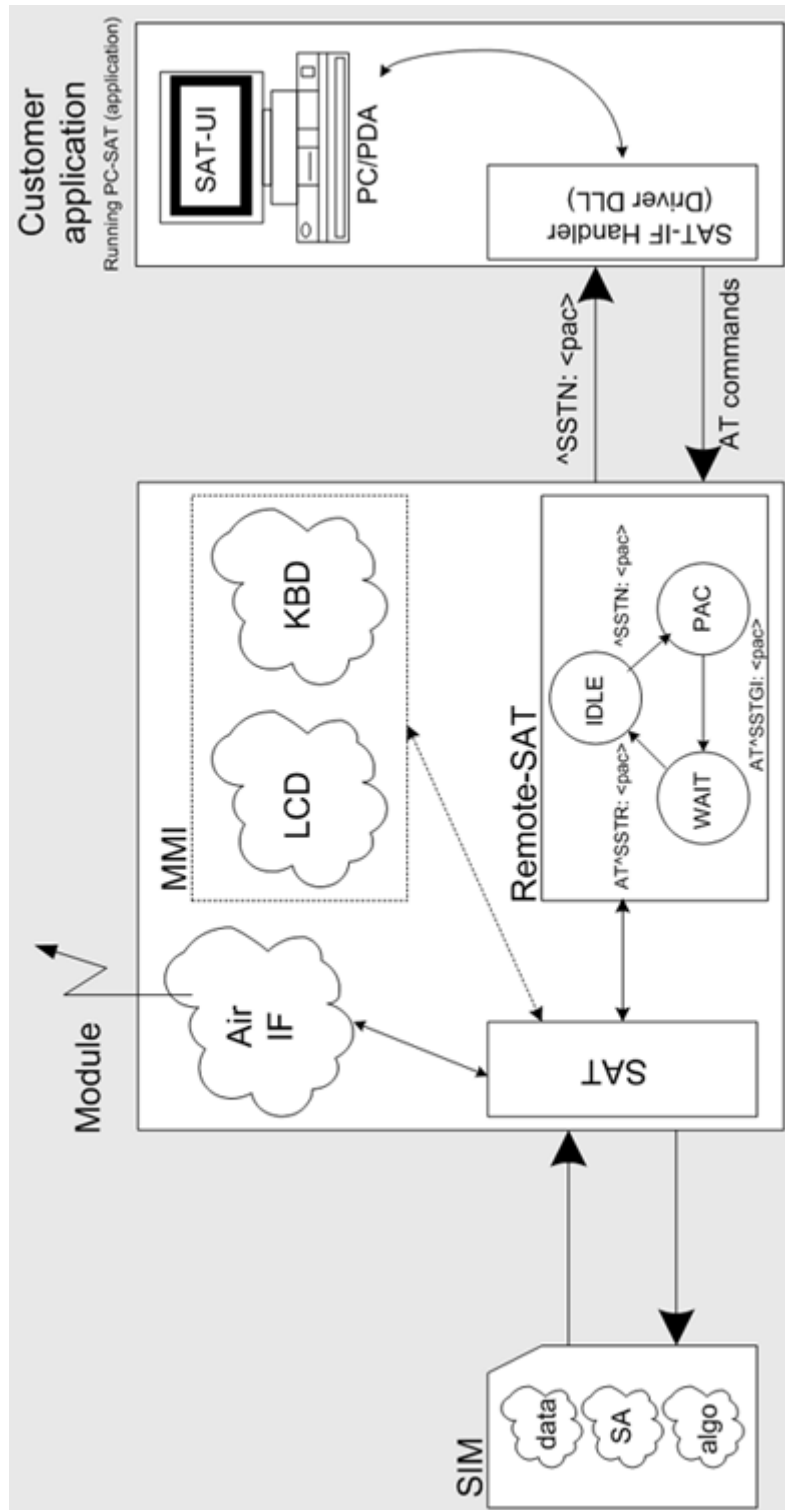


Figure 13.1: Remote-SAT Context Diagram

13.1 AT^SSTA Remote-SAT Interface Activation

AT^SSTA write command can be used to determine the Remote-SAT activation mode <mode> and, if Explicit Response mode is enabled, to activate the Remote-SAT interface. Removing and inserting the SIM does not affect the activation status.

SAT commands which are not using the AT interface (non-MMI related SAT commands, e.g. PROVIDE LOCAL INFORMATION) are executed without activating Remote-SAT.

The read command can be used to request the current operating status and the used alphabet of the Remote-SAT interface.

Syntax

Test Command

AT^SSTA=?

Response(s)

^SSTA: (list of supported <state>s), (list of supported <Alphabet>s)

OK

Read Command

AT^SSTA?

Response(s)

^SSTA: <state>, <Alphabet>, <allowedInstance>, <SatProfile>, <userTOut>, <AppType>

OK

Write Command

AT^SSTA=<mode>[, <Alphabet>]

Response(s)

OK

PIN → Last

- + -

Parameter Description

<state>^(num)

UE Remote-SAT interface states

1	OFF
2	IDLE

<Alphabet>^{(num)(NV)}

Setting becomes effective after restarting the UE.

0 ^(D)	GSM character set Input of a character requests one byte, e.g. "Y".
1	UCS2 To display the 16 bit value of characters represented in UCS2 alphabet a 4 byte string is required, e.g. "0059" is coding the character "Y". For details please refer to ISO/IEC 10646.

13.1 AT^SSTA

<allowedInstance>^(num)

Remote-SAT handling (i.e. [AT+STKPRO](#) URC and [AT+STKTR](#) sequence) is only usable via the channel on which the Explicit Response (ER) mode was activated.

To change the serial channel execute [AT^SSTA=1](#) on the desired channel and perform a restart.

- | | |
|---|--|
| 0 | SAT is already used on another instance. |
| 1 | SAT may be started on this instance via the write version of this command. |

<SatProfile>^(str)

SAT Terminal Profile according to 3GPP TS 11.14 [\[18\]](#), 3GPP TS 31.111 [\[19\]](#), ETSI TS 102 223 [\[20\]](#).

The profile tells the SIM Application which features (e.g. Proactive Commands) are supported by the SIM Application Toolkit implementation of the UE.

<userTOut>^(num)

PAC user timeout in seconds.

This parameter is not applicable.

<AppType>^(num)

SIM Application type.

This parameter shows the type of SIM application currently running.

- | | |
|---|-----------------------|
| 0 | (U)SIM not inserted |
| 1 | 2G Application (SAT) |
| 2 | 3G Application (USAT) |

<mode>^{(num)(NV)}

Select Remote-SAT activation mode.

Setting becomes effective after restarting the UE. Removing and inserting the SIM does not affect the activation status.

- | | |
|------------------|--|
| 0 ^(D) | Automatic Response (AR) mode.
All commands and responses are exchanged automatically between the UE and the SIM application. This eliminates the need to enter any Remote-SAT commands including the AT^SSTA command.
If AR mode is enabled the UE enters the OFF state (<state>=1) after restart. |
| 1 | Explicit Response (ER) mode.
This mode is intended for use with an MMI. If ER mode is enabled the MMI is required to handle, via UE's Remote-SAT interface, all commands and responses transmitted to or from the SIM or USIM.
If ER mode is enabled the UE enters the IDLE state (<state>=2) after reboot. |

13.2 AT+STKPRO SAT Proactive Command URCs

The [AT+STKPRO](#) test command returns the set of proactive commands supported. For each proactive command there is a URC provided.

Syntax

```
Test Command
AT+STKPRO=?
Response(s)
+STKPRO: (list of supported <ProactCmd>s)
OK
```

PIN → Last
- + -

Unsolicited Result Codes

URC 1

Refresh

+STKPRO: 01, <CmdQualifier>

URC 2

Set up event list

+STKPRO: 05, <EventList>

URC 3

Set up call

+STKPRO: 16, <DialNumber>, <Subaddr>, <CmdQualifier>, <Alpha1>, <IconId1>, <Alpha2>, <IconId2>

URC 4

Send SMS

+STKPRO: 19, <Alpha>, <IconId>, <RefNumber>

URC 5

Send DTMF

+STKPRO: 20, <Alpha>, <IconId>, <DtmfStr>

URC 6

Launch browser

+STKPRO: 21, <Url>, <Alpha>, <IconId>

URC 7

Play tone

+STKPRO: 32, <Tone>, <TimeUnit>, <Interval>, <Alpha>, <IconId>

URC 8

Display text

+STKPRO: 33, <CmdQualifier>, <Dcs>, <HexString>, <IconId>

URC 9

Get inkey

+STKPRO: 34, <CmdQualifier>, <Dcs>, <HexString>, <IconId>

URC 10

Get input

+STKPRO: 35, <CmdQualifier>, <Dcs>, <HexString>, <MaxRespLen>, <MinRespLen>, <DefaultText>, <IconId>

URC 11

Select item

+STKPRO: 36, <CmdQualifier>, <Alpha>, <ItemId>, <TotalItems>, <ItemText>, <NextAction>, <DefaultItem>, <IconId>, <IconIdListElem>

URC 12

Set up menu

+STKPRO: 37, <CmdQualifier>, <Alpha>, <ItemId>, <TotalItems>, <ItemText>, <NextAction>, <IconId>, <IconIdListElem>

URC 13

Provide local information

+STKPRO: 38, <CmdQualifier>

URC 14

Set up idle mode text

+STKPRO: 40, <Dcs>, <HexString>, <IconId>

URC 15

Run AT cmd info

+STKPRO: 52, <CmdQualifier>, <Alpha>, <IconId>, <AtCommand>

URC 16

Language notification

+STKPRO: 53, <Lang>

Parameter Description

<ProactCmd>^(num)

Proactive command

01	Refresh
05	Set up event list
16	Set up call
19	Send SMS
20	Send DTMF
21	Launch browser (currently not supported by EMS31-X)
32	Play tone
33	Display text
34	Get inkey
35	Get input
36	Select item

37	Set up menu
38	Provide local information
40	Set up idle mode text
52	Run AT cmd info
53	Language notification

`<CmdQualifier>`^(num)

Command qualifier. See 3GPP TS 11.14 [18], 3GPP TS 31.111 [19], ETSI TS 102 223 [20].

`<Lang>`^(num)

2 byte string indicating the language

`<EventList>`^(num)

04	User activity event
05	Idle screen available event
07	Language selection
08	Browser Termination event

`<DialNumber>`^(num)

Called party number

`<Subaddr>`^(num)

Called party subaddress

`<Alpha>`^(str)

Text string

`<Alpha1>`^(str)

Text string

`<Alpha2>`^(str)

Text string

`<IconId>`^(num)

Icon Identifier

`<IconId1>`^(num)

Icon Identifier

`<IconId2>`^(num)

Icon Identifier

`<IconIdListElem>`^(num)

Icon ID list element

<SsData>^(str)

Data string

<RefNumber>^(num)

Reference number

<DtmfStr>^(str)

DTMF string

<Tone>^(num)

01	Dial tone
02	Call subscriber busy
03	Congestion
04	Radio path acknowledge
05	Radio path not available
06	Error / special information
07	Call waiting tone
08	Ringing tone
10	General beep
11	Positive acknowledgement tone
12	Negative acknowledgement or error tone

<Interval>^(num)

Time duration in number of time units

0	Indicates a non-existing duration object
1...255	Multiples of <TimeUnit>

<TimeUnit>^(num)

0	Minutes
1	Seconds
2	Tenth of seconds

<IdleInterval>^(num)

Defines the duration when an idle connection is released automatically. If not present, the UE never shall release a connection automatically.

0	Indicates a non-existing duration object
1...255	Multiples of <IdleUnit>

<IdleUnit>^(num)

0	Minutes
1	Seconds
2	Tenth of seconds

`<ReconInterval>`^(num)

A duration for reconnect tries. The interval specifies the time interval of the duration in multiples of the reconnect time unit used.

0	Indicates a non-existing duration object
1...255	Multiples of <code><ReconTimeUnit></code>

`<ReconTimeUnit>`^(num)

0	Minutes
1	Seconds
2	Tenth of seconds

`<TotalItems>`^(num)

Total items

`<ItemId>`^(num)

Item identifier (see 3GPP TS 11.14 [18], 3GPP TS 31.111 [19], ETSI TS 102 223 [20])

`<ItemText>`^(num)

Item text string

`<Url>`^(str)

URL that shall be loaded

`<DefaultText>`^(str)

Text string

`<DefaultItem>`^(str)

Default item, see `<ItemId>`

`<Dcs>`^(str)

Data coding scheme

`<HexString>`^(str)

String containing data in hexadecimal format

`<MaxRespLen>`^(num)

Maximum response length

`<MinRespLen>`^(num)

Minimum response length

`<NextAction>`^(num)

Next action

<AtCommand>^(str)

AT command requested by the (U)SIM

<BearerType>^(num)

1	Circuit switched
2	Packet switched
3	Default bearer
255	Invalid

<BearerParam>^(num)

Hex string containing detailed information dependent on the type.

<BufSize>^(num)

The buffer the TE shall allocate for channel data.

<LoginDcs>^(str)

Data coding scheme of the text string. Text strings may be coded in 7-bit, 8-bit or UCS2 (16-bit) for user authentication data if requested by the bearer connection.

<LoginText>^(str)

Specifies user authentication data if requested by the bearer connection. Coding based on <LoginDcs>.

<PasswordDcs>^(str)

Data coding scheme of the text string. Text strings may be coded in 7-bit, 8-bit or UCS2 (16-bit) for user authentication data if requested by the bearer connection.

<PasswordText>^(str)

Specifies user authentication data if requested by the bearer connection. Coding based on <PasswordDcs>.

<TransportLevel>^(num)

Specifies the transport layer protocol of the UICC/TE connection.

1	UDP (as defined in RFC 768 [9])
2	TCP (as defined in RFC 793 [10])
255	No transport protocol specified

<TransportPort>^(num)

Specifies the port number.

<SubaddrCs>^(num)

Called party subaddress for CS bearers only

<DestAddrType>^(num)

Type of destination address

33	IPv4 address
----	--------------

2	IPv6 address
255	Invalid

<DestAddr>^(str)

Specifies the destination point of the connection. Hex string.

13.3 AT+STKTR SAT Terminal Response Commands

Each **AT+STKTR** write command allows entering the response to a SAT proactive command which was displayed by the URC +STKPRO.

The **AT+STKTR** test command returns the list or proactive commands (see **<ProactCmd>** of **AT+STKPRO**).

Note: Value 0 in some of the commands specified below stands for parameter "last command" which is obsolete, but not removed so far.

For the general **<Result>**s 32, 33, 38, 52, 53, 55, 57 and 58, it is mandatory for the UE to provide a specific cause value by using the **<AddResult>** parameter (additional information). For others additional information will be ignored.

Syntax

Test Command

```
AT+STKTR=?
```

Response(s)

```
+STKTR : (list of supported <ProactCmd>s)
```

```
OK
```

Write Command

Refresh

```
AT+STKTR=01,<Result>[, <AddResult>]
```

Response(s)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Write Command

Set up event list

```
AT+STKTR=05,<Result>
```

Response(s)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Write Command

Set up call

```
AT+STKTR=16,<Result>[, <AddResult>]
```

Response(s)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Write Command

Send SMS

```
AT+STKTR=19,<Result>[, <AddResult>]
```

Response(s)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Write Command

Send DTMF

AT+STKTR=20,<Result>[, <AddResult>]

Response(s)

OK

ERROR

+CME ERROR: <err>

Write Command

Launch browser

AT+STKTR=21,<Result>

Response(s)

OK

ERROR

+CME ERROR: <err>

Write Command

Play tone

AT+STKTR=32,<Result>[, <AddResult>]

Response(s)

OK

ERROR

+CME ERROR: <err>

Write Command

Display text

AT+STKTR=33,<Result>[, <AddResult>]

Response(s)

OK

ERROR

+CME ERROR: <err>

Write Command

Get inkey

AT+STKTR=34,<Result>, <AddResult>, 0, <Dcs>, <HexString>

Response(s)

OK

ERROR

+CME ERROR: <err>

Write Command

Get input

AT+STKTR=35,<Result>, <AddResult>, 0, <Dcs>, <HexString>

Response(s)

OK

ERROR

+CME ERROR: <err>

Write Command

Select item

AT+STKTR=36,<Result>[, <AddResult>], <ItemId>

Response(s)

OK

Write Command (Continued)

Select item

AT+STKTR=36,<Result>[, <AddResult>], <ItemId>

Response(s)

ERROR

+CME ERROR: <err>

Write Command

Set up menu

AT+STKTR=37,<Result>[, <AddResult>]

Response(s)

OK

ERROR

+CME ERROR: <err>

Write Command

Provide local information (generic)

AT+STKTR=38,<Result>, <AddResult>

Response(s)

OK

ERROR

+CME ERROR: <err>

Write Command

Provide local information: Set language

AT+STKTR=38,<Result>, <Lang>

Response(s)

OK

ERROR

+CME ERROR: <err>

Write Command

Set up idle mode text

AT+STKTR=40,<Result>[, <AddResult>]

Response(s)

OK

ERROR

+CME ERROR: <err>

Write Command

Run AT command info

AT+STKTR=52,<Result>, <AddResult>, 0, <Dcs>, <AtcResponse>

Response(s)

OK

ERROR

+CME ERROR: <err>

Write Command

Language notification

 
AT+STKTR=53,<Result>, <Lang>

Response(s)

OK

ERROR

+CME ERROR: <err>



Parameter Description

<ProactCmd>^(num)

Decimal code that specifies the proactive command. See [AT+STKPRO](#).

<Result>^(num)

Result indicated as decimal code

0	Command performed successfully
1	Command performed with partial comprehension
2	Command performed with missing information
3	REFRESH performed with additional Efs read
4	Command performed successfully, but requested icon could not be displayed
5	Command performed but modified by call control by SIM
6	Command performed successfully, limited service
7	Launch browser
16	Proactive SIM session terminated by the user
17	Backward move in the proactive SIM session requested by the user
18	No response from user
19	Help information required by the user
20	USSD or SS transaction terminated by the user
32	UE currently unable to process command
33	Network currently unable to process the command
34	User did not accept call set-up request
35	User cleared down call before connection or network release
36	Action in contradiction with the current timer state
37	Interaction with call control by SIM, temporary problem
38	Launch browser generic error code
48	Command beyond UE's capabilities
49	Command type not understood by UE
50	Command data not understood by UE
51	Command number not known by UE
52	SS return error
53	SMS RP-ERROR
54	Error, required values are missing
55	USSD return error
57	Interaction with call control by SIM or MO short message control by SIM, permanent problem
58	Bearer independent protocol error (if class "e" is supported)

<AddResult>^(num)

Additional result

1...255 See 3GPP TS 11.14 [18], 3GPP TS 31.111 [19], ETSI TS 102 223 [20].

<ItemId>^(num)

Item identifier (see 3GPP TS 11.14 [18], 3GPP TS 31.111 [19], ETSI TS 102 223 [20])

<Dcs>^(num)

Data Coding scheme. See 3GPP TS 23.038 [32].

<HexString>^(str)

String in hexadecimal format

<Lang>^(num)

Language given as integer (e.g. 28261 = English)

<AtcResponse>^(str)

AT command response sent from UE to (U)SIM in hexadecimal format

13.4 AT+STKENV SAT Envelope Command

AT+STKENV allows to send an envelope command from the UE or TE to the (U)SIM Application.

Syntax

Test Command

AT+STKENV=?

Response(s)

+STKENV: (list of supported <EnvCmd>s)

OK

Write Command

Menu Selection

AT+STKENV=211,<ItemId>[, <Help>]

Response(s)

OK

ERROR

+CME ERROR: <err>

Write Command

Event download

AT+STKENV=214,<Event>[, <Cause>]

Response(s)

OK

ERROR

+CME ERROR: <err>

PIN → Last

± + -

Parameter Description

<EnvCmd>^(num)

Decimal code that specifies the envelope command.

211	Menu selection
214	Event download

<ItemId>^(num)

Item identifier

<Cause>^(num)

Optional parameter for <Event>= 08 Browser termination

0	User termination
1	Error termination

<Help>^(num)

Optional parameter for <EnvCmd> 211

0	Help is requested
1	Help is not requested

<Event>^(num)

01	Call connected event
04	User activity event
05	Idle screen available event
07	Language selection
08	Browser termination event (currently not supported by EMS31-X)

13.5 AT+STKCC SAT Call Control Notification

The +STKCC URC reports the status call control activities:

Unsolicited Result Codes

URC 1

Reported activity: Set up call

+STKCC: 1, <ResVal>, <Alpha>, <PhoneNumber>, <NumberType>

URC 2

Reported activity: Send Supplementary Service command

+STKCC: 2, <ResVal>, <Alpha>, <SsCode>

URC 3

Reported activity: Send USSD command

+STKCC: 3, <ResVal>, <Alpha>, <UssdCode>

URC 4

Reported activity: Send short message

+STKCC: 4, <ResVal>, <Alpha>, <ToSca>, <Sca>, <ToRa>, <Ra>

Parameter Description

<ResVal>^(num)

Call control result value

0	Allowed
1	Not allowed
2	Allowed, with modification
254	SAT busy (status word SW=x9300)

<Alpha>^(num)

Optional information provided by the (U)SIM as text string

<PhoneNumber>^(str)

Called party phone number

<NumberType>^(num)

0...255 Type of number (ton) and numbering plan identifier (npi), e.g. 129 for national number, 145 for international number

<SsCode>^(str)

Supplementary Service code

<UssdCode>^(str)

USSD code

<ToSca>^(num)

0...255

Type of number (ton) and numbering plan identifier (npi) of Service Center address, e.g. 129 for national number, 145 for international number

<Sca>^(num)

Service Center Address

<ToRa>^(num)

0...255

Type of number (ton) and numbering plan identifier (npi) of Recipient address, e.g. 129 for national number, 145 for international number

<Ra>^(str)

Recipient Address

13.6 AT+STKCNF SAT Proactive Session Status

The status of the SAT proactive session is shown by unsolicited result code:

Unsolicited Result Code

+STKCNF: <ProactCmd>, <Result>, <AddResult>, <Sw1>

Parameter Description

<ProactCmd>^(num)

Decimal code that specifies the proactive command. Same as list provided by [AT+STKPRO](#) plus value 129.

01	Refresh
05	Set up event list
16	Set up call
19	Send SMS
20	Send DTMF
21	Launch browser (currently not supported by EMS31-X)
32	Play tone
33	Display text
34	Get inkey
35	Get input
36	Select item
37	Set up menu
38	Provide local information
40	Set up idle mode text
52	Run AT cmd info
53	Language notification
129	End of proactive session

<Result>^(num)

General result indicated as decimal code. See [AT+STKTR](#)

<AddResult>^(num)

Additional result

1...255 See 3GPP TS 11.14 [18], 3GPP TS 31.111 [19], ETSI TS 102 223 [20].

<Sw1>^(num)

Status word indicated as decimal code. Provides information from the (U)SIM about the execution of the last command. See 3GPP TS 11.11 [14] for list and description of possible values.

0...255

0 Command to (U)SIM was suppressed.

-
- 144 Last command successfully executed and SAT cycle finished. No further PAC required.
144 = HEX 0x90.
- 145 Last command successfully executed. SAT cycle not yet finished. Next PAC is required.
145 = HEX 0x91.

13.7 Examples of how to Configure and Use the SAT

Below you can find selective examples of how to configure and use the SAT Toolkit if Explicit Response (ER) mode is enabled with [AT^SSTA](#).

Examples

EXAMPLE 1

AT^SSTA=1	Set Explicit Response (ER) mode.
OK	
AT^SMSO	Switch off and restart the UE to make the change take effect.
^SMSO: MS OFF	
OK	
^SHUTDOWN	
^SYSSTART	
AT+CPIN="1234"	Entering SIM PIN.
OK	

EXAMPLE 2

SET UP MENU

+STKPRO: 37,0,"Special",1,3,"News",0,0,0	+STKPRO URC displays menu structure.
+STKPRO: 37,0,"Special",2,3,"EMail",0,0,0	
+STKPRO: 37,0,"Special",3,3,"Bank- ing",0,0,0	
AT+STKTR=37,0	Sending terminal response command for PAC 37.
OK	
+STKCNF: 37,0,255,144	+STKCNF URC confirms that command was successfully executed and SAT cycle has finished. No further PAC required.
AT+STKENV=211,2	Sending envelope command for selecting "EMail" option.
OK	
+STKCNF: 129, 0, 255, 144	+STKCNF URC indicates end of proactive session, confirms that last command was successfully executed and SAT cycle has finished. No further PAC required.

EXAMPLE 3

DISPLAY TEXT

+STKPRO: 33,128,4,"546F6F6C6B697420546573742031",0	+STKPRO URC indicates that PAC = 33 (Display text) is received. The sample text given in hexadecimal format means "Toolkit Test 1".
AT+STKTR=33,0	Sending terminal response command for PAC 33.
OK	
+STKCNF: 33,0,255,144	+STKCNF URC confirms that command was successfully executed and SAT cycle has finished. No further PAC required.

EXAMPLE 4

GET INKEY

+STKPRO: 34,0,4,"456E7465722022B22",0	+STKPRO URC indicates that PAC = 34 (Get inkey) is received. The text given in hexadecimal format means that "Enter +" is requested.
AT+STKTR=34,0,0,0,4,"2B"	Terminal response command for PAC 34 is sending "+" as HEX string "2B".

```
OK
+STKCNF: 34,0,255,144
```

+STKCNF URC confirms that command was successfully executed and SAT cycle has finished. No further PAC required.

EXAMPLE 5

GET INPUT

```
+STKPRO:
35,0,4,"456E746572203132333435",5,5,"",0
```

```
AT+STKTR=35,0,0,0,4,"3132333435"
```

```
OK
+STKCNF: 34,0,255,144
```

+STKPRO URC indicates that PAC = 35 (Get input) is received. The text given in hexadecimal format means that "Enter 12345" is requested. Terminal response command for PAC 35 is sending "12345" as HEX string "3132333435".

+STKCNF URC confirms that command was successfully executed and SAT cycle has finished. No further PAC required.

14. Phonebook Commands

The AT commands described in this chapter allow the external application to access the phonebooks located in the EMS31-X's memory or on the attached Subscriber Identity Module (SIM).

14.1 AT+CNUM Read own numbers

[AT+CNUM](#) returns the subscribers own number(s) from the SIM.

Syntax

Test Command	
AT+CNUM=?	
Response(s)	
OK	
Exec Command	
AT+CNUM	
Response(s)	
[+CNUM: [<alpha>], <number> , <type>]	
[+CNUM: ...]	
OK	
ERROR	
+CME ERROR: <err>	
PIN → Last	Reference(s)
+ + -	3GPP TS 27.007 [43]

Parameter Description

<alpha> ^(str)
Optional alphanumeric string associated with <number> .
<number> ^(str)
Phone number in format specified by <type> .
<type> ^(num)
Type of address octet.

15. Miscellaneous Commands

The AT Commands described in this chapter are related to various areas.

15.1 A/ Repeat Previous Command Line

Repeat previous AT command line.

In general, after beginning a command line with character "a" or "A" a second character "t", "T" or "/" has to follow. "/" acts as line terminating character. In case of using a wrong second character, it is necessary to start again with character "a" or "A".

Syntax

Exec Command	
A/	
Response(s)	
PIN → Last	Reference(s)
- + -	V.250

15.2 ATS3 Command Line Termination

[ATS3](#) determines the character recognized by the EMS31-X to terminate an incoming command line. It is also generated for result codes and information text, along with character value set via [ATS4](#).

Syntax

Read Command	
ATS3?	
Response(s)	
<n>	
OK	
Write Command	
ATS3= <n>	
Response(s)	
OK	
ERROR	
PIN → Last	Reference(s)
- + -	ITU-T V.250 [13]

Parameter Description

<n> ^{(num)(&V)(&W)}
Command line termination character. It is not recommended to change this value.
000...013 ^(&F) ...127

Note

- If changing this setting the new value has no effect for "[^SHUTDOWN](#)" URC.

15.3 ATS4 Response Formatting

[ATS4](#) determines the character generated by the EMS31-X for result code and information text, along with the command line termination character set via [ATS3](#).

Syntax

Read Command	
ATS4?	
Response(s)	
<n>	
OK	
Write Command	
ATS4= <n>	
Response(s)	
OK	
ERROR	
PIN → Last	Reference(s)
- + -	ITU-T V.250 [13]

Parameter Description

<n> ^{(num)(&V)(&W)}
Response formatting character. It is not recommended to change this value. 000...010 ^(&F) ...127

15.4 ATS5 Command Line Editing

ATS5 determines the character value used by the EMS31-X to delete the immediately preceding character from the AT command line (i.e. equates backspace key).

Syntax

Read Command	
ATS5?	
Response(s)	
<n>	
OK	
Write Command	
ATS5= <n>	
Response(s)	
OK	
ERROR	
PIN → Last	Reference(s)
- + -	ITU-T V.250 [13]

Parameter Description

<n> ^{(num)(&V)(&W)}
Command line editing character. It is not recommended to change this value. 000...008 ^(&F) ...127

15.5 AT^SBNR Binary Read

Syntax

Test Command

AT^SBNR=?

Response(s)

OK

Read Command

AT^SBNR?

Response(s)

OK

Write Command

If **<type>**= "ciphersuites": Read default values of TLS Cipher Suites for embedded TCP/IP stack:

AT^SBNR="ciphersuites", "default"

Response(s)

(default CYASSL ciphers string)

OK

ERROR

+CME ERROR: **<err>**

Write Command

If **<type>**= "ciphersuites": Read user defined TLS Cipher Suites for embedded TCP/IP stack, or default values if not defined:

AT^SBNR="ciphersuites", "current"

Response(s)

(ciphersuite user file contents)

OK

If no user values defined:

No Cipher Suites file found or loaded

Default Cipher Suites:

(default CYASSL ciphers string)

OK

ERROR

+CME ERROR: **<err>**

Write Command

If **<type>**= "is_cert": Read certificates for secure connection of client IP services

AT^SBNR="is_cert"

Response(s)

^SBNR: **<index>**, **<size>**, **<issuer>**, **<serial-number>**, **<subject>**, **<signature-algorithm>**,
<thumbprint-algorithm>, **<thumbprint>**

[...]

OK

ERROR

+CME ERROR: **<err>**

If certificate file is corrupted:

^SBNR: **<index>**, certificate is corrupted

PIN → Last

- + -

Parameter Description

<type>^(str)

“ciphersuites” Read TLS Cipher Suites for embedded TCP/IP stack
“is_cert” Read certificate details
See [8] for further details. See also AT^SISS, AT^SIND and AT^SBNW.

<index>^(num)

Certificate index
0...10 Index 0 is handled as public client certificate (only 1 allowed). It is intended for client authentication and for protecting access to the (server) certificate store in the UE's NVRAM.
Indexes from 1 to 10 are handled as server certificates.

<size>^(str)

Size of certificate file in bytes

<issuer>^(str)

Certificate issuer

<serial-number>^(str)

Serial number of certificate

<subject>^(str)

Subject of certificate

<signature-algorithm>^(str)

Signature algorithm of certificate

<thumbprint-algorithm>^(str)

Thumbprint algorithm of certificate

<thumbprint>^(str)

Thumbprint of certificate

15.6 AT^SBNW Binary Write

Syntax

Write Command

Cipher suites user file modification:

```
AT^SBNW="ciphersuites", <ciphersuites_length>
```

Response(s)

```
CONNECT
```

```
CIPHERSUITES: SEND FILE ...
```

Indicates that UE has entered binary data mode. Data can be transferred.

When Ciphersuites file data are transferred and updated, or error occurs the UE returns one of following answers:

```
CIPHERSUITES: LENGTH ERROR
```

```
CIPHERSUITES: FILE WRITE ERROR
```

```
CIPHERSUITES: SUITE NOT FOUND
```

```
CIPHERSUITES: UNDEFINED ERROR
```

```
CIPHERSUITES: INTERNAL ERROR
```

```
CIPHERSUITES: I/O ERROR
```

```
OK
```

Write Command

Cipher suites user file removal:

```
AT^SBNW="ciphersuites", 0
```

Response(s)

```
CIPHERSUITES: DELETE CIPHERSUITES FILE...
```

```
CIPHERSUITES: DONE
```

```
OK
```

```
+CME ERROR: <err>
```

Write Command

Certificate management for secure connection of client IP services

```
AT^SBNW="is_cert", <subType>
```

Response(s)

```
CONNECT
```

```
SECURE CMD READY: SEND COMMAND ...
```

(Indicates that UE has entered binary data mode. Secure command data can be transferred.)

When secure command data is processed the UE will send one of following answers:

```
SECURE CMD LENGTH ERROR
```

```
SECURE CMD PUBLIC CERTIFICATE IS CORRUPTED
```

```
SECURE CMD PRIVATE KEY WAS REMOVED
```

```
SECURE CMD SERVICE TIMEOUT ERROR
```

```
SECURE CMD TO MANY DATA ERROR
```

```
SECURE CMD ERROR
```

```
SECURE CMD END OK
```

PIN → Last

- + -

Parameter Description

<type>^(str)

“ciphersuites” Command for IOverAT TLS Cipher Suite file management.
“is_cert” Secure Command Mode (Manage Certificates)
See [8] for further details. See also [AT^SISS](#), [AT^SIND](#) and [AT^SBNR](#).

<subType>^(num)

1 Start Secure Command Block Transfer mode

<ciphersuites_length>^(num)

Number of characters of ciphersuite names.

15.7 AT^SFDL Firmware Download

[AT^SFDL](#) allows the application manufacturer to download EMS31-X firmware into the ME by starting the download process on a customer-designed update tool.

For this purpose the EMS31-X firmware update file must be available in *.USF format. This file is part of each product specific firmware package supplied by Gemalto M2M GmbH. The firmware file consists of records to be transferred one by one from the update tool to the ME.

This manual only describes the syntax of the [AT^SFDL](#) command. Details on technical requirements and steps to prepare the host application for this download solution can be found in "[Application Note 16: Updating EMS31-X Firmware](#)" [7]. An example for developing an appropriate update tool is included.

The command causes the ME to reset and enter the firmware download mode (this may take some milliseconds). After entering the download mode the ME sends the start pattern HEX 0x01 ("ANSWER_OK") to the update tool to indicate its ready state. Next, the update tool shall start to send the records of the firmware file. Each record received by the ME is acknowledged to the update tool. Once all records are successfully received, the ME shuts down automatically.

If a valid firmware is still installed, but the [AT^SFDL](#) command is issued without sending any firmware afterwards the ME will stay in ready state. In this case it must be switched off.

Syntax

Test Command
AT^SFDL=?
Response(s)
OK
Exec Command
AT^SFDL
Response(s)
OK
0x01
PIN → Last
- + +

15.8 AT^SFDOA Firmware Download

AT^SFDOA allows application manufacturers to upgrade the UE's firmware over-the-air. The upgrade procedure comprises downloading the firmware from an external server, updating the firmware, and rebooting the UE to activate the new firmware.

Before calling **AT^SFDOA**, a FOTA related PDP context needs to be defined and activated using **AT+CGDCONT**, as well as either **AT+CGACT** or **AT^SICA**. For Verizon networks the 3rd PDP context is defined by default as Internet context, and should be activated with either **AT+CGACT=1,3** or **AT^SICA=1,3**.

The write command triggers the UE upgrade with a firmware fetched from an external server. To finalize the system upgrade, any kind of UE reboot is required. **<reboot>** configures an automatic reboot after the downloaded firmware has been validated and installed. The read command returns the current state of upgrade process, and the test command returns the supported parameters and value ranges.

The parameters **<reboot>**, **<progress_report>** and **<command_setting>** are optional.

A firmware upgrade can be launched in the foreground or background as specified with **<command_setting>**. The user can cancel the upgrade by sending the cancel command at any time before UE reboot. If running in the background, the URC "**^SFDOA**": "installed" is generated as soon as the firmware download is complete and verified, stating that the UE is ready for reboot. The parameter **<progress_report>** configures the presentation of the URC "**^SFDOA**": "downloading".

Syntax

Test Command

AT^SFDOA=?

Response(s)

^SFDOA: (max string length of **<firmware_url>**s)(list of supported **<reboot>**s)(range of supported **<progress_report>**s)(list of supported **<command_setting>**s)
OK

Read Command

AT^SFDOA?

Response(s)

^SFDOA: **<upgrade_status>**[, **<percentage_downloaded>**]
OK
ERROR
+CME ERROR: **<err>**

Write Command

AT^SFDOA=**<firmware_url>**[, **<reboot>**[, **<progress_report>**[, **<command_setting>**]]

Response(s)

^SFDOA: **<upgrade_status>**[, **<percentage_downloaded>**]
OK
ERROR
+CME ERROR: **<err>**

PIN → Last

- + +

Unsolicited Result Code

^SFDOA: **<upgrade_status>**[, **<percentage_downloaded>**]

The URC applies only to the asynchronous upgrade process configured with **AT^SFDOA**, parameter **<command_setting>**=1. It is issued every time the upgrade status changes or a further section of the new firmware (corresponding to the percentage configured with **<progress_report>**) was downloaded.

Parameter Description

`<firmware_url>`^(str)

Specifies the firmware's URL (compliant with RFC1738) in the format: "protocol://user:password@host:port/path".

An example would be: "https://gmt0:pass@www.test.com/private/firmware.image".

Please ask Gemalto for URL and firmware image details.

`<reboot>`^(num)

Reboot after firmware update.

1 Reboot automatically after the firmware is installed. Default setting.

`<progress_report>`^(num)

Report download progress.

0 Does not report the download progress.

1...100 Reports the download progress with the URC "`^SFDOA`": "downloading", `<percentage_downloaded>`.

`<command_setting>`^(num)

Upgrade start.

0^(D) Starts upgrade in the foreground. Default setting.

1 Starts upgrade in the background. Launches the upgrade and returns immediately with OK if the upgrade was started correctly, or with +CME ERROR: `<err>`. The upgrade progress is reported through the URC "`^SFDOA`".

2 Cancel upgrade if any, or do nothing, then return OK.

`<upgrade_status>`^(str)

Informs about the current firmware upgrade state.

"downloading" Upgrade firmware image is downloading. The state information is followed by the parameter `<percentage_downloaded>`. This parameter is displayed only if `<progress_report>` has been set to report the download progress.

"updating" Upgrade was triggered. The module will restart and go into SW Updater mode to update the firmware.

"error" Firmware file download has been finished with particular error which code follows as `AT^SFDOA` error code (please see following chapter).

"canceled" Upgrade has been canceled.

"idle" No upgrade running.

`<percentage_downloaded>`^(num)

Percentage of firmware already downloaded.

1...100 Percentage of new firmware image already downloaded.

15.8.1 SFDOA Error Codes

Table 15.1: General "SFDOA Error" Codes

<err> Code	Text
528	Upgrade failed: General error
529	Upgrade failed: Corrupted image
531	Upgrade failed: Network error
532	Upgrade failed: Upgrade already in progress
533	Upgrade cancel failed: No upgrade in progress
534	Upgrade failed: Canceled by the user
535	Upgrade failed: File error, e.g. no space left on file system

15.8.2 Example: Upgrading Firmware from an External Host

The below example shows how to download, install, and activate a new firmware from an external server over-the-air:

```
AT^SFDOA="ftp://192.168.15.170/firmware.image",1,25,0
^SFDOA: "downloading",0
^SFDOA: "downloading",25
^SFDOA: "downloading",50
^SFDOA: "downloading",75
^SFDOA: "downloading",100
^SFDOA: "updating"
OK
```

16. Hardware related Commands

All AT commands described in this chapter are related to the hardware interface of the EMS31-X. Further information regarding this interface is available in the "EMS31-X Hardware Interface Description" [2].

16.1 AT+CCLK Real Time Clock

The [AT+CCLK](#) write command sets the Real Time Clock in the UE.

The [AT+CCLK](#) read command shows the time and, if enabled with [AT+CTZU](#), time zone information.

Syntax

Test Command	
AT+CCLK=?	
Response(s)	
OK	
Read Command	
AT+CCLK?	
Response(s)	
+CCLK: <time>	
OK	
Write Command	
AT+CCLK=<time>	
Response(s)	
OK	
ERROR	
+CME ERROR: <err>	
PIN → Last	Reference(s)
- + -	3GPP TS 27.007 [43]

Parameter Description

<time>^(str)

Format is "yy/mm/dd,hh:mm:ss+zz", where the characters indicate the two last digits of the year, followed by month, day, hour, minutes, seconds and time zone. For example 6th of July 2016, 22:10:00 GMT+2 hours equals to "16/07/06,22:10:00+08".

Factory default is "70/01/01,00:00:00+00".

Time zone information zz:

Automatic time zone information update is effective only if enabled with [AT+CTZU](#) and if the network supports time zone information. When a time zone update occurs additional time zone information will be appended to parameter <time>.

Time zone tz is given as a positive (east) or negative (west) offset from UTC in units of 15 minutes: Format is "yy/mm/dd,hh:mm:ss+zz" or "yy/mm/dd,hh:mm:ss-zz".

If not enabled or if the UE is not registered with a network the value will be only +00.

In addition, time zone updating can be reported by URCs enabled with [AT+CTZR](#) and [AT^SIND](#).

Note

- `<time>` will be reset to its factory default when the UE reboots via `AT+CFUN=1,1` or enters Power Down mode via `AT^SMSO`.

16.2 AT^SBV Battery/Supply Voltage

[AT^SBV](#) allows to monitor the supply (or battery) voltage of the module. The voltage is periodically measured. The displayed value is averaged.

The measurement is related to the reference points of BATT+ and GND. For details on the reference points please refer to the Hardware Interface Description [2]. If the measured average voltage drops below or rises above the given voltage thresholds the UE will report alert messages by sending the "^SBC" URCs listed in Section 1.7.1, [Common URCs](#).

Syntax

Test Command

```
AT^SBV=?
```

Response(s)

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

Exec Command

```
AT^SBV
```

Response(s)

```
^SBV: <Voltage>
```

```
OK
```

```
ERROR
```

```
+CME ERROR: <err>
```

PIN → Last

- + -

Parameter Description

<Voltage>^(num)

Supply (or battery) voltage in mV

16.3 AT^SCTM Critical Operating Temperature Monitoring

AT^SCTM allows to monitor the operating temperature range of the EMS31-X device. Refer to "EMS31-X Hardware Interface Description" [2] for specifications on critical temperature ranges. To avoid damage the module will shut down once the critical temperature is exceeded. The procedure is equivalent to the power-down initiated with **AT^SMSO**.

The **AT^SCTM** write command controls the presentation of URCs to report critical operating temperature limits. Use parameter **<UrcMode>** to enable (1) and disable (0) URC presentation.

Each time after the EMS31-X was switched on there is a guard period of 120 seconds. Until expiry of the guard timer, automatic thermal shutdown will be deferred and the presentation of all ^SCTM URC types is enabled even though **<UrcMode>** equals "0".

URCs indicating alert levels "1" or "-1" are intended to enable the user to take precautions, such as protect the EMS31-X from exposure to extreme conditions, or save or back up data etc. Except during the initial guard period after startup, the presentation of level "1", "-1" or "0" URCs depends on **<UrcMode>**.

Level "2" or "-2" URCs are followed by immediate shutdown except during the initial guard period. The presentation of these URCs is always enabled, i.e. they will be output even though **<UrcMode>** equals "0".

AT^SCTM read command returns:

- The URC presentation mode.
- Information about the current temperature range of the EMS31-X device.
- The board temperature (in degree Celsius) if parameter **<tempCtrl>=1**.

Syntax

Test Command

```
AT^SCTM=?
```

Response(s)

```
^SCTM: (list of supported <UrcMode>s)[, (list of supported <tempCtrl>s)]  
OK
```

Read Command

```
AT^SCTM?
```

Response(s)

```
^SCTM: <UrcMode>, <UrcCause>[, <temp>]  
OK  
ERROR  
+CME ERROR: <err>
```

Write Command

```
AT^SCTM=<UrcMode>[, <tempCtrl>]
```

Response(s)

```
OK  
ERROR  
+CME ERROR: <err>
```

PIN → Last

- + -

Unsolicited Result Codes

URC 1

URCs will be sent to the TE when the temperature reaches or exceeds the critical level, or when it is back to normal.

^SCTM_B: <UrcCause>

URC 2

URC indicated after "^SCTM_B" URC with <UrcCause> value 2 or -2 before the UE switches off.

^SHUTDOWN

Parameter Description

<UrcMode>^(num)

URC presentation mode

0 ^(P)	Disable URC presentation (except for <UrcCause> equal to -2 or +2).
1	Enable URC presentation.

<UrcCause>^(num)

-2	Below lowest temperature limit (causes immediate switch-off)
-1	Below low temperature alert limit
0	Normal operating temperature
1	Above upper temperature alert limit
2	Above uppermost temperature limit (causes immediate switch-off)

<tempCtrl>^(num)

0 ^(P)	Suppress output of <temp> in read command.
1	Output <temp> in read command.

<temp>^(num)

Board temperature in Celsius. Is comprised between the lowest temperature warning level and the uppermost temperature warning level.

Examples

EXAMPLE 1

URCs issued when the operating temperature is out of range:

^SCTM_B: 1	Caution: Module close to overtemperature limit.
^SCTM_B: 2	Alert: Module is above overtemperature limit and switches off.
^SCTM_B: -1	Caution: Module close to undertemperature limit.
^SCTM_B: -2	Alert: Module is below undertemperature limit and switches off.

EXAMPLE 2

URCs issued when the temperature is back to normal (URC is output once):

^SCTM_B: 0	Module back to normal temperature.
------------	------------------------------------

16.4 AT^SLED LED Feature

AT^SLED controls the LED function provided by the EMS31-X's STATUS pin, which acts as an output and can be used to control a connected LED.

The electrical specifications of the status pin and advice on how to connect the LED circuit can be found in [2]. The LED indicates the operating states listed below:

Table 16.1: EMS31-X Status and Mode Indication via LED

EMS31-X Status	<mode>=1	<mode>=2
LTE data transfer	Permanently on	10 ms on / 1990 ms off
UE registered to a network. No call, no data transfer	Permanently on	1280 ms on / 3840 ms off
Limited Network Service (e.g. because no SIM/USIM, no PIN or during network search)	500ms on / 500 ms off	500ms on / 500 ms off

Syntax

```

Test Command
AT^SLED=?
Response(s)
^SLED: (list of supported <mode>s)
OK

Read Command
AT^SLED?
Response(s)
^SLED: <mode>
OK

Write Command
AT^SLED=<mode>
Response(s)
OK
ERROR
+CME ERROR: <err>

PIN → Last
- + -
    
```

Parameter Description

<mode> ^{(num)(&V)(&W)}	
0(&F)	LED feature is disabled.
1(D)	LED lights steadily when the UE is registered to the network and either awake or in power saving state.
2	LED is flashing when the UE is in Limited Service or registered with a network and either awake or in power saving state.

Note

- The LED functionality is effective only when `AT+CFUN=1`. It is disabled when `AT+CFUN=0` or `4`.

17. Appendix

17.1 Available AT Commands and Dependency on SIM PIN

- ∅ ... Command not available
- ... Command does not require PIN1
- + ... Command requires PIN1
- ± ... Command sometimes requires PIN1

Table 17.1: Available AT Commands and Dependency on SIM PIN

AT Command	Exec	Test	Read	Write
Configuration Commands				
AT&F	-	∅	∅	∅
AT&V	-	∅	∅	∅
AT&W	-	∅	∅	∅
ATQ	-	∅	∅	∅
ATV	-	∅	∅	∅
ATZ	-	∅	∅	∅
AT+CFUN	∅	-	-	-
AT^SMSO	-	-	∅	∅
AT+CMEE	∅	-	-	-
AT+CSCS	∅	-	-	-
AT^SCFG	∅	-	-	-
AT^SPOW	∅	-	-	-
Status Control Commands				
AT+CEER	-	-	∅	-
AT^SIND	∅	-	-	-
AT+CPAS	-	-	∅	∅
AT+WS46	∅	-	-	-
Serial Interface Control Commands				
AT\Q	-	∅	∅	∅
AT&C	-	∅	∅	∅
AT&D	-	∅	∅	∅
AT&S	-	∅	∅	∅
ATE	-	∅	∅	∅
AT+ICF	∅	-	-	-
AT+IPR	∅	-	-	-
AT+CMUX	∅	-	-	-
Identification Commands				
ATI	-	∅	∅	∅

17.1 Available AT Commands and Dependency on SIM PIN

AT Command	Exec	Test	Read	Write
AT+CGMI	-	-	∅	∅
AT+CGMM	-	-	∅	∅
AT+CGMR	-	-	∅	∅
AT+CGSN	-	-	∅	-
AT+GSN	-	-	∅	-
AT+CIMI	+	+	∅	∅
AT^SINFO	∅	-	-	-
Security Commands				
AT+CPIN	∅	-	-	-
AT+CLCK	∅	-	∅	-
AT+CPWD	∅	+	∅	+
Call related Commands				
ATH	+	∅	∅	∅
ATO	-	∅	∅	∅
+++	-	∅	∅	∅
Network Service Commands				
AT+COPN	-	-	∅	∅
AT+COPS	∅	±	±	±
AT+CESQ	+	+	∅	∅
AT+CPOL	∅	+	+	+
AT+CPLS	∅	+	+	+
AT+CTZR	∅	-	-	-
AT+CTZU	∅	-	-	-
AT+CPSMS	∅	-	-	-
AT^SMONI	-	-	∅	-
AT^SMONP	-	-	∅	-
AT^SNMON	∅	-	∅	-
AT+CEDRXS	∅	-	-	-
AT+CEDRXRDP	-	-	∅	∅
AT^SNLWM2M	∅	-	∅	-
Internet Service Commands				
AT^SICA	∅	+	+	+
AT^SICS	∅	-	-	-
AT^SIPS	∅	-	∅	-
AT^SISS	∅	-	-	-
AT^SISI	∅	-	-	-
AT^SISO	∅	-	-	+
AT^SISC	∅	-	∅	+
AT^SISR	∅	-	∅	+

17.1 Available AT Commands and Dependency on SIM PIN

AT Command	Exec	Test	Read	Write
AT^SISW	∅	-	∅	+
AT^SIST	∅	-	∅	-
AT^SISH	∅	-	∅	-
AT^SISX	∅	+	∅	+
AT^SISE	∅	-	∅	-
Packet Domain Related Commands				
AT+CGACT	∅	+	+	+
AT+CGATT	∅	+	+	+
AT+CGDCONT	∅	-	-	-
AT+CGDSCONT	∅	-	-	-
AT+CGCMOD	∅	+	∅	+
AT+CEREG	∅	-	-	-
AT+CGEREP	∅	+	+	+
AT+CGPADDR	+	+	∅	+
AT+CGPIAF	∅	+	+	+
AT+CGEQOSRDP	+	+	∅	+
AT+CGCONTRDP	+	+	∅	+
AT+CGSCONTRDP	∅	+	∅	+
AT+CGTFT	∅	-	-	-
AT+CGTFTTRDP			∅	
AT+CGAUTH	∅	-	-	-
AT+CGDATA	+	+	∅	+
AT+CGSMS	∅	+	+	+
ATD*99#	+	∅	∅	∅
Short Message Service (SMS) Commands				
AT+CMGC	∅	+	∅	+
AT+CMGD	∅	+	∅	+
AT+CMGF	∅	-	-	-
AT+CMGL	+	+	∅	+
AT+CMGR	∅	+	∅	+
AT+CMGS	∅	+	∅	+
AT+CMGW	+	+	∅	+
AT+CMSS	∅	+	∅	+
AT+CNMA	+	+	∅	+
AT+CNMI	∅	+	+	+
AT+CPMS	∅	+	+	+
AT+CSCA	∅	+	+	+
AT+CSDH	∅	-	-	-
AT+CSMP	∅			
AT+CSMS	∅	+	+	+

17.1 Available AT Commands and Dependency on SIM PIN

AT Command	Exec	Test	Read	Write
AT^SMGL	+	+	∅	+
AT^SMGR	∅	+	∅	+
AT+CSAS	∅	-	-	-
AT+CRES	∅	-	-	-
(U)SIM related Commands				
AT+CCID	-	-	-	∅
AT+CRSM	∅	-	∅	-
AT+CSIM	∅	-	∅	-
AT+CCHO	∅	-	∅	-
AT+CCHC	∅	-	∅	-
AT+CGLA	∅	-	∅	-
(U)SIM Application Toolkit (SAT) Commands				
AT^SSTA	∅	-	-	-
AT+STKPRO	∅	-	∅	∅
AT+STKTR	∅	±	∅	±
AT+STKENV	∅	±	∅	±
AT+STKCC	∅	∅	∅	∅
AT+STKCNF	∅	∅	∅	∅
Phonebook Commands				
AT+CNUM	+	+	∅	∅
Miscellaneous Commands				
A/	-	∅	∅	∅
ATS3	∅	∅	-	-
ATS4	∅	∅	-	-
ATS5	∅	∅	-	-
AT^SBNR	∅	-	-	-
AT^SBNW	∅	∅	∅	-
AT^SFDL	-	-	∅	∅
AT^SFDOA	∅	-	-	-
Hardware related Commands				
AT+CCLK	∅	-	-	-
AT^SBV	-	-	∅	∅
AT^SCTM	∅	-	-	-
AT^SLED	∅	-	-	-

17.2 Availability of AT Commands Depending on Operating Mode of ME

17.2 Availability of AT Commands Depending on Operating Mode of ME

- ... AT command not supported
 - + ... AT command supported
 - ± ... AT command partially supported
- See description of AT command for details.

Table 17.2: Availability of AT Commands Depending on Operating Mode of ME

AT Command	Normal Mode	→
Configuration Commands		
AT&F	+	
AT&V	+	
AT&W	+	
ATQ	+	
ATV	+	
ATZ	+	
AT+CFUN	+	
AT^SMSO	+	
AT+CMEE	+	
AT+CSCS	+	
AT^SCFG	+	±
AT^SPOW	+	+
Status Control Commands		
AT+CEER	+	
AT^SIND	+	
AT+CPAS	+	
AT+WS46	+	
Serial Interface Control Commands		
AT\Q	+	
AT&C	+	
AT&D	+	
AT&S	+	
ATE	+	
AT+ICF	+	
AT+IPR	+	
AT+CMUX	+	+
Identification Commands		
ATI	+	
AT+CGMI	+	
AT+CGMM	+	
AT+CGMR	+	

17.2 Availability of AT Commands Depending on Operating Mode of ME

AT Command	Normal Mode	→
AT+CGSN	+	
AT+GSN	+	
AT+CIMI	+	
AT^SINFO	+	
Security Commands		
AT+CPIN	+	+
AT+CLCK	+	±
AT+CPWD	+	±
Call related Commands		
ATH	+	-
ATO	+	-
+++	+	
Network Service Commands		
AT+COPN	+	
AT+COPS	+	±
AT+CESQ	+	-
AT+CPOL	+	
AT+CPLS	+	-
AT+CTZR	+	
AT+CTZU	+	
AT+CPSMS	+	-
AT^SMONI	+	-
AT^SMONP	+	-
AT^SNMON	+	±
AT+CEDRXS	+	
AT+CEDRXRDP	+	
AT^SNLWM2M	+	+
Internet Service Commands		
AT^SICA	+	±
AT^SICS	+	
AT^SIPS	+	
AT^SISS	+	
AT^SISI	+	
AT^SISO	+	-
AT^SISC	+	-
AT^SISR	+	-
AT^SISW	+	-
AT^SIST	+	-
AT^SISH	+	-

17.2 Availability of AT Commands Depending on Operating Mode of ME

AT Command	Normal Mode	→
AT^SISX	+	-
AT^SISE	+	-
Packet Domain Related Commands		
AT+CGACT	+	±
AT+CGATT	+	±
AT+CGDCONT	+	+
AT+CGDSCONT	+	+
AT+CGCMOD	+	±
AT+CEREG	+	
AT+CGEREP	+	+
AT+CGPADDR	+	+
AT+CGPIAF	+	
AT+CGEQOSRDP	+	-
AT+CGCONTRDP	+	-
AT+CGSCONTRDP	+	-
AT+CGTFT	+	
AT+CGTFTRDP	+	-
AT+CGAUTH	+	+
AT+CGDATA	+	±
AT+CGSMS	+	+
ATD*99#	+	-
Short Message Service (SMS) Commands		
AT+CMGC	+	-
AT+CMGD	+	+
AT+CMGF	+	+
AT+CMGL	+	+
AT+CMGR	+	+
AT+CMGS	+	-
AT+CMGW	+	+
AT+CMSS	+	-
AT+CNMA	+	-
AT+CNMI	+	+
AT+CPMS	+	
AT+CSCA	+	
AT+CSDH	+	
AT+CSMP	+	
AT+CSMS	+	
AT^SMGL	+	
AT^SMGR	+	
AT+CSAS	+	+

17.2 Availability of AT Commands Depending on Operating Mode of ME

AT Command	Normal Mode	→
AT+CRES	+	+
(U)SIM related Commands		
AT+CCID	+	
AT+CRSM	+	
AT+CSIM	+	
AT+CCHO	+	
AT+CCHC	+	
AT+CGLA	+	
(U)SIM Application Toolkit (SAT) Commands		
AT^SSTA	+	+
AT+STKPRO	+	+
AT+STKTR	+	+
AT+STKENV	+	+
AT+STKCC	+	+
AT+STKCNF	+	+
Phonebook Commands		
AT+CNUM	+	+
Miscellaneous Commands		
A/	+	
ATS3	+	
ATS4	+	
ATS5	+	
AT^SBNR	+	
AT^SBNW	+	
AT^SFDL	+	+
AT^SFDOA	+	+
Hardware related Commands		
AT+CCLK	+	
AT^SBV	+	
AT^SCTM	+	
AT^SLED	+	

17.3 AT Command Settings storable with AT&W

Table 17.3: Settings Stored to User Profile on ASC0

AT Command	Stored Parameters
Configuration Commands	
ATQ	<n>
ATV	<value>
AT+CMEE	<errMode>
Serial Interface Control Commands	
AT\Q	<n>
AT&C	<value>
AT&D	<value>
AT&S	<value>
ATE	<value>
AT+ICF	<format>, <parity>
Network Service Commands	
AT+COPS	<format>
Packet Domain Related Commands	
AT+CEREG	<n>
Short Message Service (SMS) Commands	
AT+CMGF	<mode>
AT+CNMI	<mode>, <mt>, <bm>, <ds>, <bfr>
AT+CSDH	<show>
AT+CSMS	<service>
Miscellaneous Commands	
ATS3	<n>
ATS4	<n>
ATS5	<n>
Hardware related Commands	
AT^SLED	<mode>

17.4 Factory Default Settings Restorable with AT&F

Table 17.4: Factory Default Settings Restorable with AT&F

AT Command	Factory Defaults
Configuration Commands	
ATQ	<n>=0
ATV	<value>=1
AT+CMEE	<errMode>=0
AT+CSCS	<chset>="GSM"
Serial Interface Control Commands	
AT\Q	<n>=3
AT&C	<value>=1
AT&D	<value>=2
AT&S	<value>=0
ATE	<value>=1
AT+ICF	<format>=3
Network Service Commands	
AT+COPS	<format>=0
Packet Domain Related Commands	
AT+CEREG	<n>=0
Short Message Service (SMS) Commands	
AT+CMGF	<mode>=0
AT+CNMI	<mode>=1, <mt>=0, <bm>=0, <ds>=0, <bfr>=0
AT+CSDH	<show>=0
AT+CSMS	<service>=0
Miscellaneous Commands	
ATS3	<n>=013
ATS4	<n>=010
ATS5	<n>=008
Hardware related Commands	
AT^SLED	<mode>=0

17.5 Summary of Unsolicited Result Codes (URC)

Table 17.5: Summary of Unsolicited Result Codes (URC)

AT Command	URC
Unsolicited Result Code Presentation	
	<code>^SYSSTART</code>
	<code>^SBC: Undervoltage Warning</code>
	<code>^SBC: Undervoltage Shutdown</code>
	<code>^SBC: Overvoltage Warning</code>
	<code>^SBC: Overvoltage Shutdown</code>
Configuration Commands	
<code>AT^SMSO</code>	<code>^SHUTDOWN</code>
Status Control Commands	
<code>AT^SIND</code>	<code>+CIEV: <indDescr>, <indValue></code>
<code>AT^SIND</code>	<code>+CIEV: <indDescr></code>
<code>AT^SIND</code>	<code>+CIEV: <indDescr>, <indValue>, <eonsOperator>, <servProvider></code>
<code>AT^SIND</code>	<code>+CIEV: <indDescr>, <nitzUT>, <nitzTZ>, <nitzDST></code>
<code>AT^SIND</code>	<code>+CIEV: <indDescr>, <indValue>, <lstaDrxCnt>, <lstaRsrp>, <lstaRsrq>, <lstaRssi></code>
<code>AT^SIND</code>	<code>+CIEV: <indDescr>, <indValue>, <lstaFrRep>, <lstaFrScnd>, <lstaFrStart>, <lstaFrEnd>, <lstaMin>, <lstaMax>, <lstaMean>, <lstaGrade></code>
<code>AT^SIND</code>	<code>+CIEV: <indDescr>, <srvProfileId>, <issuer>, <serialNumber>, <subject>, <signatureAlgorithm>, <thumbprintAlgorithm>, <thumbprint></code>
<code>AT^SIND</code>	<code>+CIEV: <indDescr>, <catmcovBitMask>, <coverage_ds></code>
<code>AT^SIND</code>	<code>+CIEV: <indDescr>, <provMm>, <provCur>[, <provNext>]</code>
Network Service Commands	
<code>AT+CTZR</code>	<code>+CTZV: <timezone></code>
<code>AT+CTZR</code>	<code>+CTZE: <timezone>, <dst>[, <time>]</code>
<code>AT+CEDRXS</code>	<code>+CEDRXP:<AcT-type>[, <Requested_eDRX_value>[, <NW_provided_eDRX_value>[, <Paging_time_window>]]]</code>
Internet Service Commands	
<code>AT^SISR</code>	<code>^SISR: <srvProfileId>, <urcCauseId></code>
<code>AT^SISW</code>	<code>^SISW: <srvProfileId>, <urcCauseId></code>
Internet Service URC " <code>^SIS</code> "	<code>^SIS: <srvProfileId>, <urcCause>[, [<urcInfoId>][, <urcInfoText>]]</code>
Packet Domain Related Commands	
<code>AT+CEREG</code>	<code>+CEREG: <stat></code>
<code>AT+CEREG</code>	<code>+CEREG: <stat>[, <tac>][, <ci>][, <AcT>]</code>
<code>AT+CEREG</code>	<code>+CEREG: <stat>[, <tac>][, <ci>][, <AcT>][, , [, <ActiveTime>[, <Periodic-TAU>]]]]</code>

AT Command	URC
AT+CGEREP	+CGEV: NW DEACT <pcid>, <cid>, <event-type>
AT+CGEREP	+CGEV: ME DEACT <pcid>, <cid>, <event-type>
AT+CGEREP	+CGEV: NW DETACH
AT+CGEREP	+CGEV: ME DETACH
AT+CGEREP	+CGEV: PDN DEACT <cid>
AT+CGEREP	+CGEV: ME ACT <pcid>, <cid>, <event-type>
AT+CGEREP	+CGEV: NW MODIFY <cid>, <change-reason>, <event-type>
AT+CGEREP	+CGEV: NW PDN ACT <cid>
AT+CGEREP	+CGEV: NW PDN DEACT <cid>
AT+CGEREP	+CGEV: ME PDN DEACT <cid>
AT+CGEREP	+CGEV: NW ACT <pcid>, <cid>, <event-type>
AT+CGEREP	+CGEV: ME MODIFY <cid>, <change-reason>, <event-type>
AT+CGEREP	+CGEV: ME PDN ACT <cid>[, <reason>]
Short Message Service (SMS) Commands	
AT+CNMI	+CMTI: <mem3>, <index>
AT+CNMI	+CMT: <length><CR><LF><pdu>
AT+CNMI	+CMT: <oa>, <,>, <scts>[, <tooa>, <fo>, <pid>, <dcsc>, <sca>, <tosca>, <length>]<CR><LF><data>
AT+CNMI	+CDS: <length><CR><LF><pdu>
AT+CNMI	+CDS: <fo>, <mr>[, <ra>][, <tora>], <scts>, <dt>, <st>
AT+CNMI	+CDSI: <mem3>, <index>
(U)SIM Application Toolkit (SAT) Commands	
AT+STKPRO	+STKPRO: 01, <CmdQualifier>
AT+STKPRO	+STKPRO: 05, <EventList>
AT+STKPRO	+STKPRO: 16, <DialNumber>, <Subaddr>, <CmdQualifier>, <Alpha1>, <IconId1>, <Alpha2>, <IconId2>
AT+STKPRO	+STKPRO: 19, <Alpha>, <IconId>, <RefNumber>
AT+STKPRO	+STKPRO: 20, <Alpha>, <IconId>, <DtmfStr>
AT+STKPRO	+STKPRO: 21, <Url>, <Alpha>, <IconId>
AT+STKPRO	+STKPRO: 32, <Tone>, <TimeUnit>, <Interval>, <Alpha>, <IconId>
AT+STKPRO	+STKPRO: 33, <CmdQualifier>, <Dcs>, <HexString>, <IconId>
AT+STKPRO	+STKPRO: 34, <CmdQualifier>, <Dcs>, <HexString>, <IconId>
AT+STKPRO	+STKPRO: 35, <CmdQualifier>, <Dcs>, <HexString>, <MaxRespLen>, <MinRespLen>, <DefaultText>, <IconId>
AT+STKPRO	+STKPRO: 36, <CmdQualifier>, <Alpha>, <ItemId>, <TotalItems>, <ItemText>, <NextAction>, <DefaultItem>, <IconId>, <IconIdListElem>
AT+STKPRO	+STKPRO: 37, <CmdQualifier>, <Alpha>, <ItemId>, <TotalItems>, <ItemText>, <NextAction>, <IconId>, <IconIdListElem>
AT+STKPRO	+STKPRO: 38, <CmdQualifier>
AT+STKPRO	+STKPRO: 40, <Dcs>, <HexString>, <IconId>
AT+STKPRO	+STKPRO: 52, <CmdQualifier>, <Alpha>, <IconId>, <AtCommand>
AT+STKPRO	+STKPRO: 53, <Lang>

AT Command	URC
AT+STKCC	+STKCC: 1, <ResVal>, <Alpha>, <PhoneNumber>, <NumberType>
AT+STKCC	+STKCC: 2, <ResVal>, <Alpha>, <SsCode>
AT+STKCC	+STKCC: 3, <ResVal>, <Alpha>, <UssdCode>
AT+STKCC	+STKCC: 4, <ResVal>, <Alpha>, <ToSca>, <Sca>, <ToRa>, <Ra>
AT+STKCNF	+STKCNF: <ProactCmd>, <Result>, <AddResult>, <Sw1>
Miscellaneous Commands	
AT^SFDOA	^SFDOA: <upgrade_status>[, <percentage_downloaded>]
Hardware related Commands	
AT^SCTM	^SCTM_B: <UrcCause>
AT^SCTM	^SHUTDOWN

17.6 Alphabetical List of AT Commands

Table 17.6: Alphabetical List of AT Commands

AT Command	Description	Section and Page
+++	Switch from data mode or PPP online mode to command mode	Section 7.3, page 103
A/	Repeat Previous Command Line	Section 15.1, page 290
AT&C	Set Data Carrier Detect (DCD) Line Mode	Section 4.2, page 72
AT&D	Set Data Terminal Ready (DTR) Line Mode	Section 4.3, page 73
AT&F	Reset AT Command Settings to Factory Default Values	Section 2.1, page 26
AT&S	Set Data Set Ready (DSR) Line Mode	Section 4.4, page 74
AT&V	Display current configuration	Section 2.2, page 27
AT&W	Store AT Command Settings to User Defined Profile	Section 2.3, page 29
AT+CCHC	Close logical channel	Section 12.5, page 263
AT+CCHO	Open logical channel	Section 12.4, page 262
AT+CCID	(U)SIM Card Identification Number	Section 12.1, page 257
AT+CCLK	Real Time Clock	Section 16.1, page 302
AT+CEDRXRDP	Read dynamic eDRX parameters	Section 8.13, page 130
AT+CEDRXS	eDRX Setting	Section 8.12, page 127
AT+CEER	Extended Error Report	Section 3.1, page 57
AT+CEREG	EPS Network Registration Status	Section 10.6, page 199
AT+CESQ	Extended Signal Quality	Section 8.3, page 108
AT+CFUN	Functionality Level	Section 2.7, page 33
AT+CGACT	PDP context activate or deactivate	Section 10.1, page 189
AT+CGATT	PS attach or detach	Section 10.2, page 191
AT+CGAUTH	Define PDP Context Authentication Parameters	Section 10.15, page 219
AT+CGCMOD	PDP Context Modify	Section 10.5, page 198
AT+CGCONTRDP	PDP context read dynamic parameters	Section 10.11, page 210
AT+CGDATA	Enter data state	Section 10.16, page 221
AT+CGDCONT	Define PDP Context	Section 10.3, page 192
AT+CGDSCONT	Define Secondary PDP Context	Section 10.4, page 196
AT+CGEQOSRDP	EPS Quality of Service Read Dynamic Parameters	Section 10.10, page 208
AT+CGEREP	Packet Domain Event Reporting	Section 10.7, page 201
AT+CGLA	Generic logical channel access	Section 12.6, page 264
AT+CGMI	Request manufacturer identification	Section 5.2, page 84
AT+CGMM	Request model identification	Section 5.3, page 85
AT+CGMR	Request revision identification of software status	Section 5.4, page 86
AT+CGPADDR	Show PDP Address	Section 10.8, page 204
AT+CGPIAF	Select Printing IP address format	Section 10.9, page 206
AT+CGSCONTRDP	Secondary PDP Context Read Dynamic Parameters	Section 10.12, page 212
AT+CGSMS	Select Service for MO Short messages	Section 10.17, page 223
AT+CGSN	Request International Mobile Equipment Identity (IMEI)	Section 5.5, page 87
AT+CGTFT	Traffic Flow Template	Section 10.13, page 213

17.6 Alphabetical List of AT Commands

AT Command	Description	Section and Page
AT+CGTFTRDP	Traffic Flow Template Read Dynamic Parameters	Section 10.14, page 216
AT+CIMI	Request International Mobile Subscriber Identity (IMSI)	Section 5.7, page 91
AT+CLCK	Facility lock	Section 6.2, page 96
AT+CMEE	Error Message Format	Section 2.9, page 36
AT+CMGC	Send SMS Command	Section 11.2, page 229
AT+CMGD	Delete short message	Section 11.3, page 230
AT+CMGF	Select SMS message format	Section 11.4, page 231
AT+CMGL	List SMS messages from preferred store	Section 11.5, page 232
AT+CMGR	Read SMS messages	Section 11.6, page 234
AT+CMGS	Send SMS	Section 11.7, page 236
AT+CMGW	Write Short Messages to Memory	Section 11.8, page 237
AT+CMSS	Send short messages from storage	Section 11.9, page 239
AT+CMUX	Multiplex mode	Section 4.8, page 80
AT+CNMA	New Message Acknowledgement to UE/TE	Section 11.10, page 240
AT+CNMI	SMS Event Reporting Configuration	Section 11.11, page 242
AT+CNUM	Read own numbers	Section 14.1, page 289
AT+COPN	Read operator names	Section 8.1, page 104
AT+COPS	Operator Selection	Section 8.2, page 105
AT+CPAS	Activity Status	Section 3.3, page 69
AT+CPIN	PIN Authentication	Section 6.1, page 94
AT+CPLS	Select Preferred Operator List	Section 8.5, page 112
AT+CPMS	Preferred SMS message storage	Section 11.12, page 245
AT+CPOL	Preferred Operator List	Section 8.4, page 110
AT+CPSMS	Enable or Disable Power Saving Mode	Section 8.8, page 116
AT+CPWD	Change Password	Section 6.3, page 99
AT+CRES	Restore SMS Settings	Section 11.20, page 256
AT+CRSM	Restricted SIM Access	Section 12.2, page 259
AT+CSAS	Save SMS Settings	Section 11.19, page 255
AT+CSCA	SMS Service Center Address	Section 11.13, page 247
AT+CSCS	Character Set	Section 2.10, page 41
AT+CSDH	Show SMS text mode parameters	Section 11.14, page 248
AT+CSIM	Generic (U)SIM Access	Section 12.3, page 261
AT+CSMP	Set SMS Text Mode Parameters	Section 11.15, page 249
AT+CSMS	Select Message Service	Section 11.16, page 251
AT+CTZR	Time Zone Reporting	Section 8.6, page 113
AT+CTZU	Automatic Time Zone Update	Section 8.7, page 115
AT+GSN	Request International Mobile Equipment Identity (IMEI)	Section 5.6, page 89
AT+ICF	Character Framing	Section 4.6, page 76
AT+IPR	Bit Rate	Section 4.7, page 78
AT+STKCC	SAT Call Control Notification	Section 13.5, page 283
AT+STKCNF	SAT Proactive Session Status	Section 13.6, page 285
AT+STKENV	SAT Envelope Command	Section 13.4, page 281

17.6 Alphabetical List of AT Commands

AT Command	Description	Section and Page
AT+STKPRO	SAT Proactive Command URCs	Section 13.2, page 269
AT+STKTR	SAT Terminal Response Commands	Section 13.3, page 276
AT+WS46	Select wireless network	Section 3.4, page 70
AT\Q	Flow Control	Section 4.1, page 71
AT^SBNR	Binary Read	Section 15.5, page 294
AT^SBNW	Binary Write	Section 15.6, page 296
AT^SBV	Battery/Supply Voltage	Section 16.2, page 304
AT^SCFG	Extended Configuration Settings	Section 2.11, page 42
AT^SCTM	Critical Operating Temperature Monitoring	Section 16.3, page 305
AT^SFDL	Firmware Download	Section 15.7, page 298
AT^SFDOA	Firmware Download	Section 15.8, page 299
AT^SICA	Internet Connection Activate or Deactivate	Section 9.1, page 137
AT^SICS	Internet Connection Settings	Section 9.2, page 138
AT^SIND	Extended Indicator Control	Section 3.2, page 59
AT^SINFO	Information Output	Section 5.8, page 92
AT^SIPS	Internet Profile Storage	Section 9.3, page 140
AT^SISC	Internet Service Close	Section 9.7, page 154
AT^SISE	Internet Service Error Report	Section 9.13, page 167
AT^SISH	Disconnect Remote Client	Section 9.11, page 163
AT^SISI	Internet Service Information	Section 9.5, page 149
AT^SISO	Internet Service Open	Section 9.6, page 151
AT^SISR	Internet Service Read Data	Section 9.8, page 155
AT^SISS	Internet Service Setup Profile	Section 9.4, page 141
AT^SIST	Enter Transparent Mode	Section 9.10, page 161
AT^SISW	Internet Service Write Data	Section 9.9, page 158
AT^SISX	Internet Service Execution	Section 9.12, page 164
AT^SLED	LED Feature	Section 16.4, page 307
AT^SMGL	List Short Messages from preferred store without setting status to REC READ	Section 11.17, page 253
AT^SMGR	Read short message without setting status to REC READ	Section 11.18, page 254
AT^SMONI	Monitoring Serving Cell	Section 8.9, page 118
AT^SMONP	Monitoring Neighbour Cells	Section 8.10, page 121
AT^SMSO	Switch Off EMS31-X	Section 2.8, page 35
AT^SNLWM2M	ODIS/DHIR/Portfolio Management	Section 8.14, page 131
AT^SNMON	Network Monitoring	Section 8.11, page 124
AT^SPOW	Set UART Mode and SLEEP Mode on UART	Section 2.12, page 55
AT^SSTA	Remote-SAT Interface Activation	Section 13.1, page 267
ATD*99#	Request Packet Domain Service	Section 10.18, page 224
ATE	AT Command Echo	Section 4.5, page 75
ATH	Disconnect existing connection	Section 7.1, page 101
ATI	Display product identification information	Section 5.1, page 82

AT Command	Description	Section and Page
ATO	Switch from command mode to data mode / PPP online mode	Section 7.2 , page 102
ATQ	Result Code Presentation Mode	Section 2.4 , page 30
ATS3	Command Line Termination	Section 15.2 , page 291
ATS4	Response Formatting	Section 15.3 , page 292
ATS5	Command Line Editing	Section 15.4 , page 293
ATV	Result code format mode	Section 2.5 , page 31
ATZ	Restore AT Command Settings from User Defined Profile	Section 2.6 , page 32

About Gemalto

Since 1996, Gemalto has been pioneering groundbreaking M2M and IoT products that keep our customers on the leading edge of innovation.

We work closely with global mobile network operators to ensure that Cinterion[®] modules evolve in sync with wireless networks, providing a seamless migration path to protect your IoT technology investment.

Cinterion products integrate seamlessly with Gemalto identity modules, security solutions and licensing and monetization solutions, to streamline development timelines and provide cost efficiencies that improve the bottom line.

As an experienced software provider, we help customers manage connectivity, security and quality of service for the long lifecycle of IoT solutions.

For more information please visit

www.gemalto.com/m2m, www.facebook.com/gemalto, or [Follow@gemaltoIoT](https://twitter.com/gemaltoIoT) on Twitter.

Gemalto M2M GmbH
Werinherstrasse 81
81541 Munich
Germany

➔ GEMALTO.COM/M2M

gemalto
security to be free