




Dev Kit Quick Start Manual 4.4" JDI (13190-01)

November, 2018

FLP Dev Kit Quick Start

Kit Components:

1. Power Switch (SW1)
2. LED Switch (SW2)
3. "Next" Switch (SW3)
4. Memory LCD
5. Micro USB Connector (J4)
6. Protective film

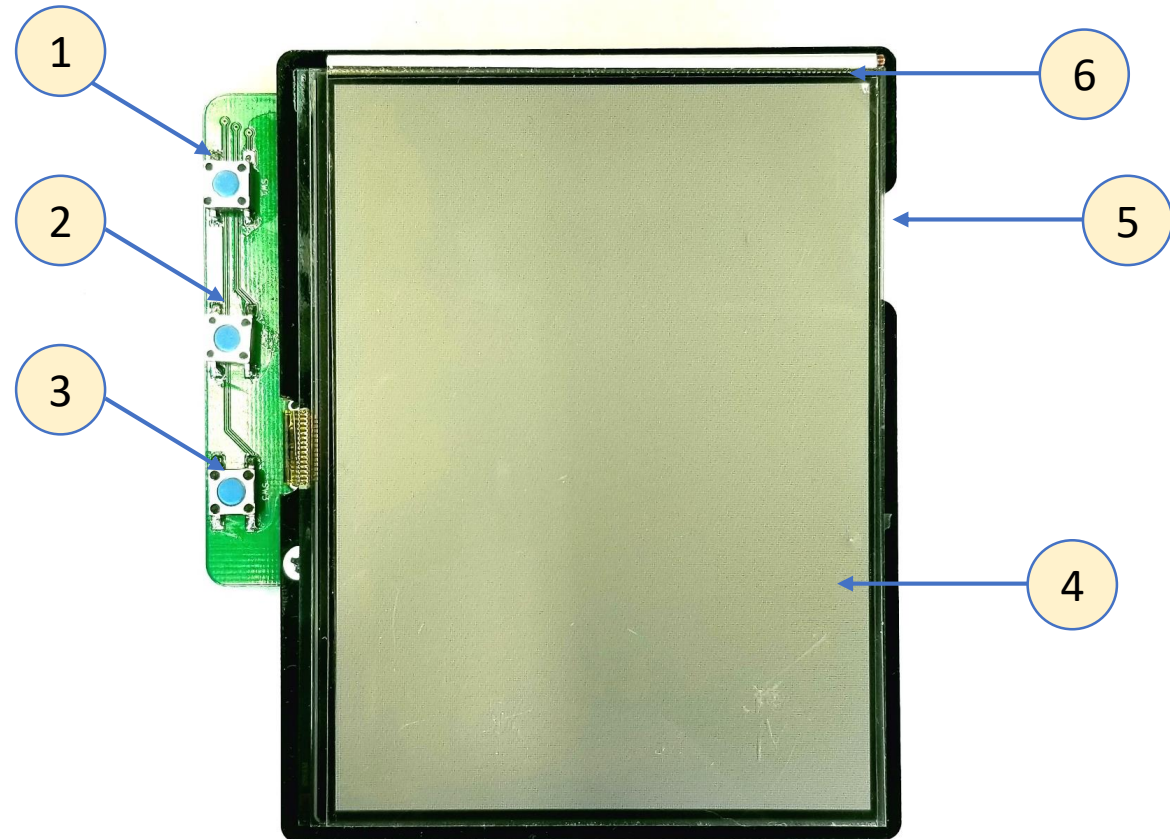

Note: The optical surface underneath the protective film is very delicate and will be permanently marked by fingerprints. Use care when removing it with the blue pull tab.

FLP Dev Kit Quick Start

Quick Start Procedure:

- Connect the supplied USB cable into the board's Micro USB Connector (5).
- Connect the other end of USB cable to a USB power supply (Computer, USB hub or smartphone charger).
- The display will start up and go through the pre-recorded image sequence.
- Toggle the LED on and off by pressing the LED button (2).
- Images can be skipped manually using the "Next" button (3). Holding the button down for 3seconds will resume the automatic sequence.
- For more information visit our website:

<http://www.flexlighting.com/front-light>

