



WHAT'S IN THE BOX



XPort EDGE Gateway Evaluation Board



5V Power Supply with Regional Adapters



RJ45 to RJ45 Cable



DB9F to DB9F Null Modem Cable

WHAT'S NEEDED



Lantronix Provisioning Manager Software




Ethernet Switch




Computer

1. HARDWARE OVERVIEW & SETUP

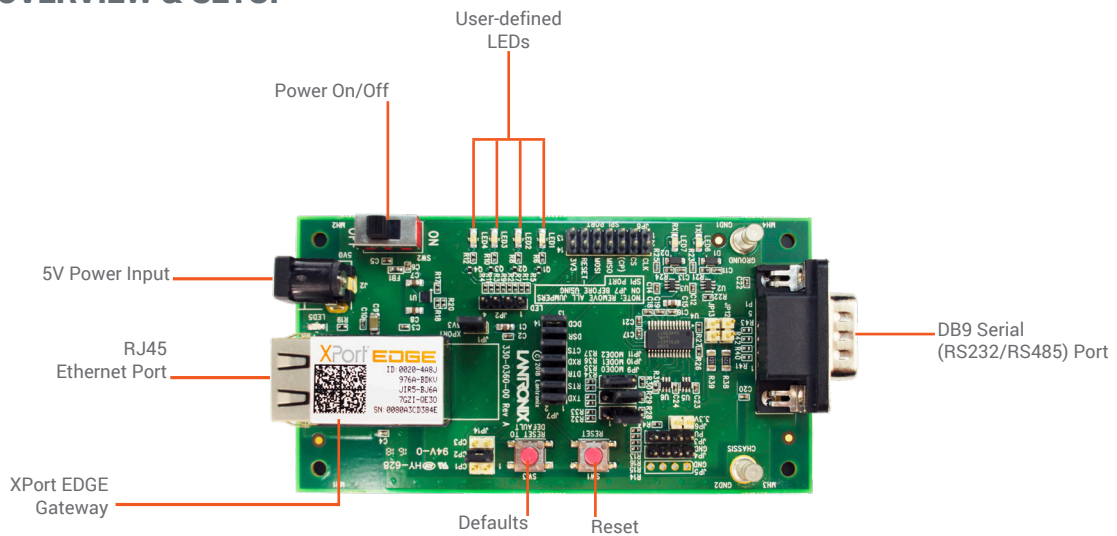

1a. Supply power to the evaluation board by plugging in the included power adapter to the 5V Power Input (shown below).

1b. Insert Ethernet Cable into the XPort EDGE Gateway.

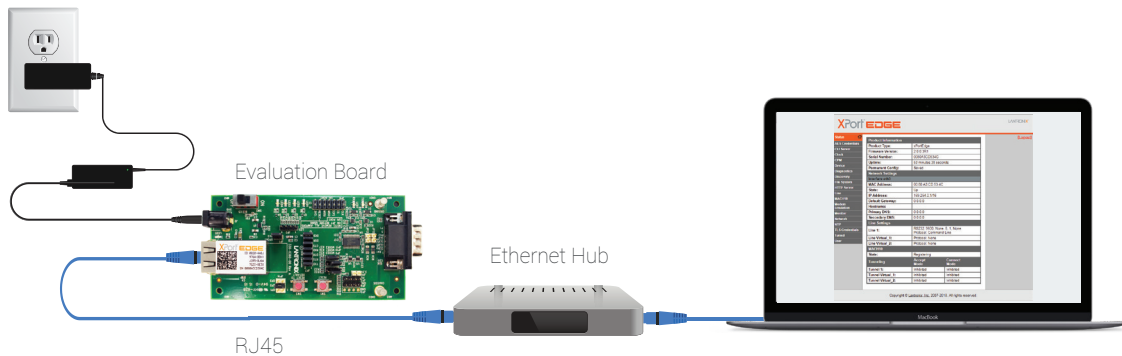


1c. Move the ON/OFF power switch to ON. The **RED** and **GREEN** LED lights on the gateway should illuminate and remain static.

1d. Proceed to the next page for instructions on how to configure the XPort EDGE using Lantronix Provisioning Manager Software.



2. DOWNLOAD & RUN LANTRONIX PROVISIONING MANAGER

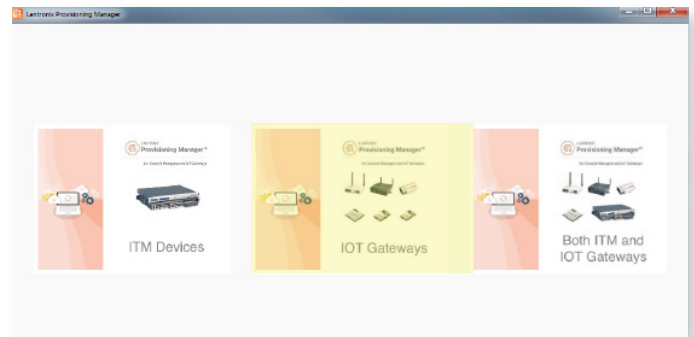

2a. Download the latest Windows, Linux or MacOS versions of the Lantronix Provisioning Manager Software tool from our website and install it on your computer.

<https://www.lantronix.com/products/lantronix-provisioning-manager/>

2b. Run Lantronix Provisioning Manager. Once the software opens, select the Lantronix product you want to provision. In the case of XPort EDGE, select **IoT Gateways**.

3. INITIAL CONFIGURATION

Name	Status	Firmware version	Serial Number	IP	MAC
xPortEdge	●	2.0.0.3R1	0080A3CD534C	169.254.0.1	00:80:a3:cd:53:4c

Sign in
http://169.254.0.1
Your connection to this site is not private

Username:

Password:

3a. In Lantronix Provisioning Manager’s device directory, locate your XPort EDGE and note the IP Address. Enter the IP Address into a web browser.

3b. You will be prompted to enter login credentials. Type the following default credentials to sign into the Web UI.

Username: admin

Password: PASSWORD



KEEP YOUR DEVICE SECURE. Please change the default administrator password before proceeding further. From the XPort EDGE dashboard, select **“User.”** Then, click **“Admin”** and enter a new password up to 32 characters. Click submit. You can also add users and designate their roles by typing in each name and clicking **“Submit.”**

4. COMPLETE THE CONFIGURATION

Continue with the rest of the unit configuration using the Web Management Interface (UI). Context-sensitive help is available in-line within the Web UI. For detailed instructions, please refer to the XPort EDGE User Guide:

docs.lantronix.com/products/xport-edge/ug/

TECHNICAL SUPPORT

For technical support queries, visit <http://www.lantronix.com/support> or call (800) 422-7044 Monday – Friday from 6:00 a.m. – 5:00 p.m., Pacific Time, excluding holidays.

LATEST FIRMWARE

For the latest firmware downloads, visit: <http://www.lantronix.com/support/downloads>